Palm® Pre™ Phone User Guide

www.sprint.com

© 2009 Sprint. SPRINT and the logo are trademarks of Sprint.
Other marks are the property of their respective owners.

Printed in the U.S.A.

v. 2.0, webOS 1.2

Downloaded from www.Manualslib.com manuals search engine

Intellectual Property Notices

© 2009 Palm, Inc. All rights reserved. Palm, Pre, Synergy, and the Palm and Pre logos are among the trademarks or registered trademarks owned by or licensed to Palm, Inc. Microsoft and Outlook are trademarks of the Microsoft group of companies. Exchange ActiveSync Enabled. Facebook® is a registered trademark of Facebook, Inc. Google and Google Maps are trademarks of Google, Inc. Amazon, Amazon MP3, and the Amazon MP3 logo are trademarks of Amazon.com, Inc. or its affiliates. Any reference to Palm Products' capabilities provided by the Documents To Go Software contained in Palm Product packaging, or in marketing, promotional, or other mass-distribution materials for the Palm Products (e.g., sales slicks, website, FAQs), distributed during the term of this Agreement shall be noted with "provided by Documents To Go®, a product of DataViz, Inc.", or a similar mutually agreed statement, and shall also include DataViz contact information. All other brand and product names are or may be trademarks of, and are used to identify products or services of, their respective owners.

Disclaimer and Limitation of Liability

Palm, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this guide. Palm, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. Palm, Inc. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data on other media to protect against data loss.

Patent pending. This product also is licensed under United States patent 6,058,304.

Use of this device requires providing a valid email address, mobile phone number, and related information for account setup and activation. A data plan is also required. Unlimited usage data plan strongly recommended or additional data charges may apply.

Open Source License Information

You can view the Open Source License terms on your phone. Press the Center button and then tap the Launcher icon. Swipe left until the PDF View icon appears. Tap PDF View, then tap Open Source Information.pdf.

You can also view the file on your computer. Connect your phone to your computer with the USB cable. On your phone, tap USB Drive. On your computer, open Computer (Vista), My Computer (XP), or Finder (Mac) and double-click the Palm Pre drive. Then double-click the file Open Source Information.pdf.

Recycling and Disposal

This symbol indicates that Palm products should be recycled and not be disposed of in unsorted municipal waste. Palm products should be sent to a facility that properly recycles electrical and electronic equipment. For information on environmental programs visit *palm.com/environment*.

As part of Palm's corporate commitment to be a good steward of the environment, we strive to use environmentally friendly materials, reduce waste, and develop the highest standards in electronics recycling. Our recycling program keeps Palm handhelds, phones, and other products out of landfills through evaluation and disposition for reuse and recycling.

Palm customers may participate in the recycling program free of charge. Visit *palm.com/recycle* for additional details and information about how you can help reduce electronic waste.

Downloaded from www.Manualslib.com manuals search engine

Table of Contents

Welcome *9*

Your Palm® Pre™ Phone 9

About This User Guide 10

Where Can I Learn More? 11

Section 1: Your Setup *15*

1A. Set Up Service *17*

Set Up Your Phone 18

Turn the Phone On/Off 20

Make Your First Call 24

Set Up Your Voicemail 25

Create Sprint Account Passwords 26

Section 2: Your Palm® Pre™ Phone *29*

2A. Basics *31*

What's in the Box? 32

Get to Know Your Phone 33

Charge the Battery 39

2B. Move Around on Your Phone *43*

Use Gestures: Tap, Swipe, Drag, Flick, Pinch 44

Open Applications 56

Work With Applications 59

Enter Information 67

Use the Menus 73

Search to Find Info and Make Calls 76

View and Respond to Notifications 80

Downloaded from www.Manualslib.com manuals search engine

Update the Software on Your Phone 82
Use App Catalog to Shop for New Applications 86
Copy Files Between Your Phone and Your Computer 92

2C. Transferring Data 95

Data Transfer Overview 96
Transferring Data 97

2D. Phone 105

Make Calls 106
Receive Calls 110
Use Voicemail 112
What Can I Do During a Call? 112
What's My Number? 118
View Your Call History 118
Save a Phone Number to Contacts 120
What Are All Those Icons? 120
Use a Phone Headset 122
Customize Phone Settings 124

2E. Your Media and Entertainment Center 129

Camera 130
Photos 131
Videos 137
YouTube 140
Music 143
Amazon MP3 147

2F. Your Personal Information Organizer 153

Contacts 154
Calendar 172
Tasks 184

Downloaded from www.Manualslib.com manuals search engine

Memos 190
Clock 193
Calculator 195
2G. Your Documents and Other Productivity Files 197
Doc View 198
PDF View 204
2H. Preferences 209
Backup 210
Date & Time 215
Device Info 216
Regional Settings 220
Screen & Lock 221
Sounds & Ringtones 224
Section 3: Web and Data Services and Other Wireless Connections 227
3A. Using Web and Data Services 229
Get Started With Data Services 230
Access Data Services 230
Use Sprint TV® 231
NASCAR Sprint Cup Mobile℠ 232
NFL Mobile Live 233
3B. Your Email and Other Messages 235
Email 236
Messaging 255
3C. Your Connections to the Web and Wireless Devices 269
Wi-Fi 270
Location Services 275
Web 277

Downloaded from www.Manualslib.com manuals search engine

Google Maps 287
Sprint Navigation 288
Bluetooth® Wireless Technology 291

Section 4: Your Resources. 297

4A. Troubleshooting 299

For Current Palm® Smartphone Users 300
Battery 301
Screen and Performance 310
Phone 312
Hands-free Devices 315
Synchronization 316
Email 319
Messaging 321
Wi-Fi 323
Web 323
Calendar and Contacts 326
Camera 328
Amazon MP3 328
Transferring Information From Your Computer 329
Backing Up and Restoring Data 330
Updates 331
Third-party Applications 331
Making Room on Your Phone 333

4B. Glossary 335

Section 5: Your Safety and Specifications. 341

5A. Regulatory and Safety Information 343

FCC Statements 344

Downloaded from www.Manualslib.com manuals search engine

Antenna Care/Unauthorized Modifications 345
Industry Canada 345
Radio Frequency (RF) Safety Exposure 346
Hearing Aid Compatibility (HAC) 348
Protecting Your Battery 349
Power Specifications 351
Recycling and Disposal 352
User Safety 353
Product Handling & Safety 357
Driving Safety 358
ESD Safety 362
5B. Specifications 365
Specifications 366
Index 369

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Welcome

Your Palm® Pre™ Phone

Your Palm® Pre™ phone puts Palm's new multitasking, gesture-based operating system, the Palm® webOS™ platform, inside a small, beautiful device with a keyboard that you can slide out whenever you need it. Here are a few highlights of your new phone.

Gestures: On your Pre phone, you make calls, move around, and manage your applications and info by making simple gestures either on the touchscreen or in the gesture area directly beneath the screen. For more information, see "Use Gestures: Tap, Swipe, Drag, Flick, Pinch" on page 44, and go to *palm.com/support* to see animations that demonstrate these gestures. The *Get Started Guide* in your Pre phone's box has a detachable gesture guide to put in a pocket and consult when you need to—you won't need it very long.

Multitasking: You can have many applications open at once and easily move among them. Go to the ***Launcher*** to open apps. See the lineup of your open apps in ***Card view***. Tap an app to bring it into the foreground and work with it. For more information, see "Open Applications" on page 56.

The Palm® Synergy™ feature: The Palm® Synergy™ feature on your Pre phone displays information from several sources in a single view, so you can access your info quickly, without having to remember where you stored it.

For example, suppose you have a Google account for personal email, contacts, and calendar events, and an Exchange account for your corporate email, contacts, and events. The Email, Contacts, and Calendar applications on your Pre phone all provide a kind of view in which you can see information from both of those accounts in one place—but even though the information is brought into one view, the sources of that information are kept separate. For more information, read about linked contacts, layered calendars, and the single inbox for your email in "Contacts" on page 154, "Calendar" on page 172, and "Email" on page 236.

Downloaded from www.Manualslib.com manuals search engine

Thanks also to the Synergy feature, in the Messaging application, all your conversations with the same person are grouped together in one chat-style view. If you start an IM chat with Ed, for example, you can continue the same conversation when Ed signs out of IM by sending him a text message—and you can see it all in the same view. For more information, see "Messaging" on page 255.

Universal search: Need to call Ed? Just slide out the keyboard and type ***ed***. If he's listed in your Contacts, you can get his numbers from the search results. Tap a number and you've made the call. Search works just as fast when you need to search the Web. For more information, see "Search to Find Info and Make Calls" on page 76.

Sync: Your Pre phone gives you synchronization without a cable. You can sync with online services that Palm has partnered with so that you can store and sync your info in online accounts. You can access your data even when you are not able to make a connection to the Web, because a copy of your data is stored on the device.

Your Palm profile: When you set up your phone, you create a Palm profile. Your profile gives you access to services like automatic updates and automatic, frequent backups of any of your info that is stored only on your phone and isn't synchronized with an online account.

About This User Guide

We know you're eager to start using your Palm® Pre™ phone right away, and the sections of this guide are designed to help you do just that.

- Section 1: Your Setup guides you through the process of setting up your new phone and your Sprint service.
- Section 2: *Your Palm® PreTM Phone* shows you the basics of your phone and service with quick, easy-to-follow instructions. This section also describes the call features on your phone and shows you how to use Sprint service features such as voicemail and call waiting. This section also shows you how to use the camera and how to transfer and listen to music files on your phone. Finally, it guides you through the process of using the full-featured organizer that gives you instant access to your contacts, calendar, tasks, memos, and more.

Downloaded from www.Manualslib.com manuals search engine

- Section 3: Web and Data Services and Other Wireless Connections shows you how to use Web browsing, messaging, and email. It also describes other types of wireless connections, such as Wi-Fi and Bluetooth® wireless technology.
- Section 4: Your Resources answers frequently asked questions and shows you what to do if something goes wrong.
- Section 5: Your Safety and Specifications outlines recommended safety and maintenance guidelines and lists the technical specifications for your Pre phone.

WARNING	*Please refer to "Regulatory and Safety Information" on page 343 for information that helps you safely use your phone. Failure to read and follow the important safety information in this guide may result in property damage, serious bodily injury, or death.*

Where Can I Learn More?

While Using Your Phone

- ***On-device Help:*** Read short how-tos and watch animations on your new phone.

  To view all Help: Open ***Help*** .

  To view Help topics for a single application: Open the application, open the application menu, and tap ***Help***.
- ***Online Support from Sprint:*** Visit *sprint.com/palmpresupport* to access the *User Guide*, how-to videos, tutorials, and helpful support information.
- ***Online Support from*** Palm***:*** Visit *palm.com/support* to edit your Palm profile, watch how-to animations, access the Data Transfer Assistant, and read comprehensive information about your phone.

If You Need More Information

- ***Sprint Customer Service:*** For questions about your account or features available on the network, contact Sprint or visit *sprint.com* for the latest information and help.

Downloaded from www.Manualslib.com manuals search engine

Manage Your Account

Online: *sprint.com*

- Access your account information.
- Check minute usage (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about data services and other great products like games, ringtones, and more.

From your Palm® Pre™ phone

Open ***Phone*** and do any of the following:

- ***Check minute usage and account balance:*** Enter ****4*** and tap .
- ***Make a payment:*** Enter ****3*** and tap .
- ***Access a summary of your Sprint service plan or get answers to other questions:*** Enter ****2*** and tap .

From any other phone

- ***Sprint Customer Service: 1-888-211-4727.***
- ***Business Customer Service: 1-800-927-2199.***

Sprint 411

You have access to a variety of services and information through Sprint 411, including residential, business, and government listings; assistance with local or long-distance calls; movie listings; and hotel, restaurant, shopping, and major local event information. There is a per-call charge and you are billed for airtime.

- Open ***Phone***. Enter ***411*** and tap .

Downloaded from www.Manualslib.com manuals search engine

Sprint Operator Services

Sprint Operator Services provides assistance with placing collect calls or with placing calls billed to a local telephone calling card or third party.

- Open ***Phone***. Enter ***0*** and tap .

To learn more and to see the latest in products and services, visit Sprint online at *sprint.com*.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Section 1

Your Setup

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Set Up Service

In This Section

- Set Up Your Phone (page 18)
- Turn the Phone On/Off (page 20)
- Make Your First Call (page 24)
- Set Up Your Voicemail (page 25)
- Create Sprint Account Passwords (page 26)

Downloaded from www.Manualslib.com manuals search engine

Set Up Your Phone

Activate Your Phone

- ***If you purchased your phone at a Sprint Store:*** It is probably activated and ready to use.
- ***If you received your phone in the mail, and it is a new Sprint account or a new line of service:*** Your phone is designed to activate once you have completed setup (see "Complete Setup" on page 18).
- ***If you received your phone in the mail and you are activating a new phone for an existing number on your account:*** You need to go online to activate the number on your new phone. From your computer's Web browser, go to *sprint.com/activate* and complete the onscreen instructions to activate your phone.

If you have problems with activation, contact Sprint Customer Service at 1-888-211-4727 for assistance.

Complete Setup

1. Press and hold the ***power*** button on the upper-right corner of your phone until you see a logo on the screen (approximately five seconds). Please be patient while your phone starts up.
2. Slide out the keyboard (see "Slide Out the Keyboard" on page 33).
3. Follow the onscreen instructions to complete setup. (To create a Palm profile, enter a working email address and a password (see "What Is a Palm Profile?" on page 19). Be sure to make a note of your email address and password and keep the note in a safe place.)

Important	*If you see a notification that an update is available, tap* **Install Now** *to install it. Palm periodically sends you over-the-air updates of the applications and features of your phone.*

4. Your phone is ready to use. To learn how to make your first call, see "Make Your First Call" on page 24.

Downloaded from www.Manualslib.com manuals search engine

Verify your profile

After you finish setup, look for an email on your computer at the address you used for your Palm profile. Click the link in the email to do the following:

- Verify your Palm profile.
- Select a security question and answer.
- Follow a link to learn about getting data like contacts and appointments onto your phone from your desktop organizer software (see “Transferring Data” on page 97).

Tip	*If you don’t see the confirmation email in your Inbox, check your spam mail folder in your desktop email program.*

What Is a Palm Profile?

Your Palm profile gives you the following benefits:

- Automatic system and software updates are sent to your phone.
- A Palm profile account is automatically created for you on your phone. In this account you can store Contacts and Calendar info that you don't store in online accounts like Google or Exchange.

Note	*You cannot access Palm profile data on the profile website—you can access the data on your phone only.*

- Info stored in your Palm profile account, as well as in other sources of info on your phone (like Memos and Tasks), is automatically backed up to servers administered by Palm.
- Should your phone be lost or stolen, you can do a remote erase of the info on the phone.

Downloaded from www.Manualslib.com manuals search engine

Note	*If you want to erase data on your phone while you still are in possession of the phone—for example, before you give it to someone else—don't do a remote erase; instead, perform a partial or full erase from the phone itself (see “Erase Data and Reset Your Phone” on page 217).*

For detailed information about your Palm profile, see “Backup” on page 210.

Turn the Phone On/Off

Your Pre phone's screen can be turned on and off separately from its wireless services (which are the Phone , Wi-Fi , and Bluetooth® applications). This means you can wake up the screen to use just the organizer features of your device (Calendar, Contacts, Tasks, Memos, and so on) without turning on the phone and other wireless features. Also, when the screen is turned off, the phone can be on and ready for you to receive phone calls or messages.

Turn the Screen On/Off

Turn the screen on and leave the wireless services turned off when you want to use only the organizer features, for example, when you’re on a plane and you must turn off all wireless services, but you want to look at your calendar.

Downloaded from www.Manualslib.com manuals search engine

To turn the screen on, do one of the following:

- Press ***power***. Drag up to unlock the screen.

* Power

- Slide out the keyboard.
- Press ***Center***. This wakes up the screen only when the keyboard is slid out.

To turn the screen off: Press ***power***.

To save power, the screen dims automatically after a period of inactivity, then turns off. If you're on a call when the screen dims and turns off, the call is not affected. To brighten the screen if it has dimmed, tap the screen.

Tip	*You can set how long the screen stays on during a period of inactivity (see "Set the Interval for Turning the Screen Off Automatically" on page 221).*

Downloaded from www.Manualslib.com manuals search engine

Turn Wireless Services Off (Airplane Mode)

Airplane mode turns off your phone as well as the Bluetooth® wireless technology and Wi-Fi features. Use airplane mode when you are on a plane or anywhere else you need to turn off all wireless services. You can still use apps like Calendar, Contacts, Photos, Music, Doc View, and PDF View.

Do one of the following:

- Tap the upper-right corner of any screen to open the connection menu. Tap ***Turn on Airplane Mode.***
- Press and hold ***power*** and tap ***Airplane Mode***.

When your phone is in airplane mode, the ***airplane mode*** icon appears in the upper-right corner of every screen, and ***Airplane Mode*** appears in the upper-left corner of the screen in the ***Launcher***, ***Card view***, and ***Phone***. Your phone is not connected to any mobile network.

Tip	*When your phone is in airplane mode, you can turn the other wireless features on individually. For Wi-Fi, see "Turn Wi-Fi On and Off" on page 271. For Bluetooth, see "Turn the Bluetooth Feature On/Off" on page 291. To turn your phone back on, you must turn airplane mode off.*

Downloaded from www.Manualslib.com manuals search engine

Turn Wireless Services On

When you turn on your phone, it connects to a mobile network so that you can make and receive phone calls and use other wireless services (if supported by the local network).

- Tap the upper-right corner of any screen to open the connection menu. Tap ***Turn off Airplane Mode***.

When your phone locates a signal, ***Sprint*** appears in the upper-left of the screen in the ***Launcher***, ***Card view***, and ***Phone***, and the ***signal-strength*** icon appears at the top of the screen.

When you are inside a coverage area, the bars on the ***signal-strength*** icon are filled in. If you're outside a coverage area, the bars in the signal-strength icon appear dimmed with an X.

Downloaded from www.Manualslib.com manuals search engine

Turn Everything (the Screen and Wireless Services) On/Off

- ***To turn both the screen and wireless services off:*** Press and hold ***power*** and tap *Turn Off*.

- ***To turn both the screen and wireless services back on:*** Press and hold ***power***.

Make Your First Call

1. Press ***power***. (This wakes up the screen.)
2. If necessary, drag up to unlock the screen.
3. Tap .
4. Tap numbers on the dial pad.

Tip	*Tap the onscreen backspace icon to delete numbers one at a time. Tap and hold the icon to delete all the numbers.*

Downloaded from www.Manualslib.com manuals search engine

5. Tap to dial.
6. Tap to end the call.

For more ways to make calls, see “Make Calls” on page 106.

Adjust Call Volume

- When you’re on a call, press the ***Volume*** button on the side of your phone to adjust the call volume.

* Volume

Set Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off.

To set up your voicemail:

1. Press ***Center*** to display ***Card view***.
2. Press and hold ***1*** on the keyboard to dial the Sprint voicemail system. (When the search results screen appears, continue holding ***1*** until the ***Phone*** application appears.)

Downloaded from www.Manualslib.com manuals search engine

3. Follow the voice prompts to do the following:
   - Create your password.
   - Record your name announcement.
   - Record your greeting.

Note	***Voicemail Passcode:*** *Sprint strongly recommends that you create a passcode when setting up your voicemail to protect against unauthorized access. If you do not have passcode protection on your voicemail, anyone with access to your phone can listen to your messages.*

For more information about using your voicemail, see "Use Voicemail" on page 112.

Create Sprint Account Passwords

As a Sprint customer, you enjoy unlimited access to your personal account information, your voicemail account, and your data services account. To ensure that no one else has access to your information, you need to create passwords to protect your privacy.

Account Password

If you are the account owner, you create an account username and password when you sign on to *sprint.com*. (To get started, click ***Need to register for access?*** in the sign-in area of the website.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a subaccount password at *sprint.com*.

Voicemail Password

You create your voicemail password when you set up your voicemail. See "Set Up Your Voicemail" on page 25.

Downloaded from www.Manualslib.com manuals search engine

Data Services Password

With your phone, you can elect to set up an optional data services password to control access and authorize Premium Service purchases.

To learn more or to change your passwords, sign on to *sprint.com* or call Sprint Customer Service at 1-888-211-4727.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Section 2

Your Palm® Pre™ Phone

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Section 2A

Basics

Basics

In This Section

- What's in the Box? (page 32)
- Get to Know Your Phone (page 33)
- Charge the Battery (page 39)

Downloaded from www.Manualslib.com manuals search engine

What's in the Box?

All of the following items are in the phone box:

Hardware

- Palm® Pre™ phone and pouch.
- AC charger.
- 3.5mm stereo headset.
- USB cable.

Downloaded from www.Manualslib.com manuals search engine

Print Material

- Get Started Guide.
- Features Guide.
- Palm warranty.
- End User License Agreement.

Get to Know Your Phone

Slide Out the Keyboard

- Hold the phone as shown below and gently push up.

Downloaded from www.Manualslib.com manuals search engine

Front View

1 *Earpiece*

2 *Touchscreen:* Tap and make other gestures directly on the screen. See “Touchscreen” on page 36.

3 *Volume*

Downloaded from www.Manualslib.com manuals search engine

4 ***Gesture area:*** Make the back gesture and begin other gestures here. See “Use Gestures: Tap, Swipe, Drag, Flick, Pinch” on page 44.
5 ***Microphone***
6 ***Center:*** Press to display ***Card view*** (see “Display All Open Applications (Card View)” on page 60).
7 ***Keyboard:*** See “Keyboard” on page 35.
8 ***Charger/microUSB connector***

Tip	*Be careful not to scratch, crush, or apply too much pressure on the touchscreen. Do not store your phone in a place where other items might damage it. When you pack your phone away, use the pouch to protect it.*

Keyboard

1 ***Option:*** Press to enter numbers, punctuation, and symbols that appear above the letters on the keys. See “Enter Alternate Keyboard Characters” on page 68.
2 ***Shift:*** See “Enter Uppercase Letters” on page 68.
3 ***Space***

Downloaded from www.Manualslib.com manuals search engine

4 *Backspace*

5 ***Enter:*** Press to enter a line return (for example, in a memo or in an email message you are composing) or to accept information you entered in a field. See “Enter Information in a Field” on page 71.

6 ***Sym:*** Press to enter symbols and accented characters that don't appear on the keys. See “Enter Characters From the Symbols Table” on page 68.

Touchscreen

1 ***Application name:*** Displays the name of the currently open application. Tap the name to open the application menu.

2 ***Launcher:*** See “Open an Application in the Launcher” on page 57.

3 ***Scroll arrow:*** Swipe up or down to see icons that are on the page but hidden.

4 ***Quick Launch:*** See “Open an Application in Quick Launch” on page 56.

5 ***Connection icons:*** Show the status of wireless service connections and battery strength (see “What Are All Those Icons?” on page 120). Tap the icons to open the connection menu.

Downloaded from www.Manualslib.com manuals search engine

6 *Page indicators:* Show how many Launcher pages are to the right or the left of the currently displayed page. Swipe left or right on the screen to see other pages.

7 *Notification icons:* Show missed calls, new voicemail and email messages, and more. Tap the bottom of the screen to view notification details (see "View All Your Notifications" on page 81).

Back View

1 *Camera flash*
2 *Camera lens*
3 *Speaker*

Downloaded from www.Manualslib.com manuals search engine

Top View

1 ***Power:*** Press to wake up or turn off the screen. Press and hold to turn your device and all wireless services completely off and to turn your device back on after having turned it completely off.

2 ***Ringer switch:*** Slide to turn the ringer and notification sounds on or off. (Red means off.) The ringer switch does not affect music or video playback sounds.

3 *3.5mm headset jack*

Bottom View

* *Back cover release*

Downloaded from www.Manualslib.com manuals search engine

Charge the Battery

WARNING	*Use only batteries and chargers that are approved by Sprint and Palm with your phone. Failure to use a battery or charger approved by Sprint and Palm may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage. Use of unapproved third-party power supply accessories may damage the device and void the Limited Warranty for the product.*

Although the battery may come with a sufficient charge to complete the setup process, we recommend that after setup you charge your phone until the ***battery*** icon in the upper-right corner of the screen is full to ensure that the battery is fully charged.

See “Maximizing Battery Life” on page 41 for tips on making your battery’s power last longer.

1. On the right side of your phone, open the ***charger/microUSB connector***. (This is easier to do if you slide the keyboard out first.)

Downloaded from www.Manualslib.com manuals search engine

2. Connect the small end of the ***USB cable*** to the ***charger/microUSB connector***.

3. Connect the other end of the ***USB cable*** to the ***AC charger***.
4. Plug the ***AC charger*** into a working outlet.

Tip	*You can also charge your phone battery by connecting your phone to your computer using the USB cable. Charging this way takes much longer than using the AC charger. Do not, however, connect the Palm® Touchstone™ charging dock (sold separately) to your computer.*

When the battery is very low, the ***battery*** icon in the upper-right corner of the screen changes to red. When the battery is fully charged, the icon appears full and changes to green .

Downloaded from www.Manualslib.com manuals search engine

Maximizing Battery Life

Battery life depends on how you use your phone. You can maximize the life of your battery by following a few easy guidelines:

- Set your screen to turn off automatically after a shorter period of inactivity (see “Set the Interval for Turning the Screen Off Automatically” on page 221).
- Keep your battery away from direct sunlight and other sources of heat. Temperatures over 45 degrees Celsius (113 degrees Fahrenheit) can permanently reduce the capacity and life span of any lithium-ion battery.
- As with any mobile phone, if you are in an area with no wireless coverage, your phone continues to search for a signal, which consumes power. Turn off your phone if you are outside a coverage area (see “Turn Wireless Services Off (Airplane Mode)” on page 22).
- Turn off the Wi-Fi (see “Wi-Fi” on page 270), Bluetooth (see “Bluetooth® Wireless Technology” on page 291), and GPS (see “Location Services” on page 275) features when you are not using them.
- If you set up an email account in the Email application, set the interval to automatically download email to every two hours or less frequently (see “Enter Advanced Account Settings” on page 242).
- Lower the screen brightness (see “Change Screen Brightness” on page 221).
- Keep in mind that frequent use of instant messaging (IM) can reduce battery life.
- Charge your phone whenever you can. Charge it overnight. The battery has a much longer useful life when it is topped off frequently than when it is charged after it is fully drained.
- You can buy an extra battery as a spare for long plane trips or periods of heavy use. To purchase batteries that are compatible with your phone, go to *palm.com/us/products/phones/pre/index.html*.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Section 2B

Move Around on Your Phone

In This Section

- Use Gestures: Tap, Swipe, Drag, Flick, Pinch (page 44)
- Open Applications (page 56)
- Work With Applications (page 59)
- Enter Information (page 67)
- Use the Menus (page 73)
- Search to Find Info and Make Calls (page 76)
- View and Respond to Notifications (page 80)
- Update the Software on Your Phone (page 82)
- Use App Catalog to Shop for New Applications (page 86)
- Copy Files Between Your Phone and Your Computer (page 92)

Downloaded from www.Manualslib.com manuals search engine

Use Gestures: Tap, Swipe, Drag, Flick, Pinch

Gestures are an important, basic part of your phone. They're easy to learn, and they make working with the phone fast. You make most gestures with one finger. For a few, you need two. Do not use your fingernail. Make gestures with the tip of your finger. Don't bear down.

To see short animations illustrating how to do gestures, go to *palm.com/support* or tap Clips in Help on your phone.

You make gestures in two areas on your phone: the touchscreen and the gesture area. The gesture area is the black area extending from the bottom of the screen to halfway down the ***Center*** button.

* Gesture area

You also need to know about the ***Center*** button. Press the ***Center*** button to do the following:

- When you're working in an application, press ***Center*** to see ***Card view***. Card view shows you all the applications that are currently open, displayed as a series of cards (small active windows).
- When you're in ***Card view***, press ***Center*** to maximize the app in the center of the view.

Downloaded from www.Manualslib.com manuals search engine

Basic Gestures

Tap: Tap with the tip of the finger–not the fingernail. Tap fast and firmly, and then immediately lift your fingertip off the screen. Don't bear down on what you're tapping. Don't wait for a response; the response comes after you lift your finger. Don't linger on the gesture; a tap takes a split second to do.

Downloaded from www.Manualslib.com manuals search engine

Swipe: A swipe is most often a horizontal gesture, from right to left or left to right. Do it fast, do it lightly. In a swipe, your fingertip just skims the surface of the touchscreen or gesture area.

One kind of swipe you'll use a lot: ***Back***. Make the back gesture from right to left anywhere in the gesture area. Back takes you up one level from a detailed view to a more general view of the application you're working in. For example, when you finish reading an email message, make the back gesture to close the message and return to your list of messages. Or when you finish writing a memo, make the back gesture to close and save the memo and return to the display of all your memos. When you make the back gesture in an application and that's

Downloaded from www.Manualslib.com manuals search engine

the only screen of that app that's open, you minimize the app and go back to ***Card view***. In Web, the back gesture performs the same function as the back button on the browser, allowing you to move back through previously viewed pages.

The ***forward*** gesture, which is a swipe from left to right anywhere in the gesture area, allows you to move forward through previously viewed web pages. Forward is available in Web only.

Downloaded from www.Manualslib.com manuals search engine

Drag: Drag is the gesture you make for a slow scroll up and down a list. Slide your fingertip slowly along the surface—no need to bear down.

One kind of drag that you'll use a lot brings up ***Quick Launch*** when you're in an application. This drag gesture begins in the gesture area and ends on the touchscreen. As your fingertip slowly crosses the border between the gesture area and the touchscreen, it drags ***Quick Launch*** into view. To open one of the apps in ***Quick Launch***, move your finger to its icon. When you see the app name appear, lift your finger. The application opens.

You also make the drag gesture as part of a drag and drop.

Downloaded from www.Manualslib.com manuals search engine

Flick: As its name tells you, this is a quick gesture, great for scrolling long lists. Do it fast, do it lightly; as with a swipe, your fingertip just skims the surface. The faster you flick, the faster and farther you scroll up or down a list.

To ***close an application*** in ***Card view***, flick the card up toward the top of the touchscreen. This is called ***throwing*** the card off the top of the screen.

In some applications, such as Email and Messaging, you can throw a list item off the side of the screen to delete the item.

Downloaded from www.Manualslib.com manuals search engine

Scroll Gestures

Scroll a specific amount: Drag the screen in the desired direction.

Scroll fast: Flick the screen in the desired direction.

Stop scrolling: Tap or drag the screen while scrolling.

Downloaded from www.Manualslib.com manuals search engine

Zoom Gestures

Zoom in/pinch out to increase the size of items on the screen (in Email, Web, Photos, Doc View, PDF View, Google Maps): Place two fingers on the screen and spread them slowly apart.

Zoom out/pinch in to decrease the size of items on the screen (in Email, Web, Photos, Doc View, PDF View, Google Maps): Place two fingers on the screen and bring them together.

Zoom in or out a fixed amount (Web, Photos): Double-tap the screen.

Downloaded from www.Manualslib.com manuals search engine

Text Selection Gestures

Text selection gestures are available in any editable text field—that is, any field or screen where you can insert a cursor.

Place the cursor in a text field: Tap the location.

Move the cursor: Insert the cursor. Press and hold *Option* . Place your finger anywhere onscreen and drag in any direction.

Downloaded from www.Manualslib.com manuals search engine

Select text when you can see a cursor: Tap the location to insert the cursor. Press and hold *Shift* . Place your finger anywhere onscreen and drag your finger in the direction you want to select text.

Select a paragraph of text when you cannot see a cursor, for example, on a web page or in an email you received: Press and hold *Shift* . Tap the paragraph.

Downloaded from www.Manualslib.com manuals search engine

Drag and Drop

Tap and hold the item, drag it, and then lift your finger to drop it. Sometimes you get a visual cue that the item is ready to be dragged. For example, an icon in the ***Launcher*** is ready to be dragged when you see a halo radiating from the icon. A card in ***Card view*** is ready to be dragged when it changes size and becomes transparent.

Downloaded from www.Manualslib.com manuals search engine

Delete a List Item

Throw the item off the side of the screen. If prompted, tap ***Delete*** to confirm the deletion.

The delete gesture is available in applications such as Email, Messaging, Tasks, Music, and Bluetooth. If you can't delete a list item by throwing it, open the item and look in the application menu for a delete command.

Tip	*To delete multiple list items, throw each one off the screen. If you get the* **Delete** *confirmation prompt after throwing the first item, you don't need to tap it—just throw the second item, and the first deletion is confirmed automatically.*

Downloaded from www.Manualslib.com manuals search engine

Open Applications

You can have as many applications open at one time as you like, limited only by the amount of memory available on your phone at the time.

Open an Application in Quick Launch

Quick Launch is the bar of five icons that is always available at the bottom of ***Card view*** and the ***Launcher***. To open an application from ***Quick Launch***, just tap the icon.

Quick Launch can display no more than five icons. By default it displays, from left to right, ***Phone***, ***Contacts***, ***Email***, ***Calendar***, and the ***Launcher***. You can change the order of icons (except the ***Launcher*** icon) in ***Quick Launch*** (see “Reorder Quick Launch Icons” on page 65), or swap in other applications (see “Change the Applications That Appear in Quick Launch” on page 64).

Note	*If you have a notification or the dashboard is open (see “View and Respond to Notifications” on page 80), you need to dismiss them to access* Quick Launch.

Downloaded from www.Manualslib.com manuals search engine

When an application fills the whole screen, make the following gesture to display ***Quick Launch*** and open one of its applications.

1. Drag up slowly from the gesture area to the screen.
2. Move your finger to the application icon. (When you see the app name appear, lift your finger. The application opens.)

Open an Application in the Launcher

The ***Launcher*** displays all the applications that are not on ***Quick Launch***. The ***Launcher*** includes multiple pages, which you can organize to group apps the way you want (see "Reorder Launcher Icons" on page 66).

Downloaded from www.Manualslib.com manuals search engine

1. Press *Center* and tap .

Tip	*You can also open the* Launcher *by flicking up twice from the gesture area to the screen. If you are in* Card view*, just flick up once to open the* Launcher*.*

2. To find the app you want, swipe left or right on the screen to see other pages of the Launcher. (Swipe up or down to see all icons on a page.)

1 Arrow indicates that you can swipe up to see partially or fully hidden icons.
2 Page indicators show that there are two Launcher pages to the right—swipe left on the screen to see them.

Downloaded from www.Manualslib.com manuals search engine

3. Tap the application icon.

To close the ***Launcher***, do one of the following:

- Press ***Center***.
- Tap .
- Flick up from the gesture area to the screen.

Open an Application Using Search

1. Press ***Center*** to open ***Card view***.
2. Enter the name of the application.
3. When the application icon appears in the search results, tap it.

Work With Applications

Go Up One Level in an App (Back Gesture)

The back gesture takes you up one level from a detailed level to a more general view of the application you're working in. For example, when you finish reading an email message, make the back gesture to close the message and return to your list of messages. Or when you finish writing a memo, make the back gesture to close and save the memo and return to the display of all your memos. When you make the back gesture in an application and that's the only screen of that app that's open, you minimize the app and go back to ***Card view***.

- To make the back gesture, swipe right to left anywhere in the gesture area.

Downloaded from www.Manualslib.com manuals search engine

Display All Open Applications (Card View)

Card view displays open applications as small cards, so that you can easily scroll through them and drag them to change their order.

- When an application fills the screen and you want to go to ***Card view***, press ***Center*** .

Tip	*You can also open* Card view *by flicking up from the gesture area to the screen.*

Downloaded from www.Manualslib.com manuals search engine

Move Among Open Applications

1. In ***Card view*** (see “Display All Open Applications (Card View)” on page 60), swipe left or right on the screen to see other open apps.

2. Tap a card to maximize the application.

Tip	*You can also maximize the center card in* **Card view** *by flicking down from the screen to the gesture area.*

Tip	*You can set a preference to move among open apps without first going to Card view by making a full swipe in the gesture area (see “Turn Advanced Gestures On/Off” on page 222).*

Downloaded from www.Manualslib.com manuals search engine

Reorder Open Application Cards

1. In ***Card view*** (see “Display All Open Applications (Card View)” on page 60), tap and hold a card to further reduce the size of the cards.

Tip	*You can also tap anywhere on the screen around the cards to reduce the size of the cards.*

2. Tap and hold a card, wait for a visual cue, and then drag it to another position.

Downloaded from www.Manualslib.com manuals search engine

Close an Application

- In ***Card view*** (see “Display All Open Applications (Card View)” on page 60), throw the application card off the top of the screen.

Downloaded from www.Manualslib.com manuals search engine

Change the Applications That Appear in Quick Launch

If ***Quick Launch*** contains five icons, you must remove an application from ***Quick Launch*** before you can add another one. You can remove any application icon except the ***Launcher***.

1. Open the ***Launcher***. (***Quick Launch*** appears at the bottom.)
2. Tap and hold a ***Quick Launch*** icon, wait for the visual cue, and then drag the icon onto the ***Launcher*** to remove the icon from Quick Launch.

3. Tap and hold a ***Launcher*** icon, and after the halo appears around the icon, drag the icon onto the ***Quick Launch*** bar.

Downloaded from www.Manualslib.com manuals search engine

Reorder Quick Launch Icons

You can change the position of any Quick Launch icon except the Launcher icon.

1. In ***Card view***, tap and hold a ***Quick Launch*** icon.
2. After a halo appears around the icon, drag it to another location.

Downloaded from www.Manualslib.com manuals search engine

Reorder Launcher Icons

1. In the ***Launcher***, tap and hold an icon.
2. After the halo appears around the icon, drag it to another location.
3. To move the icon to another page, drag it to the left or right edge of the screen. Don't release the icon until the new page appears.

Delete an Application

You can delete applications that you have installed on your phone.

1. While pressing and holding ***Option***, tap the app icon.
2. Tap ***Delete***.

Downloaded from www.Manualslib.com manuals search engine

Tip	*You can also delete an application you installed by opening the application menu and tapping* List Apps*. On the list of applications, tap and hold an app name, and tap* Delete*.*

Enter Information

Use the Keyboard

1 *Option:* See “Enter Alternate Keyboard Characters” on page 68.
2 *Shift:* See “Enter Uppercase Letters” on page 68.
3 *Space*
4 *Backspace*
5 *Enter:* Press to enter a line return (for example, in a memo or in an email message you are composing) or to accept information you entered in a field. See “Enter Information in a Field” on page 71.
6 *Sym:* See “Enter Characters From the Symbols Table” on page 68.

Downloaded from www.Manualslib.com manuals search engine

Enter Uppercase Letters

By default, the first letter of each sentence or field is capitalized and the remaining text you enter is lowercase. To enter other uppercase letters, do one of the following:

- Press ***Shift*** and press the letter key. The Shift symbol appears: . You don't need to hold down Shift while you press the letter key.
- ***Turn on Caps Lock:*** Press ***Shift*** twice. The Caps Lock symbol appears: .
- ***Turn off Caps Lock***: Press ***Shift***.

Enter Alternate Keyboard Characters

Numbers, punctuation, and symbols appear above the letters on the keys. To enter these characters, do one of the following:

- Press ***Option*** and press the key for the character. The alternate character symbol appears: . You don't need to hold down Option while pressing the second key.
- ***Enter a series of alternate characters:*** Press ***Option*** twice to lock the alternate character feature. The alternate character lock symbol appears: .
- ***Turn off the alternate character feature:*** Press ***Option***.

Enter Passwords

You can see each character of a password only as you enter it, so be careful. Be sure Caps Lock and alternate character lock are off unless you need them. For information on how to enter characters, see "Enter Uppercase Letters" on page 68 and "Enter Alternate Keyboard Characters" on page 68.

Enter Characters From the Symbols Table

You can enter symbols and accented characters that don't appear on the keys by using the symbols list. See "Symbols and Accented Characters" on page 69 for a list of the available symbols and accented characters.

Downloaded from www.Manualslib.com manuals search engine

1. Press *Sym* Sym to display the symbols table.
2. Narrow the options by pressing the key that corresponds to the character you want. (For example, to enter an é, press ***e***. See the table below for a list of corresponding characters.)

Tip	*The symbols and accented characters are grouped according to their similarity to the corresponding key. In some cases, the symbol is related to the alternate character on the key, not the letter. For example, to type a € or other currency symbol, press* Sym + h*. Why? Because the alternate character on the H key is $.*

Tip	*If you press the wrong key, press* Backspace *to return to the full list of symbols and accented characters. You can then press another key.*

3. Scroll to find the character you want.
4. Tap the character to insert it.

Symbols and Accented Characters

Press Sym Sym *and press…*	*to select…*
a or A	á à ä â ã å æ Á À Ä Â Ã Å Æ ª ~ \ ` • ÷ ^ [ ] { } < > « » Ø µ |
b or B	~ \ ` • ÷ ^ [ ] { } < > « » Ø µ |
c or C	© ç Ç ¢
d or D	† ‡
e or E	é è ë ê ? É È Ë Ê € ¹ ¼ ½
h or H	¢ € £ ¥ ƒ
i or I	í ì ï î Í Ì Ï Î ÷ ‰

Downloaded from www.Manualslib.com manuals search engine

Press Sym Sym *and press…*	*to select…*
j or J	i
k or K	:-) :-(;-)
l or L	` ‘ ’ , "
m or M	µ :-) :-(;-)
n or N	ñ Ñ ¿
o or O	ó ò ö ô œ õ ø Ó Ò Ö Ô Œ Õ Ø º “ ” „ < > « »
p or P	¶ ~ \ ` • ÷ ^ [ ] { } < > « » Ø µ |
q or Q	\ ~ |
r or R	® ²
s or S	ß š Š ~ \ ` • ÷ ^ [ ] { } < > « » Ø |
t or T	™ ³ ¾
u or U	ú ù ü û Ú Ù Ü Û [ ] { } < > « »
v or V	^
w or W	÷ ^ ±
x or X	x ¤
y or Y	ÿ ý Ÿ Ý ¥ [ ] { } < > « »
z	ž Ž •
, or _	~ \ ` • ÷ ^ [ ] { } < > « » Ø µ |
.	… ~ \ ` • ÷ ^ [ ] { } < > « » Ø µ |
@	° • Ø

Downloaded from www.Manualslib.com manuals search engine

Enter Information in a Field

You can enter information in a field by typing or by pasting previously copied information (see "Cut, Copy, and Paste Information" on page 72).

Applications with text fields support the auto-correct feature. If the app recognizes a common misspelling, it auto-corrects the word. To cancel the auto-correction, press ***Backspace***.

To accept the information you entered, do one of the following:

- Tap outside the field.
- Press ***Enter***. If a screen contains multiple fields, pressing ***Enter*** accepts the information you just entered and jumps the cursor to the next field.
- If you are done entering information on the screen containing the field, make the back gesture to accept the information and back out of the screen (see "Go Up One Level in an App (Back Gesture)" on page 59).

Select Items in a List

Lists enable you to select from a range of options. Lists are different from menus (see "Use the Menus" on page 73), which give you access to additional features.

Lists are hidden until you tap the currently displayed option for that list.

Downloaded from www.Manualslib.com manuals search engine

1. Tap the currently displayed option to open the list. (For example, when creating a new event in Calendar, tap ***No Reminder*** to display the list of reminder options.)

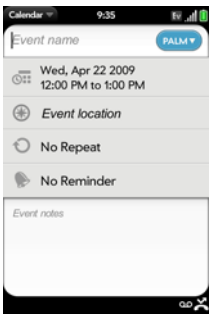

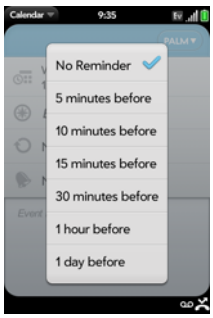

2. Tap the list option you want.

Cut, Copy, and Paste Information

You can cut or copy any editable text. Tap the text to insert the cursor—if the cursor appears, you can edit the text. You can't edit text on a web page or in an email message, unless it is a message you are composing.

1. Select the text you want to cut or copy (see "Text Selection Gestures" on page 52).
2. Open the application menu and tap ***Edit*** > ***Cut*** or ***Copy***.
3. Insert the cursor where you want to paste the text (see "Text Selection Gestures" on page 52).
4. Open the application menu and tap ***Edit*** > ***Paste***.

Downloaded from www.Manualslib.com manuals search engine

Tip	*You can also use keyboard shortcuts to cut, copy, and paste. After selecting the text or inserting the cursor, press and hold the gesture area until the Center button lights up, and press* X *(cut),* C *(copy), or* V *(paste).*

Save Information

- On most screens, your information is saved automatically. Just make the back gesture to close the screen (see “Go Up One Level in an App (Back Gesture)” on page 59), and your info is saved at the same time.
- On screens with a Done button, tap ***Done*** to save your information.

Use the Menus

Most applications have an application menu hidden in the upper-left corner, which provides access to additional features. There is also a connection menu hidden in the upper-right corner, which provides access to wireless services.

Some applications have additional menus. For example, in ***Photos***, tap an open picture and tap to display a menu of tasks you can do with the picture (see “Photos” on page 131).

To get the most out of your phone, it’s a good idea to familiarize yourself with the additional features available through the menus in various applications.

Downloaded from www.Manualslib.com manuals search engine

Open the Application Menu

The application menu contains options such as ***Cut*** and ***Copy***, ***Preferences***, ***Help***, and other application-specific commands.

1. Do one of the following:
   - Tap the application name in the upper-left corner of the screen.

   - Drag down from the upper-left corner of the phone (above the screen) onto the screen.
2. Tap a menu item to open it. (If a menu item displays a right-pointing arrow ▶, tap the item to open a submenu of options for that item—for example, tap the ***Edit*** menu item to open a submenu containing Cut, Copy, and Paste options. If the menu displays a

Downloaded from www.Manualslib.com manuals search engine

downward-pointing arrow at the bottom, it means that more options are available. Scroll the menu to see the additional options.)

Open the Connection Menu

The connection menu lets you manage wireless services—the phone, Bluetooth® wireless technology, and Wi-Fi.

Did You Know?	*The connection menu also displays the current day and date and the battery charge level.*

1. Do one of the following:
   - Tap the upper-right corner of the screen.

Downloaded from www.Manualslib.com manuals search engine

- Drag down from the upper-right corner of the phone (above the screen) onto the screen.

2. Tap a menu item to turn that wireless feature on or off or to open a list of options for that feature (see “Turn Wireless Services Off (Airplane Mode)” on page 22 for more information).

Search to Find Info and Make Calls

Use Universal Search

You can search for contacts and applications on your phone, or search the Web.

Downloaded from www.Manualslib.com manuals search engine

1. Open ***Card view*** (see “Display All Open Applications (Card View)” on page 60) or the ***Launcher*** (see “Open an Application in the Launcher” on page 57).
2. Begin typing the search term. (As you type, search displays any contact names and application names that match the character. As you continue typing, the search results narrow.)

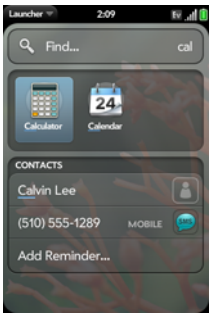

Downloaded from www.Manualslib.com manuals search engine

Tip	*You can also start a search by copying text in another application, opening the Launcher, and pasting the text. The text appears at the top of the screen as the search term. Note that you can't paste text in Card view.*

3. Do one of the following:
   - ***To look up or get in touch with someone:*** Tap a contact name to open the person's contact information. Tap a phone number to dial it, an email address to send a message, and so on. If only the contact name is displayed, tap the name to display ways to get in touch. You can also tap ***Add Reminder*** to add a reminder message to the contact (see "Assign a Reminder Message to a Contact" on page 163).
   - ***To perform a Web search:*** Tap the search term you entered to open a list of Web search options, and tap the option. If your search returns no contacts or applications, the Web search options are displayed automatically.
   - ***To open an application:*** Tap the application.

Universal Search Application Keywords

If you don't know the name of the app you are searching for, you can enter a keyword associated with the app. This table shows the keywords you can use to find an app on your phone.

Application Name	*Keywords*
App Catalog	Store
Backup	Settings, Preferences
Bluetooth	Settings, Preferences, Wireless
Calendar	Datebook, Meetings, Events
Clock	Alarm, Time, Watch
Contacts	Addresses, People
Date & Time	Clock, Settings, Preferences

Downloaded from www.Manualslib.com manuals search engine

Application Name	*Keywords*
Device Info	Settings, Preferences, Reset
Doc View	Word, Excel, PowerPoint
Email	Mail
Google Maps	Maps
Location Services	Settings, Preferences
Memos	Notes, Stickies, Notepad
Messaging	Text, SMS, MMS, IM, Instant Chat
Music	Songs, Tunes, Audio
PDF View	Acrobat
Phone	Dial
Photos	Pictures
Regional Settings	Settings, Preferences
Screen & Lock	Wallpaper, Security, Desktop, Brightness, Unlock, Gestures, Settings, Preferences
Sounds & Ringtones	Audio, Music, Volume, Vibrate, Silent, Settings, Preferences
Tasks	To Do, Todos, Checklist
Updates	Settings, Preferences
Videos	Movies
Web	Browser, Blazer, Internet
YouTube	Videos, Movies

Downloaded from www.Manualslib.com manuals search engine

Search Within an Application

In applications such as Contacts, Memos, Doc View, and PDF View, you can search for entries or files. From the list view, enter the file name; a few words from a memo; or a contact name, initials, address, or number. See the application chapter for details.

You can also enter a search term in the Help application to search for help content related to the term.

View and Respond to Notifications

Respond to a Notification

Notifications show up at the bottom of the screen to notify you of new voicemail and messages, upcoming appointments, missed calls, and more.

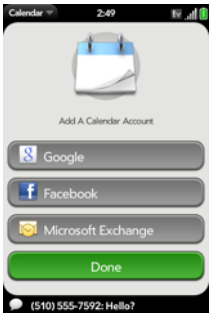

Do one of the following:

- Tap the notification to act on it.
- For some types of notifications, throw the notification off the side of the screen to dismiss it.

Downloaded from www.Manualslib.com manuals search engine

View All Your Notifications

For most types of notifications, if you do not tap the notification after a few seconds, it becomes an icon in the lower-right portion of the screen.

1. Tap anywhere on the bottom of the screen to display your notifications.

2. Tap a notification to act on it. (If a notification icon has a number next to it, the number indicates how many items are included in the notification—how many voicemail or email messages you have, and so on.)

Reorder Notifications and Other Dashboard Items

The area that displays all of your notifications (see "View All Your Notifications" on page 81) is called the dashboard.

- Tap and hold a dashboard item, and then drag it to a different location.
- Throw a dashboard item off the side of the screen to dismiss it.

Downloaded from www.Manualslib.com manuals search engine

Update the Software on Your Phone

Palm continually provides updates to your phone's operating system. Update notifications are sent to your phone automatically when a system update is available (see "Respond to a System Software Notification" on page 82). When you update your phone's operating system, your personal information and files are not affected.

What's more, both Palm and many application developers make updates available for applications you have installed on your phone. Update notifications are sent to your phone automatically when an application update is available (see "Respond to an Application Update Notification" on page 83).

In addition to receiving update notifications, you can manually check for software or application updates at any time (see "Manually Check for Updates" on page 84).

Respond to a System Software Notification

When you get a notification that a system update is available, do one of the following:

- Tap ***Install Now*** twice. When installation is complete and the phone resets, tap ***Done***.
- Tap ***Install Later***. The next time you charge your phone, you receive another update notification. You can again choose whether to install the update now or later. You have ten minutes to decide to defer the installation; after ten minutes, the update is installed automatically.

Important	*You can use your phone while updates are being downloaded, but you cannot use your phone to make calls (including emergency calls) while updates are being installed.*

Important	*Do not remove the battery while updates are being installed.*

Downloaded from www.Manualslib.com manuals search engine

Here is some additional information about system updates:

- If you have Wi-Fi turned on and the battery has at least a 30% charge, your phone automatically downloads a system update if one is available—you don't have to do anything. If Wi-Fi is not turned on when the update becomes available, the Palm servers continue to check your device for Wi-Fi availability for two days.
- If you do not have Wi-Fi turned on anytime within two days of an update's becoming available, your phone automatically downloads the update over the Sprint network the next time the battery has a 30% charge and you have a Sprint Mobile Broadband data connection, as indicated by the Ev icon at the top of the screen. Your phone cannot download an update over a Sprint 1xRTT data connection, as indicated by the 1x icon at the top of the screen.
- If the battery has less than a 30% charge, you must charge the battery before you can download or install an update.
- To avoid roaming charges, updates are not downloaded if your phone is in roaming coverage.
- If you do not install an update immediately after downloading it, you are automatically prompted to install the update the next time you charge your phone. You can choose whether to install the update now or later. You have ten minutes to decide to defer the installation; after ten minutes, the update is installed automatically.

Respond to an Application Update Notification

When you get a notification that an update is available for one or more applications, tap the notification and do one of the following:

- Tap an individual application name to open the ***App Catalog***. From the ***App Catalog***, you can view application details and install that app (charges may apply; see "Use App Catalog to Shop for New Applications" on page 86).

Downloaded from www.Manualslib.com manuals search engine

- Tap ***Install Free*** to install only those applications that you can download free of charge.
- Tap ***Install All*** to install all applications available for download (charges may apply).

Note	*You can use your phone while updates are being downloaded, but you cannot use your phone while updates are being installed.*

Important	*Do not remove the battery while updates are being installed.*

Manually Check for Updates

1. Open ***Updates*** .

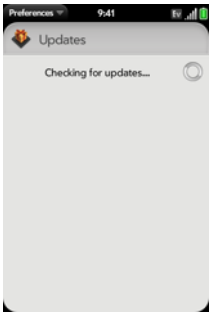

Downloaded from www.Manualslib.com manuals search engine

2. If a message appears stating that a system update is available, do the following:

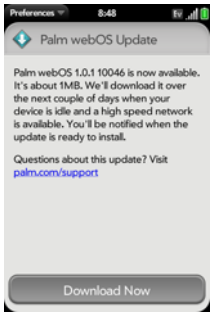

- Tap ***Download Now.***
- When prompted, tap ***Install Now***.
- After installation finishes and the phone resets, tap ***Done***.

3. If one or more application updates are available, do one of the following:
   - Tap an individual application name to open the App Catalog. From the App Catalog, you can view application details and install that app (charges may apply; see "Use App Catalog to Shop for New Applications" on page 86).
   - Tap ***Install Free*** to install only those updates that you can download free of charge.
   - Tap ***Install All*** to install all updates available for download (charges may apply).

Note	*You cannot use your phone while updates are being installed.*

Important	*Do not remove the battery while updates are being installed.*

Downloaded from www.Manualslib.com manuals search engine

Use App Catalog to Shop for New Applications

Browse applications in App Catalog

Use App Catalog to browse and download any of the many applications available for your phone. App Catalog contains both free apps and apps you can buy.

Note	*Applications you installed on your old Palm OS® by ACCESS or Windows Mobile smartphone do not work on your Pre phone, because your Pre phone uses the new Palm® webOS™ platform. Check App Catalog for a new version of your old favorites. Or purchase the Classic app from App Catalog. Classic enables you to run Palm OS applications on your Pre phone.*

1. Open *App Catalog* .
2. The first time you open *App Catalog* you are asked to review and accept the terms of use. If you accept the terms, tap *Accept*.
3. Swipe right or left on the thumbnails to see featured applications, or do one of the following:
   - *To search by name:* Tap *Search*, enter the search term, and press *Enter* .
   - *To search apps by category:* Tap *Explore*. To view categories in list view, tap ; to view them in tag view, tap .
   - *To view the most recently added apps:* Tap *Recent*.
   - *To view the most popular apps:* Tap *Popular*.

Downloaded from www.Manualslib.com manuals search engine

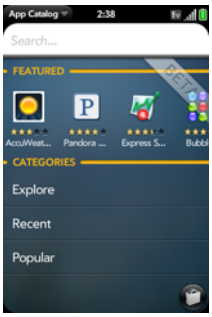

4. (Optional) To sort the list of applications or to browse results by date, alphabetical order, rating, or price, tap the menu at the bottom of the screen, and tap a sort method.
5. When the app you want appears onscreen, tap the name to display app details.
6. On the app details screen, do any of the following:

- Tap a screenshot to see a larger view.
- Tap *Reviews* to read all reviews.

Downloaded from www.Manualslib.com manuals search engine

- Tap ***Share*** and then tap ***Email*** or ***Text Message*** to share an app with a friend.
- Tap ***Developer Home*** to go to the app developer's home page.
- If available, tap ***Support*** to go to the developer's product support page.

Download a Free Application

Before You Begin	*Before you download an app, make sure you have enough storage space on your phone to fit the app. Open* Device Info *and look at the* Available *field under* Phone.

1. Open ***App Catalog*** .
2. Find a free app you want (see "Browse applications in App Catalog" on page 86).
3. Tap the app name, and then tap ***Download for free***.
4. If the application uses ***Location Services*** a notification is displayed (see "Location Services" on page 275). Tap ***Continue***.

Did You Know?	*After you download an application, you can tap* Reviews *on the app details screen to see reviews from "others". Or, on the Reviews screen, tap* Review *to write a review.*

5. After you download an app, tap ***Tap to Launch*** to open it. The app also now appears as an icon on the first page of the ***Launcher***, so you can open it from the ***Launcher*** as well.

Downloaded from www.Manualslib.com manuals search engine

Buy an Application

Before You Begin	*Before you download an app, make sure you have enough storage space on your phone to fit the app. Open* Device Info *and look at the* Available *field under* Phone.

1. Open *App Catalog* .
2. Browse to the app you want (see “Browse applications in App Catalog” on page 86).
3. Tap the app name, and then tap ***Download for [amount]***.
4. If the application uses ***Location Services*** a notification is displayed (see “Location Services” on page 275). Tap ***Continue***.
5. Do one of the following:
   - ***If you have set up a billing account:*** If required, enter your Palm profile password to authorize the purchase and tap ***Continue***.
   - ***If you have not set up a billing account:*** Tap ***Continue***, enter your Palm profile password, and tap ***Continue***. See “Set Up a Billing Account” on page 91.

   If you enter an incorrect Palm profile password three times, a message appears that explains how you can contact Customer Support for help.
6. Tap ***OK***.

Did You Know?	*After you download an application, you can tap* Reviews *on the app details screen to see reviews from “others”. Or, on the Reviews screen, tap* Review *to write a review.*

7. After you download an app, tap ***Tap to Launch*** to open it. The app also now appears as an icon on the first page of the ***Launcher***, so you can open it from the ***Launcher*** as well.

Downloaded from www.Manualslib.com manuals search engine

Tip	*If you delete a purchased application you can reinstall it without paying for it again. (see "Manage Downloaded Applications" on page 90).*

Manage Downloaded Applications

1. Open *App Catalog* .
2. Tap and tap ***Applications***.
3. Tap an application.
4. Do one of the following:
   - ***To report a problem with an application:*** Open the application menu and tap ***Report A Problem***.
   - ***To delete an application:*** Open the application menu, tap ***Delete Application***, and then tap ***Delete***.

     You might delete an application to free up space on your phone's memory or because you are having problems with an application.
   - ***To reinstall a deleted application:*** Search for the application (see "Browse applications in App Catalog" on page 86). Tap the app name and tap ***Download again for free***. You do not need to buy the app again.

Update Downloaded Applications

1. Open *App Catalog* .
2. Tap .
3. Tap ***Updates***. If updates are available for any of your downloaded applications, these applications are displayed in a list.
4. Tap an app name and tap ***Update Available***.
5. To launch the updated app, tap ***Tap to Launch***.

Downloaded from www.Manualslib.com manuals search engine

Set Up a Billing Account

1. Open *App Catalog* .
2. Do one of the following:
   - Tap an app you want to buy and tap ***Continue***.
   - Open the application menu, tap ***Preferences & Accounts***, and tap ***Add Account***.
3. Enter your Palm profile password and tap ***Continue***.

   If you enter an incorrect Palm profile password three times, a message appears that explains how you can contact Customer Support for help.
4. Select a credit card, enter details of your credit card and billing address, and tap ***Submit***.

Important	*Your credit card details are not stored on your phone. They are encrypted and stored in your Palm profile.*

5. Tap ***OK*** to verify your email address. (Purchase receipts are sent to this address. Tap ***Change This Address*** if you want to change the email address.)
6. In ***Password is Required***, select one of the following:
   - ***Once every 4 hours:*** You must enter your password the first time you make a purchase. If you make any other purchases within four hours, you don't need to enter your password again. After four hours, you enter your password again for the first purchase, which starts a new four-hour window.
   - ***Every Purchase:*** You must enter your password for each purchase, regardless of the time interval.

Update or Delete a Billing Account

1. Open *App Catalog* .
2. Open the application menu and tap ***Preferences & Accounts***.
3. Tap your account name.
4. Enter your Palm profile password and tap ***Continue***.

Downloaded from www.Manualslib.com manuals search engine

If you enter an incorrect Palm profile password three times, a message appears that explains how you can contact Customer Support for help.

5. Do one of the following:
   - *Edit the account information:* Change the information as needed and tap *Submit*.
   - *Delete the account information from your phone:* Tap *Remove Account*.

Copy Files Between Your Phone and Your Computer

Copy iTunes Media Files from Your Computer to Your Phone

Use media sync to easily transfer pictures, videos, podcasts, and DRM-free music files from iTunes on your computer to your phone. While you use media sync, you can't make or receive calls or use other wireless features such as email or the web. (See also "Transferring Data" on page 95.)

Key Term	DRM-free: *Describes a file that is not protected by Digital Rights Management. DRM-free music files can be copied as many times as you like and can be played on your Pre phone. To learn more about DRM-free music, go to apple.com and search on* iTunes Plus.

1. Connect your phone to your computer using the *USB cable*.
2. On your phone, tap *Media Sync*.
3. The first time you use Media Sync mode, a notification warns you that you cannot make or receive calls or text messages. Tap *OK*.
4. Your phone is now in Media Sync mode. On your computer, iTunes opens automatically.

Note	*You can synchronize supported DRM-free music, videos, TV shows, podcasts, and pictures, but you cannot sync iTunes contacts, calendar events, or games.*

Downloaded from www.Manualslib.com manuals search engine

5. Follow the steps in iTunes to synchronize files to your phone.
6. Disconnect the *USB cable* from the computer when the Media Sync screen is no longer displayed on your phone.

Did You Know?	*You can also copy music files between your phone and your computer using USB Drive mode. See "Copy Other Types of Files Between Your Phone and Computer" on page 93.*

Tip	*Media sync is a one-way transfer only, from iTunes on your computer to your phone. To transfer music files from your phone to iTunes on your computer, you can download the Palm Music Assistant. Go to palm.com/music-assistant for information.*

Copy Other Types of Files Between Your Phone and Computer

Before You Begin	*Before you copy files from your computer, make sure you have enough storage space on your phone to fit the file. Open* Device Info *and look at the* Available *field under* Phone.

You can copy any type of file from a computer to your phone, and from your phone to your computer, by putting your phone in USB Drive mode. (See also "Transferring Data" on page 95.)

Important	*All files that you store on the USB Drive of your phone are not backed up to your Palm profile, and they cannot sync to any of your online accounts. So be sure to keep a copy of all such files somewhere besides your phone just in case you lose your phone or you must do a full erase of the info on your phone.*

After you copy a file to your phone, you can open the file if your phone has an application that supports the file type. You can open many file formats for photos, videos, and music; Microsoft Office files; and PDF files.

Downloaded from www.Manualslib.com manuals search engine

When your phone is in USB Drive mode, your calls go to voicemail and you cannot use your device except as a USB storage device.

1. Connect your phone to your computer using the ***USB cable***.
2. On your phone, tap ***USB Drive***.
3. The first time you use USB Drive mode, a notification warns you that you cannot make or receive calls or text messages. Tap ***OK***.

   (On your computer, your phone appears as a removable drive. On a Windows computer, if the ***Found New Hardware*** wizard opens, click ***Cancel*** to close the wizard.)
4. Open ***My Computer*** (Windows XP), ***Computer*** (Windows Vista), or the ***Finder*** (Mac), double-click the drive representing your phone, and drag and drop files to your phone. (The drive displays folders that you can use to organize the files you copy. You can also create your own folders.)
5. On a Windows computer, to end the connection safely, right-click the drive representing your phone and click ***Eject***. (On a Mac computer, from your desktop, drag the drive representing your phone to the ***Trash***. Trash changes to ***Eject***.)
6. Disconnect the ***USB cable*** from the computer when the USB Drive screen is no longer displayed on your phone.

Tip	*If you use Windows Media Player on your computer, you can use that app's Sync feature to transfer music between your computer and your phone.*

Downloaded from www.Manualslib.com manuals search engine

Section 2C

Transferring Data

In This Section

- Data Transfer Overview (page 96)
- Transferring Data (page 97)

Data Transfer

Downloaded from www.Manualslib.com manuals search engine

Data Transfer Overview

While you have many options for transferring data, Palm recommends that you take advantage of the Synergy feature by putting your data in an online account—for example, if you don't have a Google account, we recommend that you create one and store your data there (see "How Do I Get Names and Other Info into Contacts?" on page 154, "How Do I Get Events into Calendar?" on page 172, and "How Do I Send and Receive Email on My Phone?" on page 236). If you don't want to do this, there are other ways to get data on your phone.

Consider carefully whether you'll want to be able to access and change your data somewhere besides your phone. If you do, do you prefer the other means of access to be a website (for example, Google), or to be software that is installed on your computer? In either case, you can set things up so that you can synchronize new or changed data between your phone and the other data location.

You could also decide not to have a sync setup for your data, in which case you can use your Palm profile to back up your data (see "Backup" on page 210). You can't access this data anywhere but on your phone. However, your data is backed up, and in emergencies caused by a lost or stolen device, the data you stored in your Palm profile account can be erased remotely by going to your Palm profile on a web browser on a computer. The data of your Palm profile account can later be restored to a new Palm webOS phone.

Downloaded from www.Manualslib.com manuals search engine

Transferring Data

How do I get data from my old phone?

Do you want to sync your personal information between your Pre phone and Google or Exchange, but first need to get your data out of an old phone that you want to stop using? You can do a one-time, one-way transfer of data to your Pre phone, and then if you choose to, use the Synergy feature to sync the data to Google or Exchange.

1. On your computer, set up an account on the Google website (go to *gmail.com*) or with Microsoft Exchange (speak to an IT person at your company).
2. Open ***Contacts*** on your Pre phone.
3. Enter your username and password for the Google or Exchange account.

Note	*You don't have to go to Calendar to set up your account there—that's done automatically using the username and password you enter in Contacts.*

4. Go to a Sprint store and ask a support agent for help in transferring data from your old phone. When you're ready to transfer data from your old phone, be sure to tell the agent which account to transfer the data to.

Downloaded from www.Manualslib.com manuals search engine

How do I get data off my computer?

Do you want to sync your personal information between your Pre phone and Google or Exchange, but first need to get the data out of a desktop app that you want to stop using? You can do a one-time, one-way transfer of data to your phone, and then if you choose to, sync the data to Google or Exchange.

1. On your computer, set up an account on the Google website (go to *gmail.com*) or with Microsoft Exchange (speak to an IT person at your company).
2. Open ***Contacts*** on your Pre phone.
3. Enter your username and password for the Google or Exchange account.

Note	*You don't have to go to Calendar to set up your account there—that's done automatically using the username and password you enter in Contacts.*

4. To transfer data from a desktop app that you want to stop using, go to *palm.com/migrate-pre* for more information about the Data Transfer Assistant (DTA)—it's a free download from Palm.

Downloaded from www.Manualslib.com manuals search engine

About the Data Transfer Assistant

The DTA enables you to do a one-time, one-way export of data from selected desktop apps to your Pre phone through the USB cable included with your phone. After the data is on your phone, you can select the account you want to import the data to.

Important	*The DTA is not synchronization software. It is meant to be used once per desktop app, to export your info from the desktop app to an account on your phone.*

These are the desktop apps that the DTA works with, and what data the DTA transfers to your phone:

	Desktop Application	*Contacts*	*Calendar*	*Tasks*	*Memos/Notes*
Windows XP or Vista 32bit or 64bit	Outlook 2003 or later	Yes	Yes	Yes	Yes
	Palm Desktop v6.2.2	Yes	Yes	Yes	Yes
Mac OS 10.5	Address Book	Yes			
	iCal		Yes	Yes	

Note the following:

- Depending on the amount of data you are transferring, it can take up to an hour to transfer data with the DTA.
- You cannot use the DTA to transfer data from a copy of Outlook that is associated with Microsoft Exchange, which wirelessly syncs data between your phone and an Exchange server. See “Set Up Email: Microsoft Exchange ActiveSync (EAS)” on page 239.
- On Vista, only Outlook 2007 is supported.

Downloaded from www.Manualslib.com manuals search engine

- If you have an earlier version of Palm Desktop, you can download version 6.2.2 for free from palm.com/desktop. Install it, sync with your old Palm device, and then use the DTA to transfer your data.
- Do you use Palm Desktop on the Mac? Don't worry, you can export your contacts, calendar events, and tasks into Address Book and iCal. Then use the DTA to transfer your data. For more information, go to palm.com/migrate-pre.

I'm already using Google, Facebook, and/or Microsoft Exchange

If you are already using Google, Facebook, and/or Exchange to manage your calendar and contacts, then all you need to do is set up one or more of these accounts on your phone.

Set up your Pre phone to sync with...	*To sync this data...*
Google	Contacts and calendar events
Exchange	Contacts, calendar events, and tasks
Facebook	Contacts and calendar events

Downloaded from www.Manualslib.com manuals search engine

Note	*Changes you make in your Facebook account on the web show up on your phone. Contacts and calendar events you add or change on your phone, however, do not automatically update your Facebook account on the web.*

1. Open ***Contacts*** .
2. Enter your account credentials for your Google, Facebook, or Exchange account.

Note	*You don't have to go to Calendar to set up your account there—that's done automatically using the credentials you entered in Contacts.*

I want to keep using my current desktop app and sync with an online account on my phone

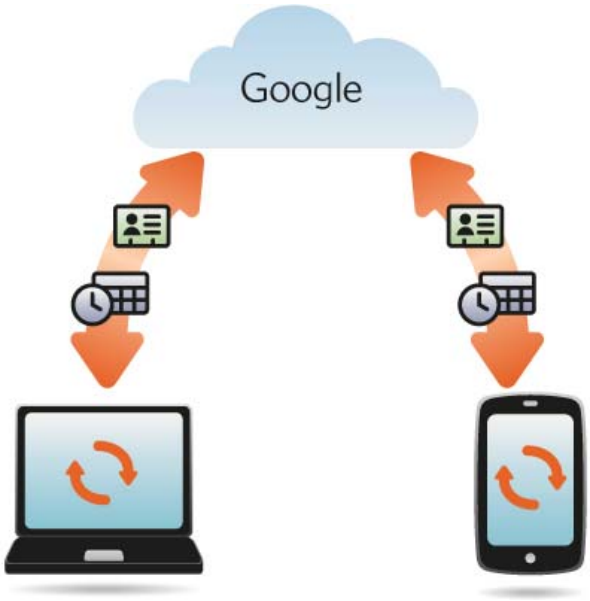

If you want to continue using a desktop app to store your contacts, calendar events, and tasks—iCal and Address Book on the Mac, or desktop Outlook® or Palm® Desktop by ACCESS on Windows—consider adopting this solution.

Downloaded from www.Manualslib.com manuals search engine

Download and install a third-party application (sold separately) that can sync your desktop app to Google. Your desktop app syncs with your Google account, and then the Synergy feature takes over to sync your Google account with your phone. Your desktop app syncs with your Google account, and your phone also syncs with Google.

1. On your computer, set up an account on the Google website (go to *gmail.com*).
2. Open ***Contacts*** on your Pre phone.
3. Enter the account credentials for your Google account.

Note	*You don't have to go to Calendar to set up your account there—that's done automatically using the username and password you enter in Contacts.*

4. Install a third-party application on your computer that enables you to sync with Google. Go to *palm.com/migrate-pre* to learn about available third-party sync solutions.
5. Follow the instructions of the third-party app to sync the data in your desktop app with Google. The next time Google syncs with your phone, your data appears on your phone.

I don't need to sync, but I do want a copy of my data backed up somewhere besides my phone

Use the Data Transfer Assistant to move your data into your Palm profile account. See "Backup" on page 210.

Downloaded from www.Manualslib.com manuals search engine

palm

I'd rather sync directly with my computer

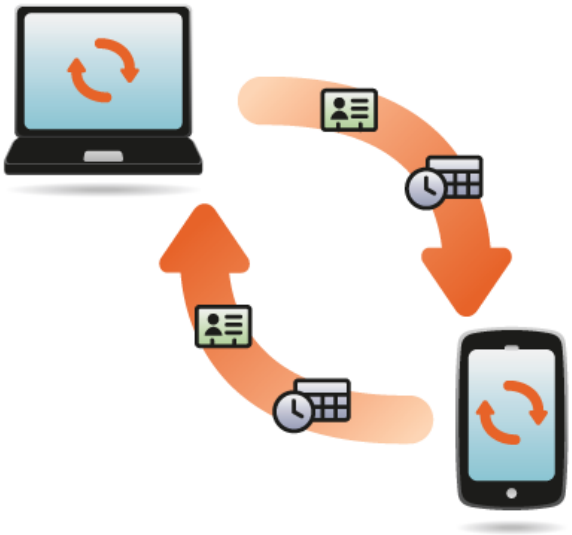

Downloaded from www.Manualslib.com manuals search engine

Would you rather sync your Pre phone directly to your computer over Wi-Fi without going through the web? Download a third-party application (sold separately) that enables synchronization of your phone directly to your desktop app using your home Wi-Fi network.

1. Go to *palm.com/migrate-pre* to learn about third-party applications that enable you to sync your phone with your computer using Wi-Fi.
2. Follow the instructions given by the third-party vendor to install the app on your computer.

Note	*You may also have to install another part of the application on your phone. Follow the instructions of the third-party vendor.*

Downloaded from www.Manualslib.com manuals search engine

Section 2D

Phone

In This Section

- Make Calls (page 106)
- Receive Calls (page 110)
- Use Voicemail (page 112)
- What Can I Do During a Call? (page 112)
- What's My Number? (page 118)
- View Your Call History (page 118)
- Save a Phone Number to Contacts (page 120)
- What Are All Those Icons? (page 120)
- Use a Phone Headset (page 122)
- Customize Phone Settings (page 124)

Downloaded from www.Manualslib.com manuals search engine

Make Calls

For information on turning the phone off and back on, see “Turn the Phone On/Off” on page 20.

Dial Using the Onscreen Dial Pad

The onscreen dial pad lets you make a call without sliding out the keyboard. It is also useful when you need to dial numbers that are expressed as letters and when you need large, brightly lit numbers that you can tap.

1. Open ***Phone***.
2. Tap the onscreen dial pad to enter the number.

Tip	*Tap the onscreen backspace icon (to the right of the number you enter) to delete numbers one at a time. Tap and hold the icon to delete all the numbers.*

Tip	*You can paste numbers copied from other applications—for example, from an email message or a memo—into the dial pad.*

Downloaded from www.Manualslib.com manuals search engine

Tip	*To enter +, press and hold the* **0** *key on the keyboard, or tap and hold* **0** *onscreen.*

3. Tap to dial.

Dial by Contact Name Using Universal Search

1. Open ***Card view*** (see “Display All Open Applications (Card View)” on page 60) or the ***Launcher*** (see “Open an Application in the Launcher” on page 57).
2. Begin typing the contact first or last name, or initials.
3. Tap one of the contact’s phone numbers to dial it. If only the contact name appears, tap the name to display the phone numbers for that contact, and tap the number.

Dial Using the Keyboard

1. In the ***Launcher*** or ***Card view***, use the keyboard to enter the number. (You do not need to press ***Option*** to enter numbers, *, or #.)

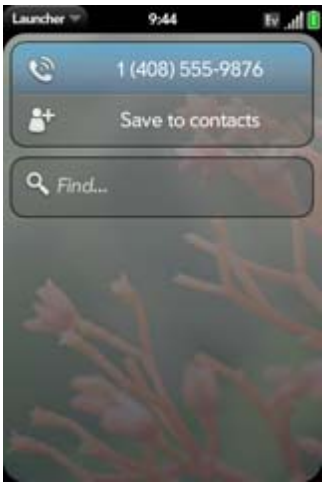

2. When you finish entering the number, tap it to dial.

Downloaded from www.Manualslib.com manuals search engine

Tip	*You can also enter a number with the keyboard when the dial pad is displayed. After entering the number, tap the onscreen dial icon to dial.*

Dial Using a Speed Dial

See “Assign a Speed Dial to a Contact” on page 162 for instructions on creating a speed dial.

- In the ***Launcher***, ***Card view***, or ***Phone***, press and hold the speed dial key you assigned to the number.

Dial by Contact Name in the Phone Application

See “How Do I Get Names and Other Info into Contacts?” on page 154 for instructions on getting contacts on your phone. You can also look up and dial contacts using universal search (see “Search to Find Info and Make Calls” on page 76).

1. Open ***Phone***.
2. Using the keyboard, enter a name or initials until the contact you want appears.

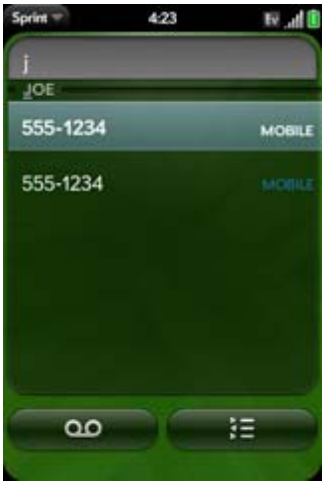

Did You Know?	*If you press E, R, or any other key that displays both a letter and a number, you see both matching names and numbers onscreen.*

Downloaded from www.Manualslib.com manuals search engine

Did You Know?	*If your company uses Microsoft Exchange Server with a Global Address List (GAL), entering the contact search information returns matching results from the GAL as well.*

3. Tap the number.

Tip	*If you do not want contact matches to appear when you type a number on the keyboard, you can turn off the Show Contact Matches preference (see "Show Contact Matches" on page 125). When this preference is off, you can still dial by contact name in the Phone application. After opening* Phone*, tap the contact list icon to the right of "Enter name or number". Type the contact name or initials, and tap the number when it appears.*

Redial the Last Number Dialed

1. Open ***Phone***.
2. Tap . (When the contact name or number appears at the top of the screen, tap again to dial.)

Dial Your National Emergency Number

1. Press ***power*** to wake up the screen.
2. Press ***Center*** to display ***Card view***.
3. Enter the emergency number (for example, 911, 112, or 999).
4. Tap to dial.

   If the phone is turned off, a notification appears prompting you to turn it on. You don't have to press ***Option*** to enter numbers.

Dial From a Web Page or Message

Your phone recognizes most phone numbers that appear in Web pages or in messages (email, text, or multimedia).

Downloaded from www.Manualslib.com manuals search engine

1. If a phone number appears as an underlined link, tap the number. (This displays the dial pad with the number already entered.)
2. Tap to dial.

Receive Calls

If you want to answer calls, your phone must be on. This is different from having only the screen turned on (see “Turn the Phone On/Off” on page 20). When your phone is off, your calls go to voicemail.

Tip	*You can pick the ringtone for incoming calls (see “Select the Ringtone for Incoming Calls” on page 226). You can set a ringtone for individual contacts as well (see “Add a Ringtone to a Contact” on page 162).*

Answer a Call

Do one of the following:

- If the screen is on when the phone starts ringing, tap .

Downloaded from www.Manualslib.com manuals search engine

- If the screen is off, drag up to unlock the screen and answer the call.
- If a headset is attached, press the headset button.

Did You Know?	*If you are playing music or a video on your phone and a call arrives, playback pauses automatically and resumes when you hang up or ignore the call.*

Tip	*You can see a photo of the person calling you by assigning a caller ID photo. See "Add a Picture to a Contact" on page 134.*

Silence the Ringer on an Incoming Call

When you silence the ringer on an incoming call, you can answer the call or let it ring through to voicemail.

Do one of the following:

- Press ***power***.
- Press ***Volume***.
- Slide the ***ringer*** switch off (red means off). This silences the ringer and any notification sounds. These sounds remain off until you slide the ***ringer*** switch back on. Other sounds, such as music and video playback, are not affected by sliding the ringer switch off.

Ignore a Call

To send a call immediately to voicemail, do one of the following:

- Tap .
- Press ***power*** twice.

To reply to a caller who is in your Contacts list after you ignore a call, tap the ignored call notification. This opens the caller's contact entry, where you can select a reply method.

Downloaded from www.Manualslib.com manuals search engine

Use Voicemail

Set up Voicemail

1. In the ***Launcher***, ***Card view***, or ***Phone***, press and hold ***1***. When the search results screen appears, continue holding ***1*** until the Phone application appears.
2. Follow the voice prompts to set up your voicemail.

Listen to Voicemail Messages

1. Do one of the following:
   - In the ***Launcher***, ***Card view***, or ***Phone***, press and hold ***1***.
   - Tap a voicemail notification at the bottom of the screen.
   - Open ***Phone***. Then tap .
   - Open ***Phone***. Then tap and hold ***1*** onscreen.
2. Follow the voice prompts to listen to your messages.

What Can I Do During a Call?

Your phone offers many advanced telephone features, including call waiting and three-way conferencing. These features depend on your service plan. Contact Sprint for more information.

When you make or receive a call, info about the call appears on the call screen. When you're on a call, you can open other applications and work in them, and you won't lose your call. See "Open Applications" on page 56.

If you created a reminder in the contact info of a caller, the reminder appears as a notification when you make a call to or receive a call from the person. See "Assign a Reminder Message to a Contact" on page 163.

Downloaded from www.Manualslib.com manuals search engine

Manage a Call

Do any of the following:

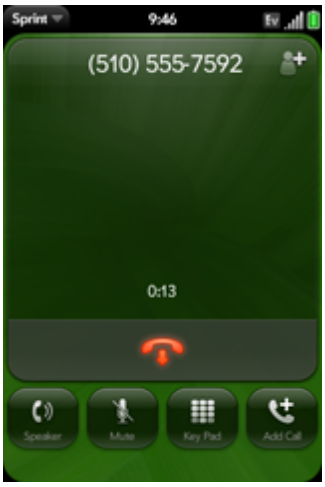

- ***Put the call on speakerphone:*** Tap .
- ***Mute the microphone so you can't be heard:*** Tap .

Tip	*You don't need an on-hold button to put a call on hold. Just tap the mute icon to mute your end of the line.*

- ***Open the dial pad to enter numbers for navigating phone trees, responding to prompts, and so on:*** Tap .
- ***Add a call:*** See "Make a Second Call" on page 115.
- ***Adjust call volume:*** Press ***volume***.

Downloaded from www.Manualslib.com manuals search engine

* Volume

Did You Know?	*You can send and receive text messages during a call. This is a great way to stay connected with friends and colleagues during a long call.*

End a Call

Do one of the following:

- Tap .
- If a headset is attached, press the headset button.

Use Another Application While on a Call

While you're on a call, you can use many other applications on your phone, for example, the personal information applications (Contacts, Calendar, and so on). You can also send and receive text messages. But you can use the Sprint network for only one activity at a time—phone or data—so you cannot use the Sprint network to browse the web, send and receive

Downloaded from www.Manualslib.com manuals search engine

email, or send and receive multimedia or instant (IM) messages. To browse the web or send and receive email or IM messages during a call, you must connect to a Wi-Fi network. See “Wi-Fi” on page 270.

Note	*You cannot send or receive multimedia messages using a Wi-Fi network.*

1. Open the ***Launcher*** or ***Quick Launch*** while on a call.
2. Tap the other application.
3. Tap the call notification at the bottom of the screen to return to the call screen.

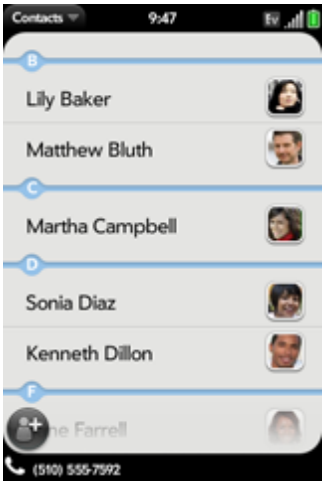

Make a Second Call

1. While on a call, tap .
2. Dial the second call.

Answer a Second Call (Call Waiting)

When a second call notification appears, tap . The first call is put on hold.

Downloaded from www.Manualslib.com manuals search engine

Swap Between Two Calls

You can swap between calls only if the second call is incoming.

Tap to begin speaking with the call that's on hold.

Make a Conference Call

When you're on a call, you can make a second call and create a three-way conference call, provided that the service is available in your area. Please contact Sprint for more information. Additional charges may apply and minutes in your mobile account may be deducted for each call you make.

Downloaded from www.Manualslib.com manuals search engine

1. Make a first call, and then make a second call. (This is the limit of conference callers. Check your service plan about conference calls.)
2. Tap to create the conference call.

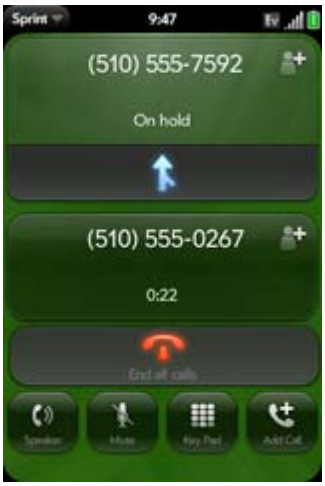

3. When you're done, do one of the following:
   - Tap to end all calls.
   - Ask one of the callers to hang up, so you can stay connected to the other caller.

Look Up or Send a Message to a Contact

When you're on a call with a contact, tap the contact name to see the person's information in Contacts. In Contacts, you can tap an option to send the contact a text or an email message, and so on. This is a great way to exchange attachments (for example, documents, photos, or music files) with someone while you're on a call with them.

When you're on a call with someone who is not in your Contacts list, tap the number onscreen to add this number to Contacts (see "Save a Phone Number to Contacts" on page 120).

Downloaded from www.Manualslib.com manuals search engine

What's My Number?

1. Open *Phone* .
2. Open the application menu and tap ***Preferences***. (Your phone number appears at the top of the ***Phone Preferences*** screen.)

View Your Call History

1. Open *Phone* .
2. Tap .

Downloaded from www.Manualslib.com manuals search engine

3. Do any of the following:

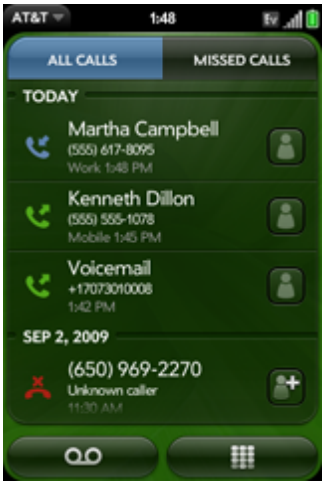

- *Switch the types of calls displayed:* Tap *All Calls* or *Missed Calls*.
- *Call a number:* Tap the number.
- *Save the number to Contacts:* Tap to the right of the number (see "Save a Phone Number to Contacts" on page 120).
- *View a contact entry:* Tap to the right of the number.
- *Delete a call history entry:* Throw the entry off the side of the screen.
- *Clear the call history:* Open the application menu and tap *Clear Call History*.

Did You Know?	*In the call history, outgoing calls are designated by a right-pointing green arrow, and incoming calls are designated by a left-pointing blue arrow. Missed calls are designated by a bent red arrow. Ignored calls are designated by a red X.*

Downloaded from www.Manualslib.com manuals search engine

Save a Phone Number to Contacts

You can save the number from an incoming or outgoing call to an existing contact, or create a new contact for the number. If an incoming call uses caller ID blocking, you cannot save the number.

1. Do one of the following:
   - ***Before dialing a number you entered in the dial pad:*** Tap ***Add to Contacts***.
   - ***During a call:*** Tap .
   - ***After a call:*** From the dial pad, tap . Tap to the right of the number, and tap ***Add To Contacts***.
2. Tap one of the following:

   Save As New: Create a new contact for the phone number.

   Add To Existing: Tap the contact you want to add the phone number to.

What Are All Those Icons?

You can monitor the status of several items using icons at the top of the screen:

Icon	*Description*
	The battery is being charged.
	The battery is fully charged.
	The battery is low. See “Charge the Battery” on page 39.
	Airplane mode is turned on. This means that the phone, Bluetooth® wireless technology feature, and Wi-Fi feature are off (incoming calls go to voicemail). See “Turn Wireless Services Off (Airplane Mode)” on page 22.

Downloaded from www.Manualslib.com manuals search engine

Icon	*Description*
	Wi-Fi is turned on. Waves denote signal strength. See “Wi-Fi” on page 270.
	The phone is searching for a Wi-Fi network.
	The phone is on. The number of bars filled in denotes signal strength. See “Turn Wireless Services On” on page 23.
1x	Your phone is connected to a 1x data network. Data is not currently being transmitted over the network. See “I can’t tell if data services are available” on page 321.
1x	Your phone is connected to a 1x data network and data is being transmitted over the network.
Ev	Your phone is connected to an EvDO data network. Data is not currently being transmitted over the network. See “I can’t tell if data services are available” on page 321.
Ev	Your phone is connected to an EvDO data network and data is being transmitted over the network.
Searching..	The phone is searching for a Sprint network.
No Service	No Sprint network is available.
Sprint	Your phone is on and connected to the Sprint network.
	Bluetooth® wireless technology is turned on. See “Bluetooth® Wireless Technology” on page 291.
	A Bluetooth connection is in progress.
	A Bluetooth connection has been made.

Downloaded from www.Manualslib.com manuals search engine

Icon	*Description*
	Your phone is performing a search on the characters you entered. If you are in ***Card view*** or the ***Launcher***, your phone conducts a universal search (see “Search to Find Info and Make Calls” on page 76). If you are in an application such as Contacts or Memos, your phone searches for items within the app that match the search term you entered.
	Your phone is in roaming coverage. See “Set Roaming Preferences” on page 126.
	TTY is turned on. See “Enable TTY/TDD” on page 127.
	HAC is turned on. See “Enable HAC” on page 127.

Use a Phone Headset

You can connect the headset that came with your phone for hands-free operation.

WARNING	*If driving while using a phone is permitted in your area, we recommend using a headset or hands-free car kit (sold separately). However, be aware that use of a headset that covers both ears impairs your ability to hear other sounds. Use of such a headset while operating a motor vehicle or riding a bicycle may create a serious hazard to you and/or others, and may be illegal. If you must use a stereo headset while driving, place a speaker in only one ear. Leave the other ear free to hear outside noises, and use the headset only if it is legal and you can do so safely. See “Driving Safety” on page 358 for more information.*

Use a Wired Headset

Your phone works with headsets that have a 3.5mm connector (look for three colored bands on the plug). When in doubt, ask the third-party headset manufacturer if the product is

Downloaded from www.Manualslib.com manuals search engine

compatible with your phone. If you hear a headset buzz or poor microphone performance, your headset may be incompatible with your phone.

1. Connect the headset. (While on a call, the icon changes to .)
2. The headset button performs different actions depending on what's happening on the phone. Press the headset button once to perform any of the following tasks:
   - Answer an incoming call.
   - Respond to call waiting.
   - Hang up a single active call or all calls on a conference call.
3. If you want to stop using the headset, do any of the following:
   - ***Switch from the headset to your phone's speakerphone:*** Tap and tap ***Speaker***.
   - ***Switch from the wired headset to a previously paired Bluetooth® hands-free device:*** Tap and tap the device name.
   - ***Use your phone without the headset:*** Disconnect the headset.

Set Up and Use a Bluetooth® Hands-Free Device

Your phone is compatible with many headsets and car kits (sold separately) enabled with Bluetooth® wireless technology version 2.1 with EDR and Stereo (with AVRCP media controls).

After you set up a connection with a Bluetooth headset or hands-free car kit, you can communicate with that device whenever it is within range and the Bluetooth feature on your phone is turned on. The range varies greatly, depending on environmental factors. The maximum is about 10 meters (30 feet).

Note	*You can use a stereo (A2DP-enabled) Bluetooth headset to listen to MP3 files on your phone. You cannot, however, use a mono Bluetooth headset to listen to MP3 files.*

Downloaded from www.Manualslib.com manuals search engine

1. Open ***Bluetooth*** .
2. If the Bluetooth setting at the top of the screen is off, tap ***Off*** to switch the Bluetooth feature from Off to On.
3. Tap ***Add device*** and tap the device name.
4. To use a Bluetooth device with your phone, follow the instructions that came with the Bluetooth device.
5. To switch to another Bluetooth device while on a call: Tap and tap the new device name. (You can also tap ***Handset*** or ***Speaker*** to use your phone without the headset.)

Tip	*If you make a Bluetooth connection with a car kit, you might get a notification on your phone asking if you want to upload contacts to the car kit. Tap* **Allow** *to upload contacts. If you later want to delete the contacts from the car kit, check the car kit documentation for instructions.*

Customize Phone Settings

Use Phone Preferences to customize phone settings.

Downloaded from www.Manualslib.com manuals search engine

Show Contact Matches

By default, when you have the dial pad displayed but you're using the keyboard to enter a phone number, both numbers and letters appear and your phone performs a search of matching names in Contacts. If you turn off this preference, typing on the keyboard with the dial pad displayed enters numbers only and no search in Contacts is done.

1. Open ***Phone***.
2. Open the application menu and tap ***Preferences***.
3. In ***Show Contact Matches***, tap ***On*** or ***Off***.

Tip	*If you turn off the Show Contact Matches preference, you can still perform a contact search in the Phone application. After opening* **Phone***, tap the contact list icon to the right of "Enter name or number." Type the contact name or initials, and tap the number when it appears.*

Use Dialing Tones

Dialing tones, also known as DTMF tones, are the tones that play when you press a key to dial. A short tone plays briefly and then stops, no matter how long you press the key. A long tone plays until you release the key.

1. Open ***Phone***.
2. Open the application menu and tap ***Preferences***.
3. In ***DTMF tones***, tap ***Short*** or ***Long***, and then tap the option you want.

Use Dialing Shortcuts

Dialing shortcuts add a prefix at the beginning of a number, so you can dial an extension instead of the whole number.

1. Open ***Phone***.
2. Open the application menu and tap ***Preferences***.
3. Under ***Dialing Shortcuts***, tap ***Add new number***.

Downloaded from www.Manualslib.com manuals search engine

4. Set the following:

   When I Dial: Tap this field and select the number of digits you need to enter to have your phone add a dialing shortcut.

   Use This Dialing Prefix: Enter the prefix to be added at the beginning of the dialed number. The combination of prefix and digits you enter must add up to a complete phone number.

5. Tap ***Done***.

Example: A complete phone number in your company's phone system has 11 numbers, for example, 1-408-555-1122. When dialing from a phone that's part of the system, you need to dial only the last five digits (51122). When you create a dialing shortcut on your phone, you select "5 digit numbers" for ***When I Dial*** and enter "140855" in ***Use This Dialing Prefix***. So when you dial your co-worker's five-digit extension (51122), your phone automatically dials the whole number: 1-408-555-1122.

Set Roaming Preferences

Use roaming preferences to set specific options for using your phone while roaming. For example, you can set options to prevent placing a call or making a data connection while roaming, so that you avoid extra charges.

1. Open ***Phone***.
2. Open the application menu and tap ***Preferences***.
3. Under ***Network***, set any of the following:

   Voice Network: Tap ***Sprint Only*** to allow phone calls only when you are on the Sprint network, or tap ***Automatic*** to allow roaming on other networks.

   Data roaming: Set whether to allow Web browsing, email, and text and multimedia messaging when you are roaming. This option appears only if you have set ***Voice Network*** to ***Automatic***.

   Data Usage: Set whether to turn data services—web browsing, email, and instant messaging—***On*** or ***Off***.

Downloaded from www.Manualslib.com manuals search engine

Enable TTY/TDD

A TTY (also known as TDD or text telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone. Your phone is compatible with select TTY devices.

You can connect a TTY/TDD machine to your phone through the headset jack. Check with the manufacturer of your TTY device for connectivity information. Be sure that the TTY device supports digital wireless transmission.

Before You Begin	*When TTY is enabled, you cannot use the headset jack for anything else, and all audio modes are disabled on your phone, including holding the phone up to your ear and listening.*

1. Connect a TTY/TDD device to your phone using the headset jack.
2. Open ***Phone***.
3. Open the application menu and tap ***Preferences***.
4. In ***TTY/TDD***, tap ***Off*** to switch TTY/TDD from Off to On.

Enable HAC

To use your phone with a hearing aid, turn on the HAC feature. This feature ensures that your phone can make the necessary connection with a hearing aid.

1. Open ***Phone***.
2. Open the application menu and tap ***Preferences***.
3. In ***HAC***, tap ***Off*** to switch HAC from Off to On.

Downloaded from www.Manualslib.com manuals search engine

Update Network Settings

The network settings on your phone may require periodic updates. Contact Sprint for information on recommended update frequency.

1. Open *Phone* .
2. Open the application menu and tap *Preferences*.
3. Tap *Update Network Settings*.

Update the Preferred Roaming List

The preferred roaming list contains information that allows you to obtain the best possible service when using your phone outside your home service area. Contact Sprint for information on recommended update frequency.

1. Open *Phone* .
2. Open the application menu and tap *Preferences*.
3. Tap *Update PRL*.

Reset the Voicemail Count

Occasionally you may continue to receive notifications of new voicemail messages even after you have listened to or deleted all your messages. If this happens, use the Voicemail Count Reset preference to stop the notifications.

1. Open *Phone* .
2. Open the application menu and tap *Preferences*.
3. Tap *Reset Voicemail Count*.

Downloaded from www.Manualslib.com manuals search engine

Section 2E

Media

Your Media and Entertainment Center

In This Section

- Camera (page 130)
- Photos (page 131)
- Videos (page 137)
- YouTube (page 140)
- Music (page 143)
- Amazon MP3 (page 147)

Downloaded from www.Manualslib.com manuals search engine

Camera

Take a Picture

Your phone comes with an easy-to-use 3-megapixel camera with an LED flash. You can use the camera to take pictures, and then use the ***Photos*** app to view them and send them to your friends and family (see “Share a Picture” on page 135). To add a personal touch to your phone, use your pictures as your wallpaper (see “Save a Picture as Wallpaper” on page 135) and as caller ID images (see “Add a Picture to a Contact” on page 134).

1. Open ***Camera*** .

2. The camera is set to automatically determine if the flash is needed. (If you want to change the flash setting, tap AUTO to keep the flash on, and tap again to keep the flash off.)
3. To take the picture in landscape view, turn your phone 90 degrees.
4. Press ***Space*** or tap .

The picture you took is automatically saved in JPG format. Keep snapping pictures, and then go to ***Photos*** to look at them and delete the ones you don’t want.

Downloaded from www.Manualslib.com manuals search engine

Look at Pictures

1. After taking a picture, tap the thumbnail of the picture in the lower-left corner of the screen. (This opens the picture in the ***Photos*** application.)
2. Swipe left or right on the screen to view other pictures taken with your phone's camera.

Photos

Look at Pictures

To get pictures on the phone, you can do any of the following:

- Take a picture with your phone's camera (see "Take a Picture" on page 130).
- Copy pictures from your computer (see "Copy Files Between Your Phone and Your Computer" on page 92).
- Receive pictures as email attachments (see "Open Attachments" on page 248).
- Receive pictures as part of a multimedia message (see "Receive and View Text and Multimedia Messages" on page 262).

You can view a picture that is attached to an email if the picture is a JPG, GIF, BMP, or PNG file. You can view a picture that is part of a multimedia message if it's a JPG file. In the ***Photos*** application, you can view pictures you take with the camera or copy from your computer in JPG, BMP, or PNG format.

You can also look at pictures on the Web directly in the Web browser (see "Web" on page 277).

Downloaded from www.Manualslib.com manuals search engine

1. Open *Photos* .
2. Tap the album containing the picture, and tap the thumbnail of the picture. (The ***Photo roll*** album contains pictures taken with your phone's camera.)

3. Swipe left or right on the screen to look at other pictures in the album.

Organize Your Pictures Into Albums

The Photos application contains the following default albums:

- ***All images:*** Contains all pictures in JPG, BMP, and PNG format on your phone.
- ***Wallpapers:*** Contains pictures that come with your phone, which you can use as the wallpaper in Card view. You can also use any other picture in Photos as wallpaper.

Did You Know?	*If you use one of your own pictures as wallpaper (see "Save a Picture as Wallpaper" on page 135), that picture is not saved to the* **Wallpapers** *album.*

The Photos application creates additional albums automatically as you add the following types of pictures to your phone:

- ***Photo roll:*** Contains all pictures you take with your phone's camera.

Downloaded from www.Manualslib.com manuals search engine

- ***Messaging:*** Contains any pictures in JPG, BMP, or PNG format that you save from a multimedia message.
- ***Downloads:*** Contains any pictures in JPG, BMP, or PNG format that you save from an email attachment.

You can assign any pictures on your phone to one of these albums or to an album you create. To create and assign pictures to albums, you must put your phone into USB Drive mode. You then create the albums and move pictures into them using your computer.

1. Connect your phone and your computer using the ***USB cable***.
2. On your phone, tap ***USB Drive***. (If prompted, tap ***OK***. On your computer, your phone appears as a removable drive.)

Note	*On a Windows computer, if the* Found New Hardware *wizard opens, click* Cancel *to close the wizard.*

3. Open ***Computer*** (Windows Vista), ***My Computer*** (Windows XP), or the ***Finder*** (Mac), and double-click the drive representing your phone.
4. To create an album, use your computer's controls for creating a new folder. (To be sure the ***Photos*** application can find the album, create it at the root level of the drive representing your phone, not as a subfolder of another folder.)

Note	*The Photos application displays an album you create only if the album contains at least one picture in one of the supported picture formats: JPG, BMP, or PNG.*

5. Assign pictures to albums using your computer's controls to copy or move items. (It is easiest to find the pictures you want by displaying them as thumbnails.)
6. On a Windows computer, to end the connection safely, right-click the drive representing your phone and click ***Eject***. (On a Mac computer, from your desktop, drag the drive representing your phone to the ***Trash***. Trash changes to ***Eject***.)

Downloaded from www.Manualslib.com manuals search engine

7. Disconnect the ***USB cable*** from the computer when the USB Drive screen is no longer displayed.

Did You Know?	*To delete an album, connect your phone to your computer and tap* **USB Drive**. *From your computer, open the drive representing your phone and delete the album.*

Add a Picture to a Contact

You can also add a picture to a contact in the Contacts application (see "Add a Photo to a Contact" on page 160).

1. Tap a picture thumbnail to view it full-screen.
2. If the photo header is hidden, tap the screen to display it.
3. Tap and tap ***Assign to contact***.
4. Enter the contact name and tap the contact.
5. (Optional) Do either or both of the following:

- To enlarge a face or other portion of the picture, zoom in by making the pinch-out gesture.

Downloaded from www.Manualslib.com manuals search engine

- To capture the portion of the picture you want for the contact photo, tap and hold the picture, and then drag the portion you want to the center of the onscreen box. This portion becomes the contact photo.

6. Tap ***Set To Contact***.

Save a Picture as Wallpaper

Your wallpaper appears as the background in ***Card view***.

1. Tap a picture thumbnail to view it full-screen.
2. If the photo header is hidden, tap the screen to display it.
3. Tap and tap ***Set wallpaper***.
4. Do either or both of the following:
   - To zoom out or in on a part of the picture, pinch in or out on the picture.
   - To capture the portion of the picture you want to use as wallpaper, tap and hold the picture, and then drag the portion you want to the center of the onscreen box. This portion becomes the wallpaper.
5. Tap ***Set Wallpaper***.

Share a Picture

You can send a picture to other picture-enabled devices or to an email address as an attachment.

1. Tap a picture thumbnail to view it full-screen.
2. If the photo header is hidden, tap the screen to display it.
3. Tap and tap ***Share via email*** or ***Share via MMS***.
4. Create the email or multimedia message.

Tip	*You can also copy pictures from your phone to your computer (see “Copy Files Between Your Phone and Your Computer” on page 92).*

Downloaded from www.Manualslib.com manuals search engine

Upload a Picture to the Web

To upload a picture to a Web service such as Facebook or Photobucket, you must already have an account with the service, and you must have the account set up on your phone. You can set up the account on your phone during the upload process, as described in this procedure, or you can set it up at any other time (see "Set Up an Online Pictures Account on Your Phone" on page 136).

1. Tap a picture thumbnail to view it full-screen.
2. If the photo header is hidden, tap the screen to display it.
3. Tap and tap ***Upload***.
4. Do one of the following:
   - If you have already set up your picture Web service on your phone, tap the name of the service you want to use.
   - If you have not set up your picture Web service on your phone, tap ***Add An Account*** and tap the account type. Enter your username and password and tap ***Sign In***.

Set Up an Online Pictures Account on Your Phone

To upload pictures to an account you have with a Web service such as Facebook or Photobucket, you must set up the account on your phone.

Did You Know?	*If you set up a Facebook account in the Photos application, your Facebook contacts and calendar events appear in the Contacts and Calendar applications on your phone also. Likewise, if you set up a Facebook account in Contacts or Calendar, the account is already set up to allow you to upload pictures from Photos.*

1. Open ***Photos*** .

Downloaded from www.Manualslib.com manuals search engine

2. Open the application menu and tap ***Preferences & Accounts***.

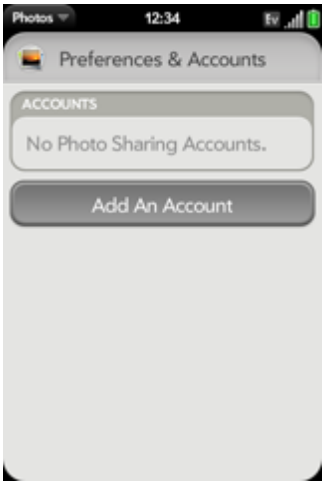

3. Tap ***Add An Account***, and tap the type of account you want to add.
4. Enter your account username and password and tap ***Sign In***.

Delete a Picture

1. Tap a picture thumbnail to view it full-screen.
2. If the photo header is hidden, tap the screen to display it.
3. Tap .
4. Tap ***Delete*** to confirm.

Videos

Watch a Video

To get videos on your phone, you can do any of the following:

- Copy videos from your computer (see “Copy Files Between Your Phone and Your Computer” on page 92).

Downloaded from www.Manualslib.com manuals search engine

- Receive videos as email attachments (see “Open Attachments” on page 248).
- Receive pictures as part of a multimedia message (see “Receive and View Text and Multimedia Messages” on page 262).

You can watch videos that you receive as email attachments or that you copy from your computer in the MPEG4, H.263, H.264, MP4, M4V, 3GP, 3GPP, 3G2, and 3GP2 formats. You can view videos you open in a multimedia message in MP4 format. Videos play on your phone in landscape orientation.

Use the ***YouTube*** application to view YouTube videos (see “YouTube” on page 140).

Note	*Before you put videos on your phone, make sure you have enough storage space on your phone to fit the file. Open* **Device Info** *and look at the* **Available** *field under* **Phone**.

1. Open ***Videos*** .

2. Tap the video.

Downloaded from www.Manualslib.com manuals search engine

Use Video Playback Controls

Playback controls automatically appear when you start a video. They disappear after a few seconds. Tap the video to manually display or dismiss the controls.

- Play.
- Pause.
- Move forward or backward (tap and hold the slider, then drag forward or backward).
- Switch between full-screen view and original size.

Tip	*To skip ahead 30 seconds in a video, flick left to right on the screen. To jump back 10 seconds, flick right to left.*

Downloaded from www.Manualslib.com manuals search engine

Delete a Video

To delete a video file from your phone, you must put your phone in USB Drive mode and delete the video using your computer.

1. Connect your phone and your computer using the ***USB cable***.
2. On your phone, tap ***USB Drive***. (If prompted, tap ***OK***. On your computer, your phone appears as a removable drive.)

Note	*On a Windows computer, if the* Found New Hardware *wizard opens, click* Cancel *to close the wizard.*

3. Open ***Computer*** (Windows Vista), ***My Computer*** (Windows XP), or the ***Finder*** (Mac), and double-click the drive representing your phone.
4. Delete the video using your computer's controls.
5. On a Windows computer, to end the connection safely, right-click the drive representing your phone and click ***Eject***. (On a Mac computer, from your desktop, drag the drive representing your phone to the ***Trash***. Trash changes to ***Eject***.)
6. Disconnect the ***USB cable*** from the computer when the USB Drive screen is no longer displayed on your phone.

YouTube

Watch a Video

YouTube on your phone lets you watch videos available online at the YouTube website. Videos are displayed on your phone in landscape orientation.

Downloaded from www.Manualslib.com manuals search engine

1. Open *YouTube* .
2. Do one of the following:

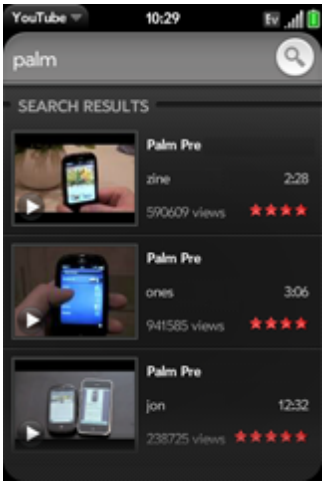

   - *To search for a video:* Tap *Search All Videos*, enter a search term, and press *Enter* or tap .
   - *To display the most highly rated videos:* Tap *Videos* and tap *Popular*.
   - *To display the most frequently viewed videos:* Tap *Videos* and tap *Most Viewed*.
   - *To display videos you have recently viewed:* Tap *Videos* and tap *History*.
3. When the video you want appears, do one of the following:
   - *To view the video:* Tap the video thumbnail.
   - *To view video details:* Tap the text to the right of the video thumbnail.

Did You Know?	*Some videos can be viewed in YouTube on your computer only. For those videos, you can view video details on your phone, but if you try to play the video on your phone, an error message appears.*

Downloaded from www.Manualslib.com manuals search engine

Use Video Playback Controls

Play.

Pause.

Move forward or backward (tap and hold the slider, then drag forward or backward).

Switch between full-screen view and original size.

Find Related Videos

Find videos from the same author or otherwise related to the one you selected.

On the video details screen (see “Watch a Video” on page 140), do one of the following:

- ***View videos from the same author:*** Tap ***More*** > ***More From This Author***.
- ***View related videos:*** Tap ***More*** > ***Related Videos***.

Share a Video

Send a friend a link to a YouTube video.

1. On the video details screen (see “Watch a Video” on page 140), tap ***Share***.
2. Tap ***Email*** or ***Text Message***.
3. Address and send the message.

Downloaded from www.Manualslib.com manuals search engine

Music

Listen to Music

You can listen to music through the speaker on the back of your phone, through the stereo headset included with your phone, or through headphones (sold separately).

To get music onto your phone, you can do any of the following:

- Copy music files from your computer (see “Copy Files Between Your Phone and Your Computer” on page 92).

Tip	*If you use Windows Media Player on your computer, you can use that app’s Sync feature to transfer music between your computer and your phone. You can also download the Palm Music Assistant, which lets you copy music from your phone directly to iTunes on your computer. Go to palm.com/music-assistant.*

- Receive music files as email attachments (see “Open Attachments” on page 248).
- Receive music files as part of a multimedia message (see “Receive and View Text and Multimedia Messages” on page 262).

You can also listen to streaming music from the Web directly in the Web browser (see “Web” on page 277).

You can play music that you copy from your computer or stream from the Web in the following formats: MP3, AAC, or AAC+ format. For files received as email attachments, you can play files in the MP3, AAC, AAC+, WAV, or AMR format. For files received in a multimedia message, you can play files in the MP3 format.

1. Open ***Music*** .
2. If the ***Music*** application finds no music files on your phone, tap one of the following:
   - ***Get My Music:*** Read information about how to get music on your phone.
   - ***Amazon MP3:*** Open the Amazon MP3 application to purchase songs (see “Amazon MP3” on page 147).

Downloaded from www.Manualslib.com manuals search engine

3. Do one of the following:

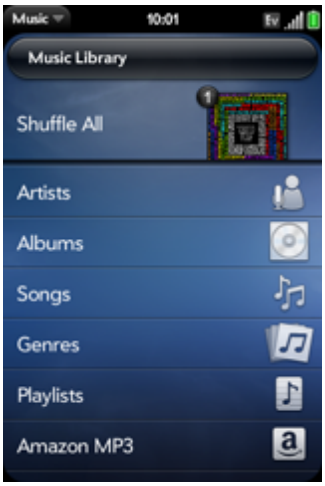

- ***Listen to all songs on your phone:*** Tap ***Shuffle All***.
- ***Listen to a specific song:*** Tap ***Artists***, ***Albums***, ***Songs***, ***Genres***, or ***Playlists*** to search that category. Continue making selections until the song you want appears. Tap the song name.
- ***Listen to all songs from an artist:*** Tap ***Artists*** and tap the artist name. To listen to the artist's songs in the order they are displayed onscreen, tap the first song. The songs play one after the other in sequence. To listen to the songs in random order, tap ***Shuffle All***.
- ***Listen to an album:*** Tap ***Albums*** and tap the album name. To listen to the album's songs in the order they are displayed onscreen, tap the first song. The songs play one after the other in sequence. To listen to songs in random order, tap ***Shuffle All***.
- ***Listen to all songs in a genre:*** Tap ***Genres*** and tap the genre name. To listen to the songs in the order they are displayed onscreen, tap the first song. The songs play one after the other in sequence. To listen to the songs in random order, tap ***Shuffle All***.

Downloaded from www.Manualslib.com manuals search engine

- ***Browse a music store to preview or purchase songs (if available):*** Tap the music store name. Continue making selections until the song you want appears. Tap the song name.

Did You Know?	*Music continues to play in the background if you switch to another application, turn off the screen, or slide the* **ringer** *switch off.*

Use Music Playback Controls

Play.

Pause.

Rewind.

Fast forward.

Shuffle current playlist.

Repeat. Tap once to repeat the current song. Tap again to repeat the entire playlist.

Downloaded from www.Manualslib.com manuals search engine

Did You Know?	*If you stop playback of a podcast, speech, spoken word performance, netcast, or audiobook, when you play the item again, playback resumes at the point it was stopped.*

Tip	*If you leave the Music app, the playback controls continue to appear at the bottom of the screen. You can use the controls even if the screen is locked.*

Switch the Now Playing Display

You can switch the display to show the songs you are listening to by name or by album cover art.

- While you are listening to a song, tap the header to switch between ***Playlist*** view and ***Album Art*** view.

Search for Related Songs or Content

When you are listening to a song, you can search the Web for related items such as songs by the same artist or from the same album.

1. While listening to a song, open the application menu.
2. Tap one of the Web search options (such as ***Amazon MP3*** or ***YouTube***), and then tap the info you want.

Change the Order of Items in the Now Playing List

- In ***Playlist*** view, tap and hold a song name. Drag the song to move it to a new location in the list.

Remove a Song From the Now Playing List

- In ***Playlist*** view, throw the song name off the side of the screen. This does not delete the song file from your phone.

Downloaded from www.Manualslib.com manuals search engine

Delete a Song

To delete a song file from your phone, you must put your phone in USB Drive mode and delete the song using your computer.

1. Connect your phone and your computer using the ***USB cable***.
2. On your phone, tap ***USB Drive***. (If prompted, tap ***OK***. On your computer, your phone appears as a removable drive.)

Note	*On a Windows computer, if the* Found New Hardware *wizard opens, click* Cancel *to close the wizard.*

3. Open ***My Computer*** (Windows XP), ***Computer*** (Windows Vista), or the ***Finder*** (Mac), and double-click the drive representing your phone.
4. Delete the song using your computer's controls.
5. On a Windows computer, to end the connection safely, right-click the drive representing your phone and click ***Eject***. (On a Mac computer, drag the drive representing your phone to the ***Trash***. Trash changes to ***Eject***.)
6. Disconnect the ***USB cable*** from the computer when the USB Drive screen is no longer displayed on your phone.

Amazon MP3

Before you can download items using the Amazon MP3 application on your phone, you must have an Amazon account, and you must read and agree to the MP3 Music service terms and conditions.

After you purchase and download items from Amazon MP3, listen to them with your phone's Music application (see "Listen to Music" on page 143).

Downloaded from www.Manualslib.com manuals search engine

Set Up Your Amazon Account

You must be signed in to your Amazon account to download music.

1. Open *Amazon MP3* .
2. Open the application menu and tap ***Sign In***.
3. Enter your email address and password, and tap ***Sign In***. (To purchase songs without needing to enter your password each time, turn on ***Enable 1-Click***®.)

Search for a Specific Song, Album, or Artist

1. Open *Amazon MP3* .
2. Tap ***Search*** and enter the song, album, or artist name.
3. Press ***Enter*** .
4. Do one of the following:

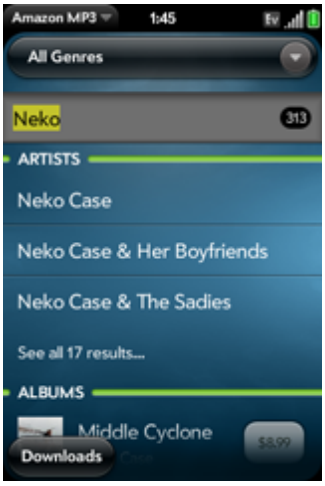

- ***If the item you want appears on the screen:*** Tap the song, album, or artist name. Tapping the name of a song plays the preview; tapping its price gives you the option to buy it (see “Preview and Buy a Song” on page 151).
- ***If the item you want doesn’t appear:*** Tap ***See all [total number of] results*** at the bottom of the Artists, Albums, or Songs section.

Downloaded from www.Manualslib.com manuals search engine

Browse Songs, Albums, Artists, or Genres

1. Open *Amazon MP3* .
2. Do any of the following:
   - *View all songs in a certain genre:* Tap and tap the genre.
   - *View the top 10 new and notable releases:* Swipe left or right on the *New & Notable* album thumbnails.
   - *View the top 100 new releases:* Tap *New releases*.
   - *View the top 100 albums:* Tap *Albums*.
   - *View the top 100 artists:* Tap *Artists*.
   - *View the top 100 songs:* Tap *Songs*.

View Artist Information

1. Search for (see "Search for a Specific Song, Album, or Artist" on page 148) or browse to (see "Browse Songs, Albums, Artists, or Genres" on page 149) an artist, and tap the artist name.
2. Tap the word to the right of the artist name (*Albums*, *Songs*, or *Bio*).
3. Tap to view any of the following:

Important	*Your credit card is charged for the price of an item as soon as you tap* Buy.

Albums: To buy and download an album, tap the album price and tap *Buy*. Tap anywhere else on the album entry to view detailed album information.

Songs: To buy and download a song, tap the song price and tap *Buy*. Tap anywhere else on the song entry to preview the song.

Bio: Tap to read biographical information about the artist.

Downloaded from www.Manualslib.com manuals search engine

View Album Information and Buy an Album

1. Search for (see “Search for a Specific Song, Album, or Artist” on page 148) or browse to (see “Browse Songs, Albums, Artists, or Genres” on page 149) an album, and tap the album name.

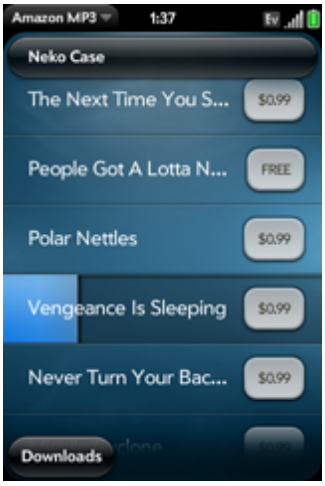

2. To preview a song, tap anywhere on the song entry except the price.
3. Do either of the following:

Important	*Your credit card is charged for the price of an item as soon as you tap* Buy*.*

- Tap the album price and tap ***Buy***.
- Tap a song price and tap ***Buy***.

Downloaded from www.Manualslib.com manuals search engine

Preview and Buy a Song

1. Search for (see “Search for a Specific Song, Album, or Artist” on page 148) or browse to (see “Browse Songs, Albums, Artists, or Genres” on page 149) an album or artist entry containing the song you want.
2. To preview a song, tap anywhere on the song entry except the price.

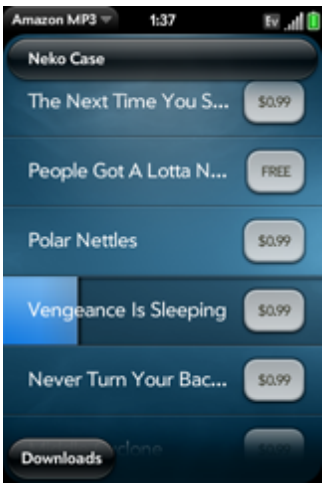

3. Tap the song price and tap ***Buy***.

Important	*Your credit card is charged for the price of an item as soon as you tap* Buy.

Downloaded from www.Manualslib.com manuals search engine

View and Work With Downloaded Items

1. Tap the ***Download*** button on any screen where it appears. (This displays items that you are currently downloading or that you already downloaded.)

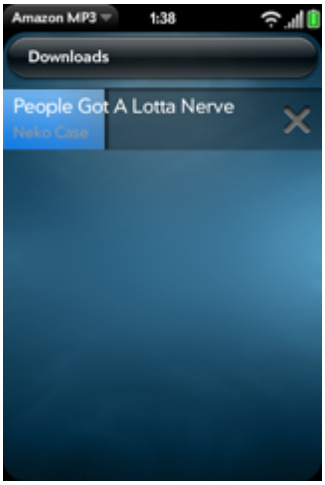

2. To cancel a current download, tap ✕.

After you download an item, listen to it in the ***Music*** application (see “Listen to Music” on page 143).

Downloaded from www.Manualslib.com manuals search engine

Section 2F

Your Personal Information Organizer

Organizer

In This Section

- Contacts (page 154)
- Calendar (page 172)
- Tasks (page 184)
- Memos (page 190)
- Clock (page 193)
- Calculator (page 195)

Downloaded from www.Manualslib.com manuals search engine

Contacts

How Do I Get Names and Other Info into Contacts?

You have a few options for getting contact information to show up in Contacts.

Connect to an online address book through the Palm® Synergy™ feature: If you have an address book in an online account that works with the Synergy feature (for example, Google or Microsoft Exchange ActiveSync), you can set up Contacts on your phone to synchronize and display contacts that you store in the online address book. Set up synchronization the first time you open Contacts (see "Use Contacts for the First Time" on page 156), or anytime after that (see "Customize Contacts" on page 170). After you set up the connection to the online address book, contacts you enter online show up automatically in Contacts, and contacts you enter on your phone sync to the online account.

The Synergy feature makes it easy to synchronize other data from an online account. By setting up synchronization in one app, synchronization of the other apps is automatically set up for you. For example, if you set up your Gmail account in Email before you set up Contacts, when you first open Contacts, you find that your Google contacts are already downloaded. And when you first open Calendar, you find that your Google calendar events are already in your phone's Calendar.

Transfer contacts using the Data Transfer Assistant: When you transfer contacts from desktop software or an old phone, you select which account to assign those contacts to. Look for those contacts in the account you select (see "Transferring Data" on page 95).

Enter a contact directly in Contacts: See "Create a Contact" on page 157 for instructions. You can assign the contact to one of your online address books—if you do, it synchronizes with the online address book. Or you can create the contact in your Palm profile account, which means it shows up on your phone only. Palm profile contacts are included in the daily backup of your Palm profile information, so you can restore them if they are accidentally erased.

Download vCard info to Contacts: If you get an email or an MMS with a vCard attachment (VCF file format), download the attachment to Contacts. See "Receive vCards" on page 168.

Downloaded from www.Manualslib.com manuals search engine

Linked Contacts

The Synergy feature automatically links contacts from different accounts if it finds data in common between them. For example, if you have a contact in Exchange and in Google for Emily Weeks, your phone links the contacts so that all Emily's info shows up on a single contact screen. You need to open just one view to see all of Emily's info. The actual data remains stored separately with your different providers; it's just assembled in one view on your phone for your convenience.

How can you tell if a contact is linked? Look in the upper-right corner of the contact screen. If you see a stack of photos and a number, that means that you're looking at a linked contact, with combined info from contacts you're storing with separate providers.

1 Tap the stack of photos to see the contacts that are linked.
2 Emily is a contact in your Google online account and in your Palm profile account.
3 Scroll down to see Emily's combined contact info.

You can unlink automatically linked contacts, and you can manually link contacts yourself (see "Link a Contact" on page 164 or "Unlink a Contact" on page 165).

Organizer

Downloaded from www.Manualslib.com manuals search engine

Use Contacts for the First Time

1. Open *Contacts* .

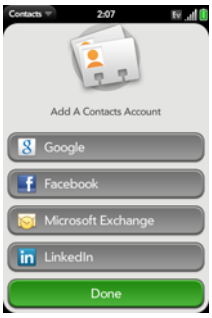

2. Do one of the following:
   - ***To set up your first online account to sync:*** Tap the account type, enter the account information, and tap ***Sign in***.
   - ***To set up a second online account to sync:*** Tap ***Add An Account***, tap the account type, enter the account information, and tap ***Sign In***.
   - ***To open Contacts without creating an online account:*** Tap ***Done***. This opens your Palm profile account, and you can start creating contacts in this account.

Note	*If you add your Facebook or LinkedIn account to Contacts, your friends' Facebook and LinkedIn email addresses show up in Contacts. You cannot change Facebook or LinkedIn info from Contacts on your phone. You also cannot add friends to your Facebook or LinkedIn account from Contacts. To work directly with Facebook or LinkedIn on your phone, go to the Web application (see "Web" on page 277).*

Downloaded from www.Manualslib.com manuals search engine

Create a Contact

You can add a contact to an account. If you don't specify the account, the new contact is added to your default account.

If you are using Contacts for the first time, you go through a few different steps to get or access the contacts on your phone (see "Use Contacts for the First Time" on page 156). Follow this procedure to add contacts directly on your phone after the first time you use Contacts.

1. Open *Contacts* .
2. Tap .
3. (Optional) Tap the account button to the right of ***Name*** to change the account to which the new contact will be added.

Note	*If an account doesn't appear in the list, that's because you can't add data to that account from your phone.*

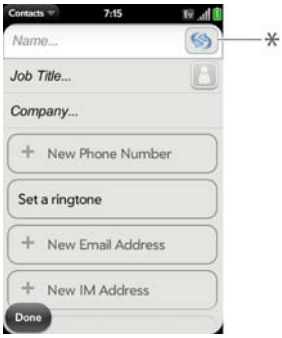

* Account button, showing Palm profile account

Organizer

Downloaded from www.Manualslib.com manuals search engine

4. Tap fields to enter contact details, select a ringtone for that contact, add notes, or add birthday details for the contact. (Scroll to see all of the fields available for contact info.)
5. To add detailed name information—such as a prefix, suffix, or middle name—open the application menu and tap ***Name Details***.
6. In some fields, such as ***New Phone Number***, when you enter the information a label button appears on the right. (Tap the button to change the label for your entry—for example, to identify a number as a mobile or work phone.)

Tip	*When you enter a phone number that requires pauses—for example, a number where you need to enter a password or respond to prompts, you can insert a pause or a stop in the number. To insert a two-second pause, enter a* T *where you want the pause to appear. To insert a stop, enter a* P *where you want the stop to appear. To dial the next set of numbers after the stop, tap the screen.*

Tip	*Use the* Reminder *field to enter that important message or question you have for this contact. The next time you send or receive a call or a message to or from the contact on your phone, the reminder pops up on the screen. You can also add a reminder later (see "Assign a Reminder Message to a Contact" on page 163).*

7. Tap ***Done***.

Find a Contact

1. Open ***Contacts***.
2. Begin typing any of the following:
   - First, middle, or last name
   - First and last initial (no space between)
   - Company
   - Nickname

Downloaded from www.Manualslib.com manuals search engine

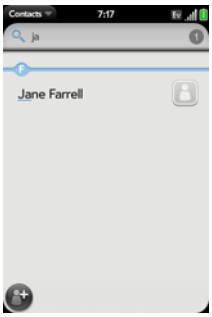

3. For more search options, tap ***Global Address Lookup***. (This option is available if you are using Microsoft Exchange ActiveSync with a Global Address List.)
4. Tap the contact.

Organizer

View, Edit, or Delete Contact Information

1. Open *Contacts* .
2. Search for a contact (see “Find a Contact” on page 158), and tap the contact name.

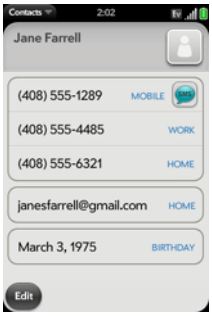

Downloaded from www.Manualslib.com manuals search engine

3. To edit a contact, tap ***Edit***.
4. In a linked contact, tap the account button in the upper-right corner to edit fields specific to that account.

Note	*The fields that make up the contact header (name, photo, job title, company) are unique to each account. You must open a specific account to enter these fields.*

5. Tap fields to add or change information (see “Enter Information in a Field” on page 71).

   Info that's dimmed means it comes from an account that you can't edit on your phone, like Facebook or LinkedIn.

Note	*In a linked contact, when you enter info in a field for the first time, you can assign that info to any account by tapping the account button in the field.*

6. To delete a piece of contact information, such as a phone number, throw the item off the side of the screen, and tap ***Delete***.
7. Tap ***Done***.

Add a Photo to a Contact

The photo you add appears onscreen when this contact calls you.

1. While creating (see “Create a Contact” on page 157) or editing (see “View, Edit, or Delete Contact Information” on page 159) a contact, do one of the following:
   - To add or change the photo in the default account, tap .
   - In a linked contact, to add or change the photo of another account, tap the account button in the upper-right corner and tap the other account (see “Linked Contacts” on page 155).

Downloaded from www.Manualslib.com manuals search engine

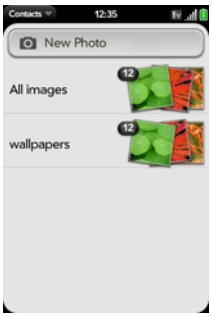

2. Do one of the following:
   - To take a new photo, tap *New Photo*.
   - To use an existing photo, tap the album containing the picture, and tap the picture.

Did You Know?	*If you see a stack of photos in a contact, with a number attached to the stack, that's because it's a linked contact (see "Linked Contacts" on page 155).*

3. (Optional) Do either or both of the following:
   - To enlarge a face or other portion of the picture, zoom in by making the pinch-out gesture.
   - To capture the portion of the picture you want, tap and hold the picture, and then drag the portion you want to the center of the onscreen box. This portion becomes the contact photo.
4. Tap *Attach Photo*.

Downloaded from www.Manualslib.com manuals search engine

Add a Ringtone to a Contact

Select the ringtone you want to hear when this contact calls you.

1. While creating (see “Create a Contact” on page 157) or editing (see “View, Edit, or Delete Contact Information” on page 159) a contact, tap ***Set a ringtone***.
2. Tap the name of the ringtone to select it. (To use a music file as a ringtone, tap and tap the file name.)
3. Tap to preview the ringtone.
4. Tap ***Done***.

Tip	*To change the ringtone for a contact, tap the ringtone and tap* **Change Ringtone**. *Tap* **Delete Ringtone** *to remove the ringtone from the contact.*

Assign a Speed Dial to a Contact

You can assign a speed dial to any contact phone number. You can assign up to 26 speed dials.

Did You Know?	*You cannot assign 1 (the E key) as a speed dial. The number 1 is reserved for dialing your voicemail system.*

1. Open ***Contacts***.
2. Search for a contact (see “Find a Contact” on page 158), and tap the contact name.

Downloaded from www.Manualslib.com manuals search engine

3. Open the application menu and tap *Set Speed Dial*.

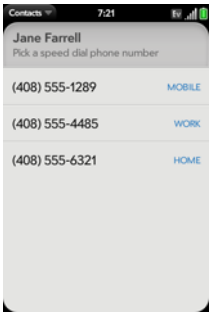

4. Tap the phone number you want to assign a speed dial to, and then tap the key to use as a speed dial. (You may have to scroll to find the key you want.)

Tip	*To assign a currently used speed dial key to a new number, follow the steps for setting a new speed dial for the new number. Tap the key to use in step 4, and tap* Reassign To [Name].

Tip	*To remove a speed dial from a number, open the contact, open the application menu, and tap* Set Speed Dial. *Tap the number and tap* Remove Speed Dial [key letter].

Assign a Reminder Message to a Contact

If you have an important message or a question for a contact, you can enter a reminder right on your phone. The next time you and the contact are in touch—whether by phone call, email, or text message/IM—a notification appears showing the contact name and a message bubble. Tap the bubble to view the reminder.

Downloaded from www.Manualslib.com manuals search engine

1. Open *Contacts* .
2. Search for a contact (see “Find a Contact” on page 158), and tap the contact name.
3. Open the application menu and tap ***Add Contact Reminder***.
4. Enter the reminder, and make the back gesture to save it.

Tip	*To remove a reminder message before it pops up as a notification, open the contact, open the application menu, and tap* Add Contact Reminder. *Tap the trash icon.*

Link a Contact

When your phone recognizes matching information in two or more contacts—for example, the same name and phone number—it automatically gathers the info from the two records into a single view that displays all the contact information. You can also manually link contacts. The info for your linked contacts appears combined only on your phone—the actual info is kept separate and distinct in the accounts it came from.

Important	*To maintain the integrity of your contact data, it's important that you link only one person's contact info in different accounts. For example, if you have contact info for Emily Weeks in Google, Facebook, Microsoft Exchange, and your Palm profile account, go ahead and link all four contacts into a linked contact. But don't link Emily's contact info with her sister Allison's.*

1. Open *Contacts* .
2. Search for a contact (see “Find a Contact” on page 158), and tap the contact name.
3. In the open entry, tap the contact name in the header, and tap ***Link more profiles***.

Downloaded from www.Manualslib.com manuals search engine

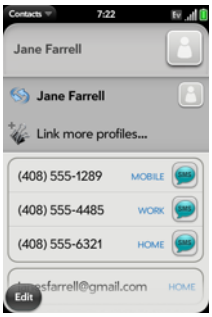

4. Search for the contact (see “Find a Contact” on page 158) and tap it to link the two contacts.
5. After you create the link, be sure the linked contact appears in your Contacts list under the name you’re most likely to search for and recognize (and not, say, under a person’s IM screen name, which can be unrelated to their real name). To do this, tap the contact name you want to appear, and tap ***Set As Primary Profile***.

Note	*When you search for a contact using universal search (see “Use Universal Search” on page 76), the search feature looks through primary profile information only.*

Unlink a Contact

1. Open ***Contacts***.
2. Search for a contact (see “Find a Contact” on page 158), and tap the contact name.
3. Tap the contact name in the header, and tap the contact you want to unlink.
4. Tap ***Unlink This Profile***.

Downloaded from www.Manualslib.com manuals search engine

Add a Contact Entry to the Launcher

Assign your favorite contacts to the ***Launcher***, so you can open them directly from that location.

1. Open ***Contacts***.
2. Search for a contact (see “Find a Contact” on page 158), and tap the contact name.
3. Open the application menu and tap ***Add to Launcher***.
4. (Optional) Edit the first and last name as you want them to appear in the Launcher.
5. Tap ***Add To Launcher***. To see the contact in the Launcher, scroll down on page 1.

If the contact has a picture (see “Add a Photo to a Contact” on page 160), the picture appears as a ***Launcher*** icon. If the contact doesn’t have a picture, the contact name appears in the ***Launcher*** with a placeholder icon. Tap the real or placeholder icon to open the contact.

Get in Touch With a Contact

1. Open ***Contacts***.
2. Tap the contact name.

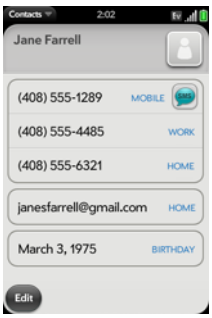

Downloaded from www.Manualslib.com manuals search engine

3. Do any of the following:
   - Tap the appropriate field to call or send an email or instant message to that contact. For example, tap a phone number to call the contact.
   - Tap to send a text message.
   - Tap an address field to view the address on a map.

Copy Contact Details

You can copy a contact's details and paste them into another application. For example, you could paste contact details into a memo or an email.

1. Open *Contacts*.
2. Search for a contact (see "Find a Contact" on page 158), and tap the contact name.
3. Open the application menu and tap *Edit*.
4. Tap *Copy All*.

Send Contacts

You can send all contacts to a hands-free car kit (with Bluetooth), or send a contact with multimedia messaging (MMS) or email.

To send all contacts to a car kit, first ensure that your car kit is discoverable by your phone (see "Connect With a Paired Device" on page 293).

1. Open *Contacts*.
2. Open the application menu and tap *Send All To Car Kit*.

To send one contact:

1. Open *Contacts*.
2. Tap a contact.
3. Open the application menu and tap *Send Contact*.

Downloaded from www.Manualslib.com manuals search engine

4. Tap one of the following:
   - *Send To Car Kit* (Your Bluetooth device needs to be on and detected.)
   - *Send Via MMS* (Messaging opens.)
   - *Send Via Email* (Email opens.)

Receive vCards

You can receive a vCard (VCF file format) with multimedia messaging (MMS) or email.

To get a vCard into Contacts:

1. From the open Email or MMS, tap the attachment name to fully download the attachment, and tap the name again to open the attachment.

   The vCard opens automatically within Contacts.
2. Tap *Add To Contacts*.
3. Tap one of the following:
   - *Save As New*
   - *Add To Existing*

Delete a Contact

1. Open *Contacts* .
2. Tap the contact name.

Note	*Entries that you cannot change on your phone, like those from Facebook and LinkedIn, you also cannot delete from the phone. You must delete them from your account on the web to remove them from your phone.*

Downloaded from www.Manualslib.com manuals search engine

3. Do one of the following:
   - ***Delete an unlinked contact or an entire linked contact:*** Open the application menu and tap ***Delete Contact***. Tap ***Delete All Profiles*** to confirm.

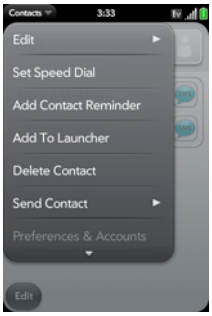

   - ***Delete one entry only in a linked contact:*** Tap the displayed contact name to open the list of all entries in the linked contact. Tap the entry you want and tap ***Delete This Profile***.

If you delete a contact that is assigned to an online account, the contact is deleted in the online account also.

Downloaded from www.Manualslib.com manuals search engine

Customize Contacts

1. Open *Contacts* .
2. Open the application menu and tap ***Preferences & Accounts***.

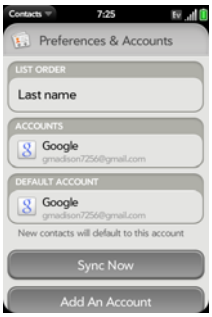

3. Set the following options:

   List Order: Tap the ***Sort Order*** field and select the criteria by which the contact list is sorted. This changes the underlying sort order of the list only—your contacts still appear in the list as First Name Last Name.

Downloaded from www.Manualslib.com manuals search engine

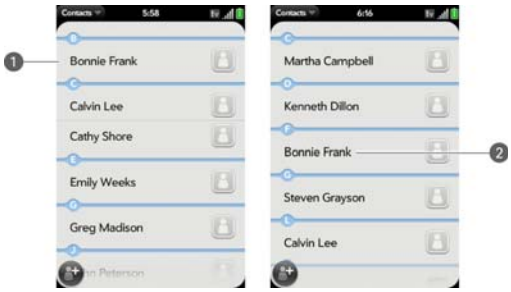

1 Contact list sorted by first name
2 Contact list sorted by last name

Accounts: Tap an account to change login settings and sign in using the new settings.

Default Account: Tap the current default account to change to another account. New contacts you create are assigned to this account unless you specify otherwise.

Sync Now: Tap to force synchronization of your online accounts.

Add An Account: Tap, and then tap an account type. Enter the account information. Before you can set up an account on your phone, you must already have an account online with the provider.

Manually Synchronize Contacts With Your Online Accounts

If you want to get contacts from an online account on your phone immediately—or upload contacts from your phone to the online account—you can do a manual sync. This synchronizes Contacts with all the accounts you have set up on your phone, and it synchronizes your calendar and email with those accounts also.

1. Open *Contacts* .
2. Open the application menu and tap *Preferences & Accounts*.

Downloaded from www.Manualslib.com manuals search engine

3. Tap *Sync Now*.

Stop Synchronization of Contacts With an Online Account

If you synchronize contacts with an online account, you can delete the account from Contacts. For most online accounts, this stops synchronization of contacts only; so if you also sync email or calendar events with that online account, those continue to synchronize. Exchange accounts, however, are an exception to this: If you delete an Exchange Contacts account, Exchange data is removed from all apps (Calendar, Tasks, and Email). For all online accounts, including Exchange accounts, deleting the account from Contacts deletes the associated contact entries from your phone only. The entries are not deleted from the online account.

1. Open *Contacts* .
2. Open the application menu and tap *Preferences & Accounts*.
3. Tap the account name.
4. Tap *Remove Account* and tap *Remove Contact Account*.

Calendar

How Do I Get Events into Calendar?

You have a few options for getting events to show up in Calendar.

Connect to an online calendar through the Palm® Synergy™ feature: If you have a calendar in an online account that works with the Synergy feature (for example, Google or Microsoft Exchange ActiveSync), you can set up Calendar on your phone to synchronize and display events that you store in the online calendar. Set up synchronization the first time you open Calendar (see “Use Calendar for the First Time” on page 174), or anytime after that (see “Customize Calendar” on page 182). After you set up the connection to the online calendar, events you enter online show up automatically in Calendar, and events you enter on your phone sync to the online account.

Downloaded from www.Manualslib.com manuals search engine

Did You Know?	*If you synchronize with your Google calendar, you can add* **Google Weather** *to the calendar on your desktop and have it appear in* **Calendar** *on your phone. On your desktop, log in to your* **Google Calendar** *account and open* **Calendar Settings**. *Click the* **General** *tab, enter your location, and click the temperature unit you want in* **Show weather based on my locations**. *The next time your phone synchronizes with your Google account,* **Google Weather** *appears in* **Calendar** *on your phone.*

The Synergy feature makes it easy to synchronize other data from an online account. By setting up synchronization in one app, synchronization of the other apps is automatically set up for you. For example, if you set up your Gmail account in Email before you set up Calendar, when you first open Calendar, you find that your Google calendar events are already downloaded. And when you first open Contacts, you find that your Google contacts are already in your phone's Contacts app.

Transfer calendar events using the Data Transfer Assistant: When you transfer calendar events from desktop software, you select which account to assign those events to. Look for those events in the account you select (see "How do I get data off my computer?" on page 98).

Enter an event directly in Calendar: See "Create an Event" on page 175 for instructions. You can assign the event to one of your online calendars—if you do, it synchronizes with the online calendar. Or you can create the event in your Palm profile account, which means it shows up on your phone only. Palm profile events are included in the daily backup of your Palm profile information, so you can restore them if they are accidentally erased.

Layered Calendars

Suppose you use the calendar in both Microsoft Exchange ActiveSync and in Google. If you set up both of those accounts to sync with your phone, your phone's Calendar app shows the events from both in a single view—a layered calendar with events that are color-coded to identify which provider they come from. Individual events remain stored separately with your different providers; the events are just assembled in one view on your phone for your convenience.

Downloaded from www.Manualslib.com manuals search engine

If you change an event, the change is made in the appropriate calendar.

You can also look at the events of just one calendar at a time.

Use Calendar for the First Time

1. Open *Calendar* .

2. Do one of the following:
   - ***To set up your first online account to sync:*** Tap the account type, enter the account information, and tap ***Sign in***.
   - ***To set up a second online account to sync:*** Tap ***Add An Account***, tap the account type, enter the account information, and tap ***Sign In***.
   - ***To open Calendar without creating an online account:*** Tap ***Done***. This opens your Palm profile account, and you can start creating events in this account.

Note	*If you choose to sync Calendar with an online Facebook account, your Facebook events show up in Calendar, but you cannot add calendar events to Facebook from the Calendar app. To work directly with Facebook on your phone, go to the Web application (see "Web" on page 277).*

Downloaded from www.Manualslib.com manuals search engine

Create an Event

You can add an event to a calendar account. If you don't specify an account, the new event is added to your default calendar. For information on managing your phone's time settings, see "Date & Time" on page 215.

1. Open *Calendar* .

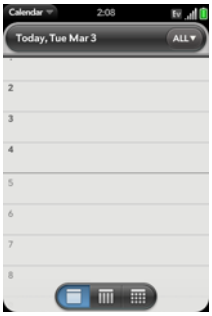

2. Tap *All* or an online account name in the upper-right corner, and tap the calendar you want to use for this event.

Note	*If an account doesn't appear in the list, that's because you can't add data to that account from your phone.*

If you create an event in All Calendars view, the event is created in the calendar set as the default (see "Customize Calendar" on page 182).

3. Go to the day you want (see "Move Around in Calendar" on page 179) and tap a blank time slot.

Organizer

Downloaded from www.Manualslib.com manuals search engine

4. Enter the event name and press *Enter* .

   In Day view, available time slots between events are compressed and labeled ***X Hrs Free***. To expand free time so you can enter an event, tap ***X Hrs Free***.

   Don't look for a save button—your info is automatically saved when you make the back gesture to close the event.

Enter the Event Location

1. While creating an event (see "Create an Event" on page 175), tap to the right of the event name. (To enter the event location after creating an event, tap the event name in Day view.)
2. Tap ***Event location*** and enter the location.

Tip	*Need to find the event location on a map? Open an event that has a location specified in the Event Location field, open the application menu, and tap* Event Location*. Tap either* Show on Map*, which shows the location in* Google Maps*, or* Get Directions*, which gives directions from your current location.*

Schedule a Repeating Event

1. While creating an event (see "Create an Event" on page 175), tap to the right of the event name. (To set an event as repeating after creating the event, tap the event name in Day view.)

Downloaded from www.Manualslib.com manuals search engine

2. Tap ***No Repeat*** and tap the repeat interval.

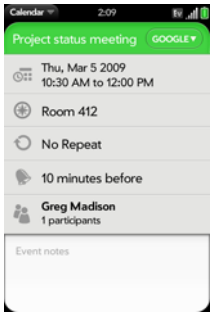

3. (Optional) Tap ***Custom*** to define your own repeat interval and set the end date.

Did You Know?	*To enter a birthday, anniversary, or holiday, create an untimed event. Then select* **Yearly on [date]** *as the repeat interval.*

Add an Alarm to an Event

1. While creating an event (see “Create an Event” on page 175), tap ⓘ to the right of the event name. (To add an alarm after creating an event, tap the event name in Day view.)
2. Tap ***No Reminder*** and tap the interval for the alarm.

Downloaded from www.Manualslib.com manuals search engine

Add a Note to an Event

1. While creating an event (see “Create an Event” on page 175), tap ⓘ to the right of the event name. (To add a note after creating an event, tap the event name in Day view.)
2. Tap ***Event notes*** and enter the note.

Note	*If a phone number is displayed in an event note as an underlined link, you can tap the number to make a call. This displays the Phone dial pad with the number already entered.*

Create an All-day (Untimed) Event

An all-day event such as a birthday appears in your calendar without a specific time slot.

1. Open ***Calendar*** .
2. Go to the day you want, open the application menu and tap ***New > All Day Event***.

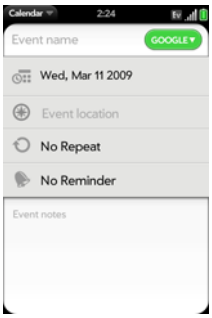

3. Enter the event details.

Downloaded from www.Manualslib.com manuals search engine

Change the Calendar Display

You can change the display of Calendar to show the events from all of your calendars or just the events recorded in one of your calendars.

1. Open *Calendar* .
2. Do either of the following:
   - Tap *All* or a calendar name in the upper-right corner, and tap the calendar view you want: all your calendars in a single view, or a specific calendar only.
   - Tap an icon to see different calendar views:

     Day view

     Week view

     Month view

Organizer

Move Around in Calendar

- ***Next or previous week:*** In Week view, swipe right or left on the screen.
- ***Next or previous day:*** In Day view, swipe right or left on the screen.
- ***Next or previous month:*** In Month view, swipe down or up on the screen.
- ***Go to a specific month, date, or year:*** Open the application menu and tap ***Jump To***. Tap the month, day, and year and tap ***Go To Date***.
- ***Go to today:*** Open the application menu and tap ***Show today***.

Tip	*Another way to go to today from the application menu is to tap* Jump To *and tap* Go To Today.

Quickly Glimpse Your Schedule

- In Day or Week view, slightly drag left or right to peek at the previous/next day or week without changing the current view.
- In Month view, slightly drag up or down to peek at the previous/next month.

Downloaded from www.Manualslib.com manuals search engine

Delete an Event

If you delete an event that is assigned to an online account, the event is deleted in the online account also.

Important	*When you delete a Microsoft Exchange event on your phone, notification is not sent to attendees.*

1. Open *Calendar* .
2. Tap the event name.
3. Open the application menu and tap ***Delete Event***, and then tap ***Delete*** to confirm. (If this event is one of a series of repeating events, tap the option to delete just this event or the entire series.)

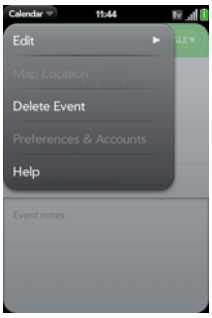

Tip	*Another way to delete an event is to open* Calendar, *press* Option *and tap the event name. If the event is not part of a series of repeating events, tap* Delete. *Otherwise, tap* Delete The Whole Series *or* Delete This Event.

Downloaded from www.Manualslib.com manuals search engine

Respond to an Event Reminder

When an event reminder appears in the notification bar at the bottom of the screen, tap the event description to open the event, or tap one of the following:

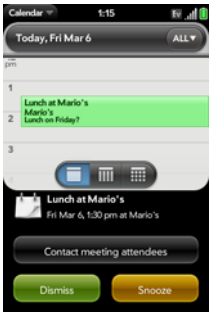

- ***Contact meeting attendees:*** This opens an email message with the participants' addresses added to the To field. The default message text is "Running late, on my way..."—you can edit the text before sending the message.
- ***Dismiss:*** Close the notification.
- ***Snooze:*** The reminder reappears in five minutes.

View Meeting Participants

If you receive a meeting request, you can view the participants.

1. On your calendar, tap the meeting request. (The ***Participants*** field shows the organizer name plus the number of participants.)
2. Tap the number to see the participants' names.
3. (Optional) Tap a participant's name. (If the participant is a contact, the contact entry is displayed. If the participant is not a contact, tap ***Add to Contacts*** to add the participant to your contacts list.)

Downloaded from www.Manualslib.com manuals search engine

Customize Calendar

1. Open *Calendar* .
2. Open the application menu and tap ***Preferences & Accounts***.

3. Set the following options:

   First Day of Week: Select the day that appears as the start of the week in Week view and Month view.

   Day Start and End: Tap to enter the default start and end times that appear in Day view and Week view.

   Default Event Reminder: Tap the time interval for a notification to appear for timed and all-day events. Reminders you set for individual events override the default setting.

   Event Reminders: Select to play a sound when a calendar notification appears.

   Default Event Duration: The default event duration is set to one hour. Tap to change this to ***30 minutes*** or ***2 hours***.

   Accounts: For all calendar accounts, tap an account to change login settings or remove the account. You should change login settings only if you have changed this information

Downloaded from www.Manualslib.com manuals search engine

for the calendar account online—the information you enter here must match the information in the online account.

Calendar View Options: Set the color for events created in that account and show or hide that account in *All Calendars* view.

Default Calendar: If you create an event in *All Calendars* view, the event is assigned to your default calendar. Tap to change the default calendar.

Add An Account: Tap the account type and enter your username and password for the online calendar account. Before you can set up an account on your phone, you must already have an account online with the provider.

Manually Synchronize Calendar With Your Online Accounts

If you want to get calendar events from an online account on your phone immediately—or upload events from your phone to the online account—you can do a manual sync. This synchronizes Calendar with all the accounts you have set up on your phone, and it synchronizes your contacts and email with those accounts also.

1. Open *Calendar* .
2. Open the application menu and tap *Preferences & Accounts*.
3. Tap *Sync Now*.

Stop Synchronization of Calendar With an Online Account

If you synchronize calendar events with an online account, you can delete the account from Calendar. For most online accounts, this stops synchronization of calendar events only; so if you also sync email or contacts with that online account, those continue to synchronize. Exchange accounts, however, are an exception to this: If you delete an Exchange Calendar account, Exchange data is removed from all apps (Contacts, Tasks, and Email). For all online accounts, including Exchange accounts, deleting the account from Calendar deletes the associated events from your phone only. The events are not deleted from the online account.

Downloaded from www.Manualslib.com manuals search engine

1. Open *Calendar* .
2. Open the application menu and tap ***Preferences & Accounts***.
3. Under ***Accounts***, tap the account name.
4. Tap ***Remove Account*** and tap ***Remove Calendar Account***.

Tasks

Create a Task List

All individual tasks you create (see “Create a Task” on page 185) must be placed in a task list. A task list is a group of related to-do items.

1. Open *Tasks* .
2. Tap .

3. Enter the list name in the ***List Name*** field and press ***Enter*** .
4. Create a task (see “Create a Task” on page 185).

Downloaded from www.Manualslib.com manuals search engine

Create a Task

1. Open *Tasks* .
2. Tap the list you want to assign the task to.
3. Tap .

4. Enter the task name in the ***Task name*** field. (To set the task priority, see the next procedure.)

Set Task Priority, Due Date, and Other Details

1. Open *Tasks* .
2. Tap the list containing the task.

Downloaded from www.Manualslib.com manuals search engine

3. Tap ⓘ to the right of the task name.

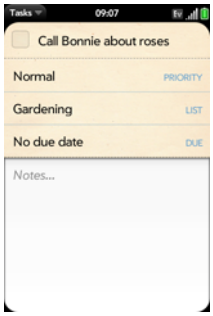

4. Set any of the following:

   Priority: High priority tasks appear in red. Normal priority tasks appear in bold text, and low priority tasks appear in gray text.

   List: Assign the task to a different list.

   Due: Tap ***No due date***, and tap a due date option. If you set a due date, a notification appears at the bottom of the screen on the due date. Tap the notification to open the task.

5. To enter a note about the task, tap ***Notes*** and enter the note.

Tip	*If you add a due date to a task and then want to add more details, tap the date to open the task details view.*

Check Off a Task

1. Tap the list containing the task.

Downloaded from www.Manualslib.com manuals search engine

2. Tap the box to the left of the task name.

Organizer

View Tasks That Are Due Today

1. Open *Tasks* . (The number to the right of the ***All Tasks*** field shows the total number of tasks that are due today or are overdue. The number to the right of each task list name shows the number of tasks in that list that are due today or overdue.)

2. Tap a task list name to view tasks that are due today or overdue.

Downloaded from www.Manualslib.com manuals search engine

Rename a Task

1. On the task list, tap the task name.
2. Enter the new name and press *Enter* .

Filter a Task List

By default, tasks are displayed in the order in which they were created. You can filter a task list to show tasks by due date or priority.

1. Open *Tasks* .
2. Tap the list you want to filter.
3. Tap ***My Order***, ***Due Date***, or ***Priority*** in the upper-right corner, and tap the filter option you want.

Organize Your Tasks

You can change the order of a task list or an individual task.

- Tap and hold the list or task name, and drag the item to the desired position. (Move a task to a different priority group (or number) to change its priority.)

Downloaded from www.Manualslib.com manuals search engine

Set Due Dates for All Tasks in a List

1. Open *Tasks* .
2. Tap the list containing the tasks.
3. Open the application menu and tap *Set Due Date For All*.

4. Tap the month, date, and year, and then tap *Set Due Date*.
5. To remove a previously assigned due date, tap *No Due Date*.

Mark All Tasks in a List Completed/Incomplete

1. Open *Tasks* .
2. Tap the list containing the tasks.
3. Open the application menu and tap *Mark All* and tap *Mark All Completed*/*Mark All Incomplete*.

Hide or Delete All Completed Tasks in a List

1. Open *Tasks* .
2. Tap the list containing the tasks.
3. Open the application menu.

Downloaded from www.Manualslib.com manuals search engine

4. Do one of the following:
   - To hide completed tasks, tap ***Hide Completed***.
   - To delete completed tasks, tap ***Purge Completed Tasks***.

Delete a Task or a Task List

- Throw the task or task list off the side of the screen and tap ***Delete*** to confirm.

Memos

If you used the Data Transfer Assistant and imported notes from Outlook on your desktop to your phone, those notes appear in Memos.

Create a Memo

1. Open ***Memos*** .

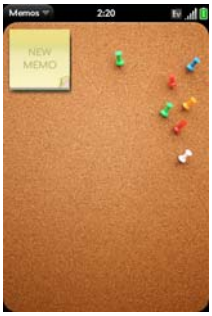

Downloaded from www.Manualslib.com manuals search engine

2. Do one of the following:
   - Tap *New Memo* .
   - Open the application menu and tap *Add A Memo*.
3. Enter the memo text. (Memos are saved as you type.)

Find a Memo

- In Memos, enter any letters or numbers in the memo, and then tap the memo.

Note	*The results of universal search that you access in* Card view *or the* Launcher *do not include memos.*

Edit a Memo

1. Open *Memos* .
2. Tap the memo you want to edit.
3. Tap the screen to position the cursor (see "Text Selection Gestures" on page 52), and edit the memo text.

Change the Color of a Memo

Color-code your memos to help you recognize memos of a certain type. For example, make all your grocery lists blue.

Downloaded from www.Manualslib.com manuals search engine

1. Tap the memo.
2. Tap the lower-right corner of the screen, and tap the new color.

Delete a Memo

1. In an open memo, open the application menu and tap ***Delete***.
2. Tap ***Delete*** to confirm.

Email a Memo

1. In an open memo, open the application menu and tap ***Email Memo***.
2. Enter the email address.

   The subject, “Just a quick memo”, is automatically filled in—you can edit the text before sending the message.
3. Tap .

Downloaded from www.Manualslib.com manuals search engine

Clock

Set an Alarm

Make sure system sounds are turned on and the ringer switch is set to ***On***, so that the alarm will sound when you want it to (see "Select System Sounds and Notifications" on page 224).

Tip	*To change the alarm volume, open* **Sounds & Ringtones** *and tap, hold, and drag the* **Ringtone Volume** *slider.*

1. Open *Clock*.
2. Tap , and then tap .

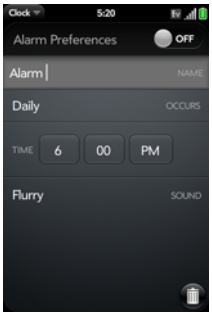

3. Set the following options:

   Alarm Preferences: Tap ***Off*** to turn the alarm on. When an alarm is turned on, the alarm icon is displayed in the lower-right corner of the phone screen. Tap the icon to see alarm details.

   Name: Enter a name for the alarm.

Organizer

Downloaded from www.Manualslib.com manuals search engine

Occurs: Tap to select the alarm frequency.

Time: Tap to set hour, minute, and AM/PM for the alarm.

Sound: Tap to open the list of ringtones, and then tap the name of a ringtone. Tap to preview it. If you have music on your phone, you can select a song as your alarm sound (see "Select a Song as a Ringtone" on page 226).

When an alarm sounds on your phone, tap ***Dismiss*** to stop it or ***Snooze*** to have it sound again in five minutes.

Use Clock to get up at the same time wherever you are, for example, the recurring 7AM alarm you set in San Francisco rings at 7AM in New York. Use Calendar to have your appointment times adjusted so that the notification for a 9AM meeting in San Francisco will sound at noon when you're in New York (see "Create an Event" on page 175).

Manage Clock

1. Open ***Clock***.
2. Tap .

   To change the clock display: Open the application menu and tap ***Themes***. Then tap a theme.

   To change the time: See "Date & Time" on page 215.

Cancel an Alarm

1. Open ***Clock***.
2. Tap , and then tap ***On*** to turn an alarm off.

Change the Alarm Volume

1. Open ***Sounds & Ringtones***.
2. Under ***System Sounds***, drag the ***Volume*** slider.

Downloaded from www.Manualslib.com manuals search engine

Delete an Alarm

1. Open *Clock* .
2. Tap , and then tap the alarm name.
3. Tap .

Calculator

Use Calculator for addition, subtraction, multiplication, and division, and also for determining percent and square root. You can enter numbers in Calculator using either the onscreen keypad or the keyboard.

Perform Calculations

1. Open *Calculator* .
2. Enter numbers and perform calculations.

Note	*Press the* **space bar** *to access additional operations.*

Calculator Buttons

Button	*Description*
C	Clear the current calculation or displayed number.
M+	Add the currently displayed number to memory.
M−	Subtract the currently displayed number from memory.
MR	Display the memory.
MC	Clear the memory.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Section 2G

Your Documents and Other Productivity Files

In This Section

- Doc View (page 198)
- PDF View (page 204)

Documents

Downloaded from www.Manualslib.com manuals search engine

Doc View

With Doc View, you can view Microsoft Word, Excel®, and PowerPoint® files on your phone.

Open a File

You can view a file that you copy from your computer (see "Copy Files Between Your Phone and Your Computer" on page 92) or receive as an email attachment (see "Open Attachments" on page 248). You can view files in DOC, DOCX, TXT, XLS, XLSX, PPT, and PPTX formats.

Note	*Before you put files on your phone, make sure you have enough storage space on your phone to fit the file. Open* Device Info *and look at the* Available *field under* Phone.

1. Open ***Doc View***. (The list of the Microsoft Office files that are on your phone appears onscreen.)

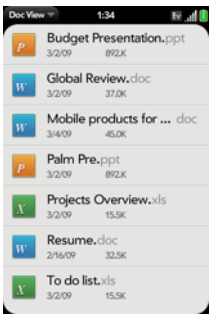

2. To search for a file, enter the name. (Tap the file when it appears.)
3. To open a second file: Open the application menu and tap ***Open***. (Tap the file.)

Downloaded from www.Manualslib.com manuals search engine

Change the Display Size

For information on zooming in and out, see “Zoom Gestures” on page 51.

- *Pinch out to enlarge items onscreen.*
- *Pinch in to decrease the size of items onscreen.*
- *Double-tap the screen to zoom in or out a specified amount.*
- *Turn on horizontal scroll (Word documents only):* Open the application menu and tap ***Wide View***. (In Wide view, text does not wrap on the right side of the screen. You can scroll horizontally or rotate the phone to see more text.)

Find Text in a File

1. With a file open, open the application menu and tap ***Find***.

2. Type the text you want to find and press ***Enter*** or tap . (The first instance of the text appears highlighted.)
3. ***Find the next instance:*** Tap .

   Find the preceding instance: Tap .
4. To exit search, open the application menu and tap ***Find***.

Documents

Downloaded from www.Manualslib.com manuals search engine

Save a File With a New Name

1. With the file open, open the application menu and tap ***Save As***.
2. Enter the new file name and tap ***Save As***.

Share a File

1. With the file open, open the application menu and tap ***Share***.
2. Create the email message and tap .

View File Properties

You can view properties such as the file size, date created or modified, and more.

1. With the file open, tap the file name.

2. Tap the file properties to dismiss them.

Downloaded from www.Manualslib.com manuals search engine

Work With Comments, Endnotes, and Footnotes in a Microsoft Word Document

In an open Word document, comments, endnotes, and footnotes are indicated by highlighted text.

1. Tap the text or footnote indicator to open the comment, endnote, or footnote.

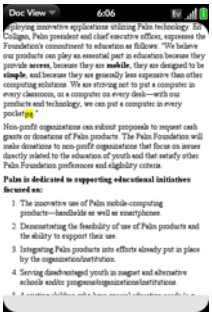

2. To close the comment, endnote, or footnote, tap outside it.

Select a Row or Column in an Excel® Spreadsheet

- Tap the row header or column header.

Resize Rows or Columns in a Spreadsheet

1. Open the application menu and tap ***Resize***.
2. Tap, hold, and drag the row or column divider.

Documents

Downloaded from www.Manualslib.com manuals search engine

Show or Hide Rows or Columns in a Spreadsheet

- ***To hide a row or column:*** Tap the row or column header and tap ***Hide selected***.

- ***To show a hidden row or column:*** Tap, hold, and drag one of the row or column headers to either side of the hidden row or column. Tap ***Show Hidden***.
- ***To display all hidden rows or columns:*** Open the application menu and tap ***Show All Hidden***.

Sort Your Data in a Spreadsheet

- Tap the column header and tap ***Sort ascending*** or ***Sort descending***.

Switch Among Sheets

Do one of the following:

- Tap or to move to the next or previous sheet.
- Open the application menu and tap ***Worksheets***. Tap the sheet.
- Tap the current sheet number in the lower-left corner of the screen. (Enter the page number you want to jump to and press ***Enter***.)

Downloaded from www.Manualslib.com manuals search engine

View Comments in a Spreadsheet

In an open Excel® spreadsheet, comments are indicated by a red triangle in the upper-right corner of the relevant cell.

1. Tap the red comment indicator to open the comment.
2. Tap the comment to close it.

Switch Among Views in a PowerPoint® Presentation

In an open presentation, open the application menu and tap a view.

To return to normal presentation view:

- ***From Outline view***: Tap a slide.
- ***From Notes view***: Open the application menu and tap ***Show Notes***.

Move Around in a Presentation

- ***Go to the next or preceding slide:*** Tap or .
- ***Jump to a different slide:*** Tap the current slide number in the lower-left corner of the screen. (Enter the slide number you want and press ***Enter*** .)

Upgrade to Documents To Go® from DataViz

With Documents To Go® from DataViz, you can create and edit Word, Excel, and PowerPoint files right on your phone, in addition to viewing them.

1. Open ***Doc View*** .
2. Open a document, open the application menu, scroll down the menu if needed, and tap ***Document Editing***.

For more information on Documents To Go, go to *dataviz.com*.

Downloaded from www.Manualslib.com manuals search engine

PDF View

With PDF View, you can view PDF (Adobe Acrobat) files on your phone.

Open a File

You can view a PDF file that you copy from your computer (see “Copy Files Between Your Phone and Your Computer” on page 92) or receive as an email attachment (see “Open Attachments” on page 248).

Note	*Before you put files on your phone, make sure you have enough storage space on your phone to fit the file. Open* Device Info *and look at the* Available *field under* Phone.

1. Open ***PDF View*** . (The list of your files appears onscreen.)
2. To search for a file, type the name. (Tap the file when it appears.)

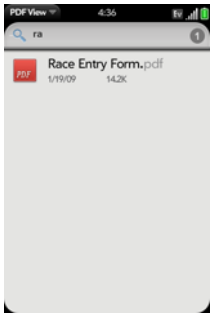

If the PDF file was created with a password, enter the password to open the file.

Downloaded from www.Manualslib.com manuals search engine

3. To open a second file: Open the application menu and tap *Open*. (Tap the file.)

Tip	*To move between open PDFs, press* Center *to go to Card view. Tap the card of the PDF you want.*

Move Around in a File

- *Go to the next or preceding page:* Tap or .
- *Jump to a different page:* Tap the current page number at the bottom of the screen. (Enter the page number you want and press *Enter* .)
- *Move a part of the current page to the center of the display:* Tap and hold on the part of the page you want, and drag it to the center.

Change the Display Size

For information on zooming in and out, see "Zoom Gestures" on page 51.

- *Pinch out to enlarge items onscreen.*
- *Pinch in to decrease the size of items onscreen.*
- *Double-tap the screen to zoom in or out a specified amount.*

Downloaded from www.Manualslib.com manuals search engine

Find Text in a File

1. With a file open, open the application menu and tap ***Find***.

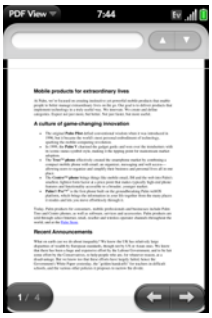

2. Type the text you want to find, and press ***Enter*** or tap . (The first instance of the text appears highlighted.)
3. ***Find the next instance:*** Tap .

   Find the preceding instance: Tap .
4. To exit search, open the application menu and tap ***Find***.

Downloaded from www.Manualslib.com manuals search engine

Save a File With a New Name

1. With the file open, open the application menu and tap ***Save As***.

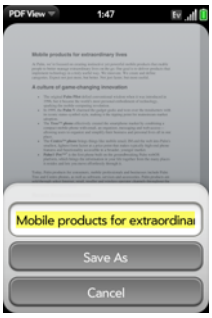

2. Enter the new file name and tap ***Save As***.

Share a File

1. With the file open, open the application menu and tap ***Share***.
2. Create the email message and tap .

Downloaded from www.Manualslib.com manuals search engine

View Bookmarks

If a PDF file was created with bookmarks, you can see the bookmarks on your phone.

1. With the file open, open the application menu and tap ***Bookmarks***. (A checkmark next to a bookmark name identifies the section of the file you are currently viewing.)

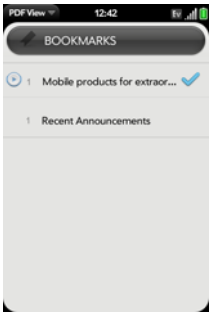

2. Do any of the following:
   - ***To expand a bookmark entry:*** Tap .
   - ***To collapse a bookmark entry:*** Tap .
   - ***To search for a specific bookmark:*** Type the bookmark name.
3. Tap a bookmark to jump to that section of the file.

Downloaded from www.Manualslib.com manuals search engine

Section 2H

Preferences

In This Section

- Backup (page 210)
- Date & Time (page 215)
- Device Info (page 216)
- Regional Settings (page 220)
- Screen & Lock (page 221)
- Sounds & Ringtones (page 224)

Downloaded from www.Manualslib.com manuals search engine

Backup

Back Up Your Information

A Palm profile connects your phone to Palm to get automatic updates, back up your data, and more. You create a Palm profile when you set up your phone.

Your phone backs up the contacts, calendar events, tasks, and memos that are in your Palm profile account, as well as system settings and applications you downloaded to your phone. An automatic backup to your Palm profile of all this information happens every day. So if you ever need to erase the info from your phone, you can restore all your backed-up info. You can turn off automatic backup, and you can also perform a manual backup.

Backup does not affect information stored in online accounts like Google. Information stored in online accounts is synchronized by the online provider at regular intervals. Information stored in an Exchange account is synchronized by your company's Exchange server.

1. Open *Backup* .

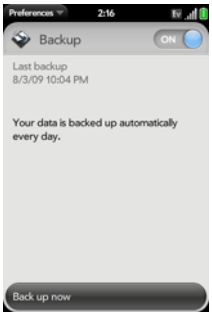

Downloaded from www.Manualslib.com manuals search engine

2. Do any of the following:
   - *Back up your information manually:* Tap *Back up now*.
   - *Turn off automatic backup and delete backed-up information:* Tap *On* to switch backup from On to Off. (Tap *Turn Off And Erase Data*. This deletes all your information on the server. It does not affect the information on your phone.)

Tip	*Go to* Device Info *to delete the information on your phone (see "Erase Data and Reset Your Phone" on page 217).*

   - *Turn on automatic backup if you had previously turned it off:* Tap *Off* to switch Backup from Off to On.

What is Backed Up?

All data backed up to your Palm profile is encrypted, and only you, the profile owner, can access your data. Backed up data cannot be accessed by Palm. Data in your Palm profile account can only be added to or edited on your phone.

The following table summarizes the data that is backed up:

Application	*Backed up*	*Not backed up*
Backup	Backup setting is on by default.	
Bluetooth	*Nothing is backed up.*	
Calendar	Events in your Palm profile account. Username and password for accounts like Google that sync calendar events online. Preferences (see "Customize Calendar" on page 182).	Events in online accounts. Password for Facebook.

Downloaded from www.Manualslib.com manuals search engine

Application	*Backed up*	*Not backed up*
Contacts	Contacts in your Palm profile account. Username and password for accounts like Google that sync contacts online. Preferences (see “Customize Calendar” on page 182).	Contacts in online accounts. Linking relationships between contacts. Original contact photos added from a local image on the phone. Password for Facebook accounts. Speed dials.
Date & Time	***Nothing is backed up.***	
Doc View	***Nothing is backed up.*** Keep a copy of these files on your computer (see “Copy Files Between Your Phone and Your Computer” on page 92).	
Email	Username and password of your email accounts. When you sign in to your Palm profile after your phone is erased, email accounts are restored automatically and synchronized.	Emails, their contents and attachments, their sort order, and account preferences.
Launcher	***Nothing is backed up.***	
Location Services	***Nothing is backed up.***	
Memos	All memos.	
Messaging	Username and password of accounts.	Message contents, attachments, and history.

Downloaded from www.Manualslib.com manuals search engine

Application	*Backed up*	*Not backed up*
PDF View	***Nothing is backed up.*** Keep a copy of these files on your computer (see “Copy Files Between Your Phone and Your Computer” on page 92).	
Phone	***Nothing is backed up.***	
Photos	Username and password of online accounts like Facebook and Photobucket.	***No photos are backed up.*** Keep a copy of your photos on your computer (see “Copy Files Between Your Phone and Your Computer” on page 92).
Regional Settings	***Nothing is backed up.***	
Screen & Lock	***Nothing is backed up.***	
Sounds & Ringtones	***Nothing is backed up.***	
Tasks	Tasks in your Palm profile account. Username and password for accounts like Microsoft Exchange ActiveSync that synchronize tasks online.	Tasks in online accounts.
Third-party apps	Apps you downloaded are downloaded again from App Catalog.	
Wallpaper	***Nothing is backed up.***	
Web	Bookmarks.	
Wi-Fi	***Nothing is backed up.***	

Downloaded from www.Manualslib.com manuals search engine

Update Your Palm Profile Settings

You can edit your profile information at any time either on the website or on your phone. In the event that your phone is lost or stolen, you can go to your Palm profile on *palm.com* and, from there, erase the data on your phone.

Important	*To ensure that the data on your phone is consistent with that stored on your Palm profile, it is recommended that you perform a manual backup of your data after changing any of your Palm profile settings (see "Back Up Your Information" on page 210).*

1. Open ***Backup*** .
2. Open the application menu and tap ***Palm Profile***.
3. Enter your Palm profile password and tap ***Done***.

4. Edit any of the following:

   First Name/Last Name: Change the first name and/or last name associated with your Palm profile.

Downloaded from www.Manualslib.com manuals search engine

Email: Change the email address associated with your Palm profile. (A verification email is sent to the new address. Click the link in the email to verify the new address.)

Security Question/Answer: Tap the current question and tap a new one. (Then tap *Answer* and enter an answer.)

Change Password: Tap *Change Password*. (Enter your new password and confirm it. Tap *Done*.)

Date & Time

You can set your phone to adjust the date and time automatically to the local date and time wherever you are, or you can turn this feature off and enter this information manually.

1. Open *Date & Time* .

2. Set any of the following:

   Time Format: Set whether to use a 12-hour or a 24-hour format.

Preferences

Downloaded from www.Manualslib.com manuals search engine

Network time: Tap *On* or *Off*. (If you turn this option off, select the date and time. If you switch from manual time to network time, there might be a delay before the network time updates on your phone.)

Network time zone: Tap *On* or *Off*. (If you turn this option off, tap the city that appears onscreen. Type the name of a country or city in the time zone you want, and then tap the location.)

Device Info

View System Information

1. Open *Device Info* . (Basic system information is displayed.)
2. To view more detailed system information, tap *More Info*, and tap *Software* or *Hardware*.

Rename Your Phone

1. Open *Device Info* .
2. Tap the *Name* field and enter the new name.

Restart Your Phone

If an application freezes, first try restarting your phone. No files or settings are changed when you restart.

1. Open *Device Info* .
2. Tap *Phone Reset Options* and tap *Restart*.

Note	*If the screen does not respond to taps, press and hold* power *and slide the* ringer switch *three times to restart your phone.*

Downloaded from www.Manualslib.com manuals search engine

Erase Data and Reset Your Phone

If restarting your phone does not solve the problem, you may need to reset the phone. A reset deletes some or all information from your phone (depending on the type of reset you select). After a reset, you must follow the prompts to sign in to your Palm profile again before you can use your phone.

Important	*You should perform a manual backup of your data before resetting your phone (see "Back Up Your Information" on page 210).*

1. Open *Device Info* .
2. Tap *Phone Reset Options*.

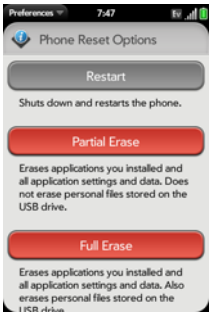

3. Do one of the following:
   - *Erase all data from the phone except stored items such as pictures, videos, and music:* Tap *Partial Erase* twice.
   - *Erase all data from the phone:* Tap *Full Erase* twice. (All data from all accounts is erased from your phone, including information about your Palm profile. But all your data on the Web—in your online accounts and in your Palm profile—is untouched. Perform a full erase when you give your phone to somebody else and you don't

Downloaded from www.Manualslib.com manuals search engine

want that person to be able to access your data. Also, before giving your phone to another person, you must manually delete all the apps you installed, because they reappear on your phone after a full erase (see “Delete an Application” on page 66). After a full erase, sign in to your Palm profile—this restores your Palm profile data and information from online accounts, but not your stored files such as pictures, videos, and music. You can also sign in to your Palm profile on a new phone and restore your data to the new phone.)

Run Quick Tests

If you are troubleshooting your device with a support agent, you can run Quick Tests to get diagnostic information. If you need more information after running Quick Tests, you can run one or more Interactive Tests (see “Run Interactive Tests” on page 218).

1. Open *Device Info* .
2. Tap *More Info*.
3. Open the application menu and tap *Quick Tests*.
4. Work with the support agent to view and report the test results.

Run Interactive Tests

If you are troubleshooting your device with a support agent and need more information after running Quick Tests (see “Run Quick Tests” on page 218), you can run one or more Interactive Tests.

1. Open *Device Info* .
2. Tap *More Info*.
3. Open the application menu and tap *Interactive Tests*.
4. Work with the support agent to run and view results from one or more tests.

Downloaded from www.Manualslib.com manuals search engine

Use Certificate Manager

Certificates are digital documents that are used to authenticate and exchange information on networks. Certificates can be issued for a user, a device, or a service.

Add a Certificate from USB Drive Storage

You can install a certificate that is located in the USB Drive storage on your phone. To copy a certificate into USB Drive storage, see "Copy Other Types of Files Between Your Phone and Computer" on page 93.

1. Open ***Device Info***.
2. Tap ***More Info***.
3. Open the application menu and tap ***Certificate Manager***.

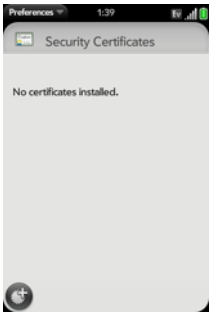

4. Tap and tap the certificate name.

Add a Certificate from an Email Attachment

Open the email attachment (see "Open Attachments" on page 248), and then tap ***Trust Certificate***.

Downloaded from www.Manualslib.com manuals search engine

View Certificate Details

Only user-installed certificates can be viewed.

1. Open *Device Info* .
2. Tap *More Info*.
3. Open the application menu and tap *Certificate Manager*.
4. Tap the certificate name.

Delete a Certificate

Only user-installed certificates can be deleted.

1. Open *Device Info* .
2. Tap *More Info*.
3. Open the application menu and tap *Certificate Manager*.
4. Tap the certificate and tap *Delete Certificate*.

Regional Settings

Language

You can set your phone display to any language available for the device.

1. Open *Regional Settings* .
2. Tap the language in the *Language* field, and then tap a language.
3. If a region list is displayed, tap the region.
4. Confirm you want to use the new language, or revert to the original language.

Your phone restarts after you select a new language. You do not lose any data or applications.

Downloaded from www.Manualslib.com manuals search engine

Formats

You can set your phone to format numbers, currency, date, and time to reflect your country's style.

1. Open *Regional Settings* .
2. Tap the country name.
3. Do any of the following:
   - Type the name of the country, and when it appears, tap it.
   - Scroll down to find a country, and then tap it.
4. Confirm you want to change the format, or tap *Cancel*.

Your phone restarts after you select a new country format. You do not lose any data or applications.

Screen & Lock

Change Screen Brightness

1. Open *Screen & Lock* .
2. Under *Screen*, tap, hold, and drag the *Brightness* slider to the preferred level.

Set the Interval for Turning the Screen Off Automatically

By default, your screen turns off after one minute of inactivity to save battery power. You can change this interval.

1. Open *Screen & Lock* .
2. In *Turn off after*, tap the number of seconds or minutes.

Change Your Wallpaper

Your wallpaper is the screen background in *Card view*. You can customize the wallpaper to show a favorite picture.

Downloaded from www.Manualslib.com manuals search engine

1. Open *Screen & Lock* .
2. Tap *Change Wallpaper*.
3. Do one of the following:
   - *Use an existing picture as the background:* Tap the album containing the picture, and tap the picture.
   - *Use a new picture as the background:* Tap *New Photo* and take the picture.
4. (Optional) Do either or both of the following:
   - To zoom out or in on a part of the picture, pinch in or out on the picture.
   - To capture the portion of the picture you want to use as wallpaper, tap and hold the picture, and then drag the portion you want to the center of the onscreen box. This portion becomes the wallpaper.
5. Tap *Set Wallpaper*.

Turn Advanced Gestures On/Off

Turning on advanced gestures gives you two new gestures, previous and next, and also changes the way you make the back gesture.

- *New gestures:* The previous and next gestures let you move among your open applications without first going to *Card view*. The new previous gesture is a full swipe from left to right across the entire length of the gesture area. The new next gesture is a full swipe from right to left across the entire length of the gesture area. Use these gestures when you have more than one app open and an app is displayed full-screen. By making the previous and next gestures you go from full-screen view to full-screen view of each app. The order of applications is determined by the order that you opened them or arranged them in *Card view*.
- *Change to back gesture and to the forward gesture in Web:* The back gesture still goes from right to left in the gesture area, but you must make a shorter swipe. The forward gesture in *Web* also requires a shorter swipe.

Downloaded from www.Manualslib.com manuals search engine

1. Open *Screen & Lock* .

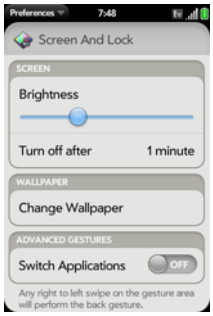

2. In *Switch Applications*, tap *On* or *Off*.

Set Options for Unlocking the Screen

The screen locks five seconds after it turns off automatically, or immediately if you turn the screen off manually. Use Secure Unlock if you want to require a PIN or a password to unlock the screen.

Tip	*If your company issued your phone to you, check with your system administrator whether the company has its own settings for locking and unlocking the screen of your phone.*

1. Open *Screen & Lock* .
2. *To turn Secure Unlock on:* In *Secure Unlock*, tap *Simple PIN* or *Password* and do one of the following:

   Simple PIN: Enter a four-digit PIN. (This is a PIN that you make up. Enter the PIN again to confirm.)

Preferences

Downloaded from www.Manualslib.com manuals search engine

Password: Enter a password containing any combination of letters and numbers. (Enter the password again to confirm.)

Important	*Be sure to write down your PIN or password and keep it somewhere safe. If you forget your PIN or password, you need to remotely reset your phone and may lose data.*

3. (Optional) Under ***Notifications***, tap ***On*** or ***Off*** to set whether notifications are displayed when the screen is locked.
4. ***To turn Secure Unlock off:*** In ***Secure Unlock***, tap ***Off***. (Enter the PIN or password.)

Tip	*To change your PIN or password, in* Secure Unlock*, tap* Change PIN *or* Change Password*. Enter the old PIN/password and the new PIN/password.*

Sounds & Ringtones

Select System Sounds and Notifications

You can turn system sounds such as ringtones, transition sounds, and notifications on or off. You can also set the volume for system sounds.

Tip	*Sliding the ringer switch off turns off system sounds, including alarms you set in* Clock*, regardless of the settings you select here.*

Downloaded from www.Manualslib.com manuals search engine

1. Open *Sounds & Ringtones* .

2. In ***Ringer Switch Off***, tap ***On*** or ***Off*** to set whether your phone vibrates when you slide the ringer switch off.
3. Under ***Ringer Switch On***, set any of the following:

   Ringtone: Select the ringtone for incoming calls (see "Select the Ringtone for Incoming Calls" on page 226). (Tap, hold, and drag the ***Ringtone Volume*** slider to set the ringtone volume.)

   System Sounds: Set whether to turn on systemwide sounds for general actions such as transitions and alarms set in ***Clock***. (Tap, hold, and drag the ***Volume*** slider to set the system sounds volume.)

   Vibrate: Set whether your phone vibrates as well as plays a ringtone when you slide the ringer switch on.

Downloaded from www.Manualslib.com manuals search engine

Select the Ringtone for Incoming Calls

The ringtone you select here applies globally to all incoming calls. You can also set a unique ringtone for a contact (see “Add a Ringtone to a Contact” on page 162).

1. Open *Sounds & Ringtones* .
2. Tap the displayed ringtone to open the full list of tones.
3. Tap the name of the ringtone to select it.
4. Tap to listen to the ringtone.
5. To set the ***Ringtone Volume***, tap, hold, and drag the slider.

Select a Song as a Ringtone

You can add the first few seconds of a song as the ringtone for your phone.

The ringtone you select here applies globally to all incoming calls. You can also set a unique ringtone for a contact (see “Add a Ringtone to a Contact” on page 162).

1. Open *Sounds & Ringtones* .
2. Tap the displayed ringtone.
3. Tap .
4. Tap the song title to add it to your list of ringtones. (Tap to the right of a song title to preview it.)
5. Make the back gesture to return to your list of ringtones.
6. Tap the name of the song to add it as your ringtone.
7. To set the ***Ringtone Volume***, tap, hold, and drag the slider.

Downloaded from www.Manualslib.com manuals search engine

Section 3

Web and Data Services and Other Wireless Connections

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Section 3A

Using Web and Data Services

In This Section

- Get Started With Data Services (page 230)
- Access Data Services (page 230)
- Use Sprint TV® (page 231)
- NASCAR Sprint Cup MobileSM (page 232)
- NFL Mobile Live (page 233)

Downloaded from www.Manualslib.com manuals search engine

Get Started With Data Services

With your Sprint service, you are ready to start enjoying the advantages of data services. To sign up for data services or to access complete instructions, visit *sprint.com*. For information on charges associated with the features of Sprint's data services, refer to your Sprint service plan.

Enable Data Services

The first time your activated Palm® Pre™ phone is turned on, a one-time setup process occurs automatically. You do not need to do anything. If the setup process fails, call Sprint Customer Service at 1-888-211-4727 from another phone for assistance.

Access Data Services

Data Services User Name

When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number followed by "@sprintpcs.com." (For example, the third John Smith to sign up for Sprint services might have jsmith003@sprintpcs.com as his user name.)

When you use data services, your user name is submitted to identify you to the Sprint National Network.

Your user name is automatically programmed into your phone. You don't have to enter it. When your phone is enabled with data services, your user name automatically appears on the ***Device Info*** screen.

To find your user name:

- Open ***Device Info*** and tap ***More Info***. (Your data services user name appears under ***NAI***.)

Downloaded from www.Manualslib.com manuals search engine

Data Services Symbols on Your Screen

When you are connected to data services, a data connection icon appears at the top of the screen. See “What Are All Those Icons?” on page 120 for a description of the various data connection icons.

Data Services Billing Information

See your service plan or contact Sprint for details on data services billing.

Use Sprint TV®

With ***Sprint TV®***, you can watch live TV on the go, right on your phone. Accessing your ***Sprint TV*** channels is as easy as using the remote control in your living room. Browse through the available free channels or subscribe to one of the premium offerings. Wherever you go on the Sprint National Network, you can get more out of your ***Sprint TV*** service.

1. Open ***Sprint TV*** .

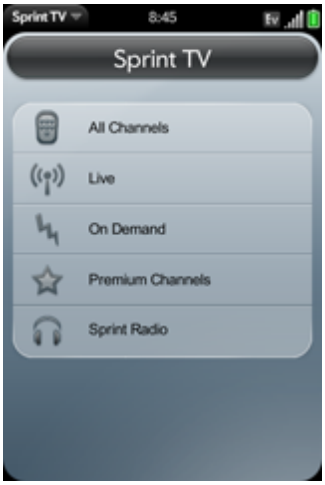

Downloaded from www.Manualslib.com manuals search engine

2. Tap ***All Channels***, ***Live***, ***On Demand***, ***Premium Channels,*** or ***Sprint Radio*** to display a list of channels and programming.
3. Tap an item to play it.

Note	*The first time you access a channel that requires a subscription, you are prompted to purchase access. Tap* Subscribe *to purchase access.*

NASCAR Sprint Cup Mobile℠

With ***NASCAR Sprint Cup Mobile℠,*** you can keep pace with the latest race results, driver stats, and live race audio.

1. Open ***NASCAR*** .
2. The first time you open ***NASCAR Sprint Cup Mobile***, do the following:
   - Tap ***Continue*** and follow the onscreen instructions.
   - Tap a driver thumbnail and tap ***Continue***.

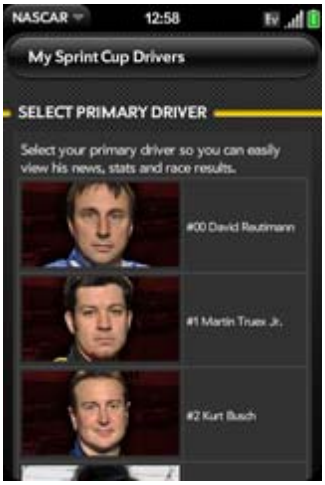

3. Tap options such as ***Home***, ***News***, ***SPEED***, ***Video***, and ***Drivers***.

Downloaded from www.Manualslib.com manuals search engine

4. Open the application menu and tap other options such as ***Stats and Schedules***, ***Sprint FanView***, ***Alerts and Personalization***, or ***Fantasy***.

NFL Mobile Live

With ***NFL Mobile Live,*** you can keep up with the latest news and stats from the National Football League.

1. Open ***NFL*** .
2. The first time you use ***NFL Mobile Live***, you are asked to select your favorite team. Do either of the following:
   - Tap ***A*** for an AFC team.
   - Tap ***N*** for an NFC team.
3. Tap a team logo.
4. Tap options such as ***Home***, ***My Team***, ***Fantasy***, ***NFL Net***, and ***News***.

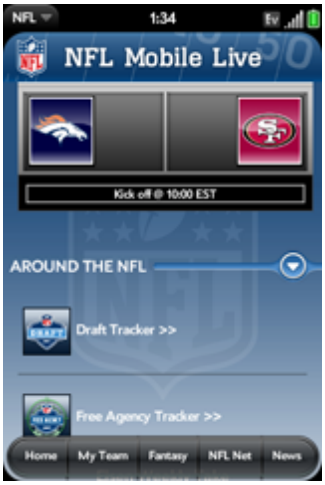

5. Open the application menu and tap other options such as ***Alerts & Personalizations***, ***Scores & Schedules***, ***Audio & Video***, ***Standings & Statistics***, or ***Help***.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Section 3B

Your Email and Other Messages

In This Section

- Email (page 236)
- Messaging (page 255)

Downloaded from www.Manualslib.com manuals search engine

Email

How Do I Send and Receive Email on My Phone?

Use the Email application on your phone to access the many email accounts you have: company, ISP, and Web-based (like Gmail). The Palm® Synergy™ feature makes it easy to synchronize all data from an online account: By setting up a sync account for one app, synchronization of the other apps is automatically set up for you. For example, if you set up your Google contacts account in Contacts before you set up Gmail, when you first open Email, you find that your Gmail messages are already downloaded. And when you first open Calendar, you find that your Google calendar events are already in your phone's Calendar app.

For email accounts that do not make use of the Synergy feature, you need to enter the settings for that account—such as username and password—directly in the Email application (see "Set Up Email" on page 237).

You can also use your phone's Web browser to view your Web-based email—just go to the email provider's website.

Merged Inboxes in Email

You can set up multiple email accounts on your phone. When you open Email, you see all your accounts in a single view: Account List view. From there, you can open the inbox of an individual account—or, thanks to the Synergy feature, you can see all messages from all your inboxes displayed in a single merged view called All inboxes.

Downloaded from www.Manualslib.com manuals search engine

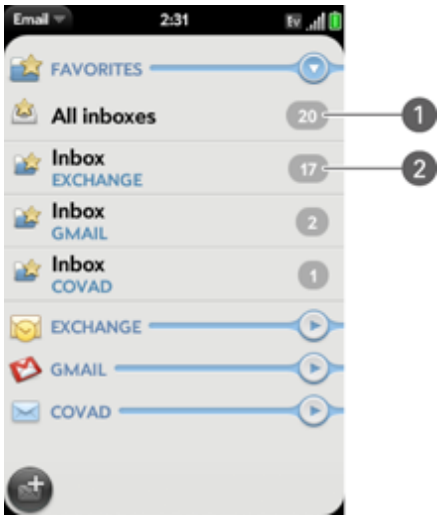

1 Number to the right of All inboxes indicates total number of unread email messages.
2 Number to the right of individual folder name indicates number of unread messages in that folder.

If you reply to a message when you're working in All inboxes, the message is sent from the same account in which it was received.

If you create a new message when you're working in All inboxes, the message goes out using the account you set as the default account (see "Set Email Preferences" on page 253).

Set Up Email

Before You Begin	• *Before you use your phone to send or receive messages, check with Sprint for pricing and availability of email services and data rate plans.* • *Make sure your phone is on and you're inside a coverage area before you send or receive messages. If you want delivery of Microsoft Office Outlook® email using Microsoft Direct Push, make sure that your IT organization uses Exchange Server 2007, or Exchange Server 2003 with Service Pack 2.*

Downloaded from www.Manualslib.com manuals search engine

Set Up Email: Common Providers

Follow this procedure if you have a common email provider, for example, AOL, EarthLink, or Yahoo! If you are setting up the Email application to work with your corporate email account that uses Microsoft Exchange ActiveSync, see "Set Up Email: Microsoft Exchange ActiveSync (EAS)" on page 239. If you have a less common email provider, see "Set Up Email: Other Providers" on page 240.

If the email account you set up takes advantage of the Synergy feature, then setting up email also synchronizes the provider's calendar and contacts.

1. Open ***Email***.
2. The first time you open ***Email***, do one of the following:

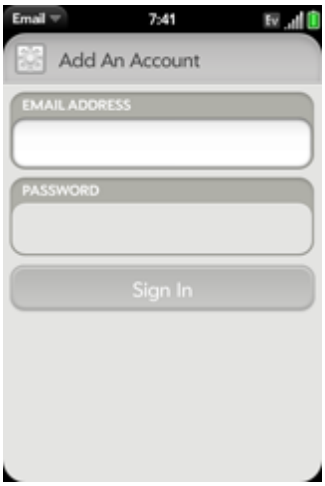

   - ***If this is the first email account you are setting up:*** Enter the email address and password and tap ***Sign In***.
   - ***If you have already set up an account that takes advantage of the Synergy feature and want to set up another one:*** Tap ***Add An Account*** and enter the email address and password. Tap ***Sign In***.
3. Any other time you open ***Email***, open the application menu, tap ***Preferences & Accounts***, and tap ***Add An Account***. (Enter the email address and password and tap ***Sign In***.)

Downloaded from www.Manualslib.com manuals search engine

4. Tap ***Add An Account*** to add another account.

Set Up Email: Microsoft Exchange ActiveSync (EAS)

Follow this procedure to get email from an Exchange account.

Before You Begin	*Get this info from your email provider or system administrator:* • *Mail server name or IP address for receiving mail* • *Server domain name* • *Your username and password*

Note	*If your corporate EAS system utilizes policies such as remote wipe and password enforcement (including minimum password length, allowed number of failed password attempts, and other parameters), those policies are supported in your EAS account on your phone. Check with your system administrator for details.*

1. Open ***Email***.
2. The first time you open ***Email***, do one of the following:

Downloaded from www.Manualslib.com manuals search engine

- ***If this is the first email account you are setting up:*** Enter your username and password, and tap ***Sign In***.
- ***If you have already set up an email account and want to set up another one:*** Tap ***Add An Account***. Enter your username and password, and tap ***Sign In***.

3. Any other time you open ***Email***, open the application menu, tap ***Preferences & Accounts***, and tap ***Add An Account***. (Enter your username and password, and tap ***Sign In***.)
4. Tap ***OK***, and tap ***Manual Setup***.
5. In ***Mail Type***, tap ***POP*** to display the list of options, and then tap ***Exchange (EAS)***.
6. Verify the information in the other fields and change the info as needed based on the information you obtained. You can enter either the server name or IP address in the ***Incoming Mail Server*** field.
7. Tap ***Sign In***.
8. Tap ***Add An Account*** to add another account.

Set Up Email: Other Providers

Follow this procedure to get email from an account that you have with an Internet service provider (ISP), a work account other than a Microsoft Exchange ActiveSync account), or any other IMAP or POP email account.

Before You Begin	*Get this info from your email provider or system administrator:* • *Account type (POP or IMAP)* • *Incoming and outgoing mail server names* • *Incoming mail server username and password* • *Incoming and outgoing server port numbers* • *Any SSL requirements for incoming and/or outgoing mail* • *Any authentication (ESMTP) requirements for outgoing mail* • *Root folder (IMAP accounts only)*

Downloaded from www.Manualslib.com manuals search engine

1. Open *Email* .
2. The first time you open *Email*, do one of the following:

   - ***If this is the first email account you are setting up:*** Enter your username and password, and tap ***Sign In***.
   - ***If you have already set up an email account and want to set up another one:*** Tap ***Add An Account***. Enter your username and password, and tap ***Sign In***.
3. Any other time you open ***Email***, open the application menu, tap ***Preferences & Accounts***, and tap ***Add An Account***. (Enter your username and password, and tap ***Sign In***.)
4. Tap ***OK***, and tap ***Manual Setup***.

Tip	*You can jump to the account settings entry screen directly from the screen where you enter your username and password. Open the application menu and tap* Manual Setup.

5. Verify the information in the other fields and change the info as needed based on the information you obtained from your email provider or system administrator.
6. Tap ***Sign In***.

Downloaded from www.Manualslib.com manuals search engine

Enter Advanced Account Settings

These settings apply only to the account you select in step 3.

1. Open *Email* .
2. Open the application menu and tap ***Preferences & Accounts***.
3. Tap the account name.
4. Set any of the following:

Account Name: Enter the name that appears in the account list.

Full Name: Enter the name you want to appear in the ***From*** field for messages you send.

Show Icon: Set whether a notification icon appears onscreen when a new message arrives.

Play Sound: Set whether a sound plays when a new message arrives.

Vibrate: Set whether your phone vibrates when a new message arrives.

Signature: Tap to create a signature that's added to outgoing messages (see "Add a Signature to Outgoing Messages" on page 251 for more information).

Downloaded from www.Manualslib.com manuals search engine

Reply-to Address: Enter the address you want recipients to see and reply to on your outgoing messages, if this is different from your actual email address.

Sync deleted emails (POP accounts only): Set whether messages should be deleted on the server when you delete them on your phone.

Show Email: Set how many days' worth of messages to retrieve from the server.

Get Email: Set how frequently to synchronize email for this account.

Default Folders (IMAP accounts only): Specify the folder where messages you send, save as drafts, or delete are stored.

Remove Account: See "Delete an Email Account" on page 243.

Change Login Settings: See "Change Account Login Settings" on page 243.

Change Account Login Settings

When you change your password for an online email account, remember to make the change in the account settings on your phone also.

1. Open ***Email***.
2. Open the application menu and tap ***Preferences & Accounts***.
3. Tap the account name.
4. Tap ***Change Login Settings*** and tap the relevant fields to change the account information.

Delete an Email Account

When you delete an email account from your phone, it removes the account information from your phone only. It does not affect your account with the email provider.

1. Open ***Email***.
2. Open the application menu and tap ***Preferences & Accounts***.
3. Tap the account name.
4. Tap ***Remove Account*** and tap ***Remove Email Account***.

Downloaded from www.Manualslib.com manuals search engine

Create and Send an Email Message

1. Open ***Email***.
2. If this is the first time you have opened the ***Email*** application, and you have set up at least one email account, tap ***Done***. (If you have not set up an email account, see "Set Up Email" on page 237.)
3. Tap .

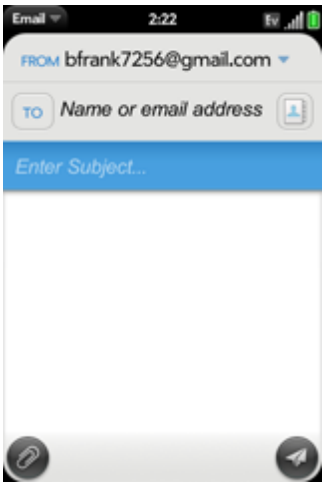

4. (Optional) Tap ***From*** to change the email account you are using to send the message. (This option appears only if you have more than one email account set up on your phone.)
5. In the ***To*** field, do one of the following to address the message:
   - Enter a contact name, initials, or email address. (Tap the email address when it appears.)
   - Tap to open the full contact list. (Tap the contact you want, or enter a name or address to narrow the list.)
   - Enter the full email address for a recipient who is not a contact.
6. (Optional) Tap ***To*** to open the Cc and Bcc fields, and enter an address.
7. (Optional) Repeat steps 5 and 6 to enter additional addresses.

Downloaded from www.Manualslib.com manuals search engine

8. Enter the subject, press ***Enter***, and enter the body text.
9. (Optional) To format body text, do one of the following:
   - To enter bold, italic, or underlined text, open the application menu and tap ***Edit*** > ***[the option you want]***. Enter the text. To turn off the formatting, open the application menu and tap ***Edit*** > ***[the option you want to turn off]***.
   - To enter colored text, open the application menu and tap ***Edit*** > scroll down > ***Text Color***. Tap the color and enter the text.

Tip	*To format text you've already entered, select the text, open the application menu, and tap* Edit > [the option you want]. *To turn off a formatting option, open the application menu and tap* Edit > [the option you want to turn off]. *For text color, tap the black square.*

10. (Optional) To set the priority for the message, open the application menu and tap ***High priority*** or ***Normal priority***.
11. Tap .

Add Attachments to a Message

1. While composing a message, tap .
2. To locate a file, do the following:
   - Tap an icon at the bottom of the screen to search for pictures, videos, music files, or documents.
   - Enter the file name.

Tip	*To take a new picture to send as an attachment, tap the photo icon at the bottom of the screen and tap* New Photo.

3. Tap the file name.
4. Repeat steps 1–3 to attach other files.

Downloaded from www.Manualslib.com manuals search engine

Save a Message as a Draft

- While composing a message, open the application menu and tap ***Save as draft***.

Search for Messages

For the message you want, enter a few characters of a name or email address in the To or CC line, or a few characters of the subject. Matching results appear as you type. Keep entering characters to narrow the list.

You can search for messages in any email folder.

Receive and Read Email Messages

The Email application synchronizes messages anytime you open a mail folder. It also synchronizes messages on an automatic schedule—the default interval is every 30 minutes (see "Enter Advanced Account Settings" on page 242 for information on changing the interval).

Follow these steps to manually retrieve messages.

1. Open ***Email***.
2. If the folders for the account you want are hidden, tap to display the folders.
3. Tap the folder you want to check messages for. If synchronization doesn't start, tap .

Tip	*How can you tell if sync is happening? Look for the animated circular movement around the number of messages in the upper-right corner of the screen.*

4. Tap a message to open it.

Downloaded from www.Manualslib.com manuals search engine

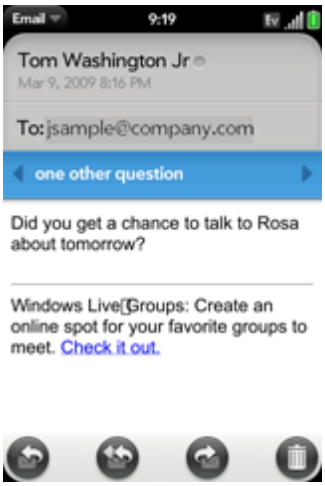

5. (Optional) If the message contains an image in the body of the message, tap the image to save it to your phone. If the image is in JPG, BMP, or PNG format, you can view it in *Photos*.
6. Tap ◀ or ▶ in the subject line to view the next newer or older message.
7. To view messages for another account, make the back gesture (see "Go Up One Level in an App (Back Gesture)" on page 59) to return to the account list, and tap the account name.

Save or Share an Inline Image

If a message contains an inline image—an image inserted right into the body text—you can save the image to your phone or share it with someone else via email.

1. With the message open, press and hold ***Option*** and tap the image.
2. Do one of the following:
   - Tap ***Share*** to send the image to someone else.
   - If the image is a JPG, BMP, or PNG file, tap ***Copy to Photos***.

Downloaded from www.Manualslib.com manuals search engine

Open Attachments

You can receive any kind of file sent to you, but you can only open an attachment if your phone has an application that can open the file type.

- *To open a single attachment:* Tap the name to open the attachment. For large attachments, tap the name to fully download the attachment, and tap the name again to open the attachment.
- *To open multiple attachments:* Tap the list of attachment names to view the attachments, and tap an individual attachment name to open it.

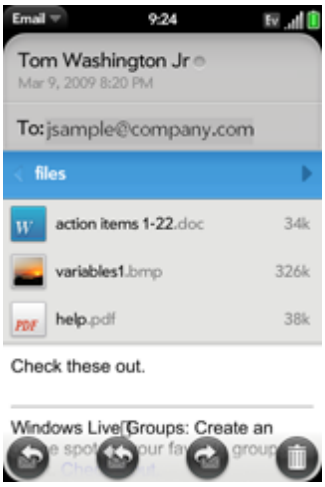

- *To save an attached image that appears in the body of an email to your phone:* Tap the image to save it to your phone. If the image is in JPG, BMP, or PNG format, you can view it in *Photos*.

Save Attachments

When you open attachments of certain file types, you can save them to your phone so you can view them later in one of your phone's applications. You can save pictures in JPG, BMP, or PNG format directly from the email message; for other file types, use the application menu to save the attachment.

Downloaded from www.Manualslib.com manuals search engine

1. Open the attachment (see “Open Attachments” on page 248).
2. Do one of the following:
   - ***For pictures in JPG, BMP, or PNG format:*** Tap ***Copy To Photos***.
   - ***For other file types:*** Open the application menu and tap ***Save As***. (If the attachment does not open in an application that has a Save As menu command, you cannot save the attachment.)
3. To open a saved attachment on your phone, open the application that can display the attachment. (The attachment appears in the list of available files.)

Add a Contact From an Email Message

You can add a contact name or email address to your Contacts list directly from the ***To***, ***Cc***, or ***Bcc*** field of an incoming email message. You can either create a new contact or add the information to an existing contact.

1. In a message you’ve received, tap the name or email address.
2. Tap ***Add To Contacts***.
3. Tap one of the following:

   Save As New: Create a new contact for the name or address.

   Add To Existing: Tap the contact you want to add the name or address to.

View a Contact From an Email Message

- In a message you receive from someone listed in the Contacts app, tap the name to open the contact entry.

Reply to a Message

1. Open a message.
2. Do one of the following:
   - ***Reply to just the sender:*** Tap .
   - ***Reply to the sender and all other addressees:*** Tap .

Downloaded from www.Manualslib.com manuals search engine

3. Enter the reply message text and tap .

Forward a Message

1. Open a message and tap .
2. Address the forwarded message (see “Create and Send an Email Message” on page 244).
3. Enter the forwarded message text and tap .

Move a Message to Another Folder

1. Open a message.
2. Open the application menu and tap ***Move to folder.***
3. Tap the folder you want.

Mark a Message as Read or Unread

1. Open a message.
2. Open the application menu and tap ***Mark as read/unread***.

Flag or Unflag a Message

1. Open a message.
2. Open the application menu and tap ***Set flag*** or ***Clear flag***.

Show or Hide Message Header Details

1. Open a message.
2. Tap a recipient name to show details. (Tap again to hide details.)

Downloaded from www.Manualslib.com manuals search engine

Delete a Message

Deleting a message moves it to your deleted items folder, so it's still on your phone. Depending on your email account, this folder is called Deleted Items, Deleted, Trash, or something else.

If you accidentally delete a message, you can move it back to the original folder (see "Move a Message to Another Folder" on page 250). To remove a message from your phone permanently, delete it from the original folder, and then delete it from the deleted items folder.

Tip	*If you change the folder where you store deleted messages for an IMAP account (see "Enter Advanced Account Settings" on page 242), deleting messages from the folder removes them from your phone.*

Do one of the following:

- ***In the message list:*** Throw the message off the side of the screen.
- ***In an open message:*** Tap .

Add a Signature to Outgoing Messages

A signature includes information you want to add to the closing of all your outgoing messages—for example, your name, address, and phone numbers; your website; or a personal motto. You can use a different signature for each email account.

1. Open ***Email*** .
2. Open the application menu and tap ***Preferences & Accounts***.
3. Tap the account you want.

Downloaded from www.Manualslib.com manuals search engine

4. Tap the ***Signature*** field and enter the signature text. To format the text with bold, italics, or color, select the text (see “Text Selection Gestures” on page 52), open the application menu, and tap ***Edit*** > ***[the option you want]***.

View Mail Folders

1. Open ***Email***.
2. Do any of the following:
   - ***View all folders for an account:*** Tap .
   - ***Open a folder:*** Tap the folder name.
   - ***View folder information such as last sync and number of messages:*** Open the folder, and then tap the folder header.

Downloaded from www.Manualslib.com manuals search engine

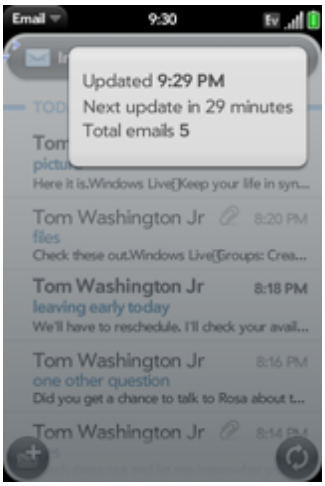

Add a Folder as a Favorite

Favorites appear at the top of the Account List view.

1. Open *Email*.
2. If the folder you want is not displayed, tap to the right of the email account name to display the folder.
3. Tap to the right of the folder name.

To remove a folder as a favorite, repeats steps 1 and 2 and tap to the right of the folder name.

Set Email Preferences

1. Open *Email*.
2. Open the application menu and tap ***Preferences & Accounts***.

Downloaded from www.Manualslib.com manuals search engine

3. Set any of the following:

Smart Folders: Set whether to include ***All Inboxes*** and/or ***All Flagged*** messages in the Smart Folders list at the top of the merged folders view.

Accounts: Tap an account name to enter advanced settings (see "Enter Advanced Account Settings" on page 242).

Default Account: Tap the account shown to set another account as the default. The default account is used to send a message if you create a new message in a merged folder view such as ***All Inboxes*** or ***All Flagged***. If you have only one email account on your phone, the Default Account preference is not displayed.

Add An Account: See "Set Up Email" on page 237.

Reorder Accounts

1. Open ***Email***.
2. Open the application menu and tap ***Preferences & Accounts***.
3. Tap and hold the account name, and drag the account up or down. (This changes the order of the accounts in Account List view.)

Downloaded from www.Manualslib.com manuals search engine

Reply to Meeting Invitations

You can receive meeting invitations on your phone in the same way that you receive email messages. You cannot create meeting invitations on your phone.

- Tap whether to accept, tentatively accept, or decline an invitation.

Here are the key features of meeting invitations:

- Meeting invitations appear on your phone in the Email application, not in the Calendar application.
- From within the Email application, you can accept, decline, or tentatively accept a meeting invitation.
- If you accept or tentatively accept an invitation, it appears as an event in Calendar.
- You can reply to and forward meeting invitations in the same way as email messages.

Tip	*If you receive an updated meeting invitation, you can again choose to accept, decline, or tentatively accept. If you receive a meeting cancellation, you don't need to do anything.*

Send Email Messages From Within Another Application

Use the share option in any application that supports this feature to send an item as an attachment to an email message. Share is supported in the Photos, Doc View, PDF View, and Memos applications, among others. For details, see the chapter on the specific application.

Messaging

What Kinds of Messages Can I Send and Receive?

You can use the Messaging application to send and receive the following types of messages:

- Text messages (see "Create and Send a Text or Multimedia Message" on page 258).
- Multimedia messages, if your service plan includes multimedia messaging (see "Create and Send a Text or Multimedia Message" on page 258).

Downloaded from www.Manualslib.com manuals search engine

- Instant messages for an IM account you already have set up online (see “Set up an Instant Messaging (IM) Account” on page 263).

The Synergy feature enables the Messaging app to gather all of your text, multimedia, and instant messages to and from the same contact or phone number into a single conversation (sometimes called a thread). So you can see your entire message history with a person regardless of the different methods you happened to use to communicate with that person (see “Work With Conversations” on page 256). You can even switch from account to account without losing the thread of your conversation (see “Switch Between Messaging Accounts in a Conversation” on page 257)—just pick the messaging account that’s most likely to keep you in unbroken contact with the person you’re talking to.

Work With Conversations

When you exchange more than one message with a person, the messages are grouped into a conversation. A single conversation can contain text, multimedia, and IM messages. When you start or continue a conversation, the upper part of the Conversations view displays all messages exchanged with this person, and the bottom part provides the area where you type your next message.

You can carry on multiple conversations at the same time.

1. Open ***Messaging*** .
2. Do one of the following:
   - ***Start a new conversation:*** Create a message (see “Create and Send a Text or Multimedia Message” on page 258 or “Send and Receive IM Messages” on page 265), or tap a message and reply to it.
   - ***Continue an existing conversation:*** Tap the conversation.
3. Enter your message.

Downloaded from www.Manualslib.com manuals search engine

4. Tap .

Tip	*To save the contents of a conversation—for example, to keep a copy of the conversation as a memo—open the conversation, open the application menu, and tap* **Copy All**. *This saves the entire conversation as plain text, which you can paste in a memo, email message, and so on.*

Switch Between Messaging Accounts in a Conversation

In a single conversation, you can switch between text/multimedia messaging and an IM account. So if you are having an IM chat with someone and he or she goes offline, you can send the person a text message to wrap up the conversation. You can also switch between different phone numbers for sending a text message to a person.

1. In ***Messaging***, start a new conversation or open one that's listed in Conversations view.
2. Tap ***Text*** or an IM account name in the upper-right corner of the screen. If available, the other ways to communicate with this contact appear in a list. Tap the account or phone number you want to use.

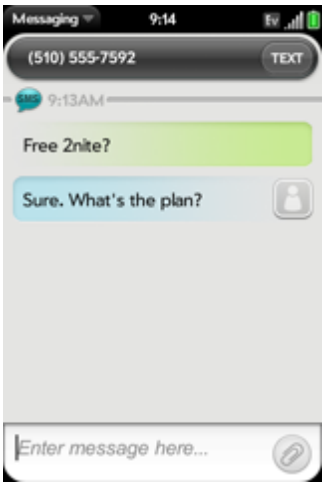

Downloaded from www.Manualslib.com manuals search engine

Switch Between Conversations View and Buddies View

Conversations view lists all of your Messaging conversations. Buddies view lists all of your IM buddies.

1. Open ***Messaging*** .
2. For Conversations view, tap ***Conversations***. (For Buddies view, tap ***Buddies***.)

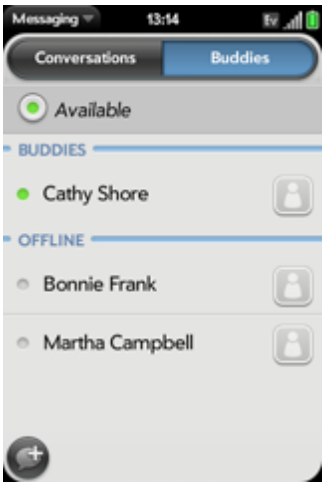

3. In ***Buddies*** view, tap a buddy name to contact that person.

Tip	*You can set a preference to show all your buddies, whether they are on or offline, or to hide offline buddies. In Buddies view, open the application menu and tap* Show/Hide Offline Buddies.

Create and Send a Text or Multimedia Message

Each text message can have up to 160 characters. If you send a text message to an email address, the email address is deducted from the 160-character count.

Downloaded from www.Manualslib.com manuals search engine

Multimedia messages consist of both text and pictures. You can include pictures in JPG format.

Did You Know?	*You can send and receive text messages even while you are on a phone call. This is easiest when using a hands-free headset or the speakerphone.*

Before You Begin	• *Before you use your phone to send or receive multimedia messages, refer to your service plan for pricing and availability of multimedia messaging services.* • *Make sure that your phone is on and that you're inside a coverage area (see "Turn Wireless Services On" on page 23).*

1. Open ***Messaging***.
2. The first time you open ***Messaging***, tap ***Done*** to send a text or multimedia message. (You can also set up an instant messaging (IM) account from this screen. Tap ***Add An Account*** and see "Set up an Instant Messaging (IM) Account" on page 263 for instructions.)
3. Tap . (The cursor is in the ***To*** field.) Do one of the following to address the message:
   - Enter a contact's first or last name or initials, screen name, phone number, or email address. (Tap the phone number when it appears.)
   - Tap to open your full contact list. (Tap the contact you want, or enter a name or address to narrow the list.)
   - Enter a phone number for a recipient who is not a contact.

Tip	*Do you need to enter a short code that contains letters? Use the keyboard to enter it; just press the letter keys. For example, if the code is "win01," press* W *to enter w,* I *to enter i, and so on. No need to figure out the numbers that correspond to the letters.*

4. Tap the ***To*** field and repeat step 3 to enter additional recipients.

Downloaded from www.Manualslib.com manuals search engine

5. Do one of the following to attach a picture to a multimedia message:
   - ***Before entering the message text:*** Tap . (Tap the album containing the picture you want. Tap the picture, or tap ***New Photo*** and take the picture.)
   - ***After entering the message text:*** Open the application menu and tap ***Add picture***. (Tap the album containing the picture you want and tap the picture, or tap ***New Photo*** and take the picture.)
6. Enter the message text and tap .

Tip	*You can include emoticons in your message (see "Use Emoticons in a Message" on page 260).*

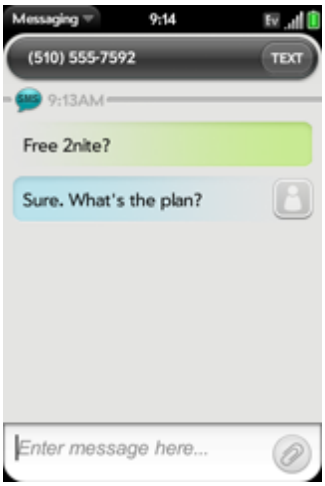

Use Emoticons in a Message

To include an emoticon in a text, multimedia, or IM message, type in a keyboard character combination for that emoticon. Most emoticons can be created by more than one combination. After you send the message, the emoticon image appears in the conversation on your phone and on the recipient's phone, as long as the receiving chat application supports the image.

Downloaded from www.Manualslib.com manuals search engine

This table shows the emoticons that are supported on your phone.

Note	*Emoticon combinations that use words, such as :cool or :cry, are not supported in most chat applications. Emoticons created using these combinations may not appear correctly on the recipient's phone.*

To display this emoticon...	*Enter any of these keyboard character combinations...*
	o_O :confused
	8) 8-) B) B-) :cool
	:'(='(:cry
	:{ :-[=[=-[:redface
	:S :-S :s :-s %-(%(X-(X(:eww :gross
	:! :_! :eek
	:(:-(=(=-(:sad
	:O :-O :o :-o =O =-O =o =-o :surprised :shock :omg
	^^ ^_^ ^-^ :grin :biggrin
	O:) O:-) o:) o:-) :innocent :angel
	:-* :* =* =-* :kiss
	:-D :D =D =-D :laugh :lol
	:| :-| :neutral :meh
	:-@ :@ =@ =-@ :sick

Downloaded from www.Manualslib.com manuals search engine

To display this emoticon...	*Enter any of these keyboard character combinations...*
	:) :-) =) =-) :smile
	:/ :-/ :\ :-\ =/ =-/ =\ =-\ :doh
	;) ;-) :wink
	:P :-P :p :-p :b :-b =p =b =-b =-p :yuck :razz
	:angry :mad
	:heart
	:evil :twisted

Receive and View Text and Multimedia Messages

You can view pictures and videos and listen to music files included in a multimedia message. You can save pictures in JPG format to your phone for viewing in the ***Photos*** application.

1. Open ***Messaging***.
2. Tap a conversation to view messages.
3. In a multimedia message, tap a music, video, or vCard (VCF) file name to view the attached file. (Attached pictures are displayed within the message. Tap ***Copy Photo*** to save an attached JPG picture.)

Add a Contact From a Message

1. In a conversation, tap the header of a message received from someone who is not a contact.
2. Tap ***Add To Contacts***.
3. Tap one of the following:

   Save As New: Create a new contact for the name or address.

Downloaded from www.Manualslib.com manuals search engine

Add To Existing: Tap the contact you want to add the name or address to.

View a Contact's Information From a Message

- In a conversation, tap the header of a message received from a contact to open the contact entry.

Dial a Number From a Message

- Tap a phone number.

Delete a Message

1. In a conversation, throw the message off the side of the screen.
2. Tap ***Delete*** to confirm.

Delete a Conversation

1. In ***Conversations view***, throw the conversation off the side of the screen.
2. Tap ***Delete*** to confirm.

Set up an Instant Messaging (IM) Account

To use an IM account on your phone, you must already have the account online—such as a GoogleTalk IM account. If you have an IM account with a provider that takes advantage of the Synergy feature, that IM account is automatically added to your phone when you enter your username and password for that provider in Email, Calendar, or Contacts.

1. Open ***Messaging*** .
2. Do one of the following:
   - ***The first time you open Messaging:*** Tap ***Add An Account***.
   - ***Any other time:*** Open the application menu and tap ***Preferences & Accounts***. (Tap ***Add IM Account***.)

Downloaded from www.Manualslib.com manuals search engine

3. Tap the account type and enter your username and password.

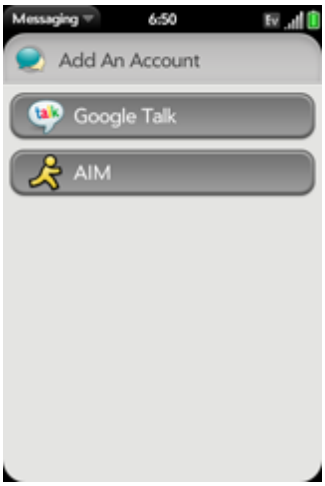

4. Tap *Sign In*.

Sign In to an IM Account

1. Open *Messaging* .
2. Tap *Buddies*.

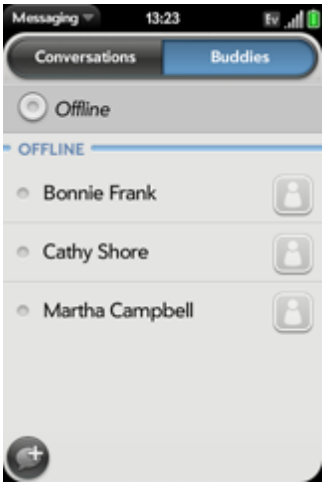

3. Tap to the left of the text *Offline*, and tap *Available*.

Downloaded from www.Manualslib.com manuals search engine

Sign Out of an IM Account

1. Open *Messaging* .
2. Tap *Buddies*.
3. Tap the status icon to the left of your online status (*Available* or *Busy*), and tap *Sign off*.

Send and Receive IM Messages

Before You Begin	*Make sure that your phone is on and that you're inside a coverage area (see "Turn Wireless Services On" on page 23).*

1. Open *Messaging* .
2. Do one of the following to start or continue a conversation:
   - In *Conversations* or *Buddies view*, tap to start a new conversation.
   - In *Conversations view*, tap an existing conversation and enter a new message.
   - In *Buddies view*, tap a buddy name and enter a new message.
3. Tap *Text* or an IM account name in the upper-right corner of the screen, and tap the IM account you want to use.
4. Enter the message text and tap .

Tip	*You can include emoticons in your message (see "Use Emoticons in a Message" on page 260).*

5. When the message recipient replies, the reply appears below your message in *Conversations view*. (Repeat step 4 to send another message.)

Change Your Online Status

1. Open *Messaging* .
2. Tap *Buddies*.

Downloaded from www.Manualslib.com manuals search engine

3. Tap the status icon to the left of the status description, and tap your new status.

Change Your Custom Message

Your custom message is seen by your IM buddies. It appears next to your IM screen name and status. It can contain any text you want.

1. Open *Messaging* .
2. Tap *Buddies*.
3. Do one of the following:
   - *If you already have a custom message:* Tap the current message and enter the new message text.
   - *If you're creating a custom message for the first time:* Tap the status text (*Available*, *Busy*, and so on) and enter the custom message text.

Change Your IM Account Username or Password

If you change the username or password for your IM account online, you need to enter the updated information for the account on your phone.

1. Open *Messaging* .
2. Open the application menu and tap *Preferences & Accounts*.
3. Tap the account name.
4. Enter the new information and tap *Sign In*.

Delete an IM Account

1. Open *Messaging* .
2. Open the application menu and tap *Preferences & Accounts*.
3. Tap the account name.
4. Tap *Remove Account*., and tap *Remove Account* again to confirm.

Downloaded from www.Manualslib.com manuals search engine

Turn Messaging Notifications On or Off

You can set your phone to show a notification and/or play a sound when a new message arrives. These settings apply to all your Messaging accounts.

1. Open *Messaging* .
2. Open the application menu and tap *Preferences & Accounts*.
3. Turn either of the following new message notifications on or off:

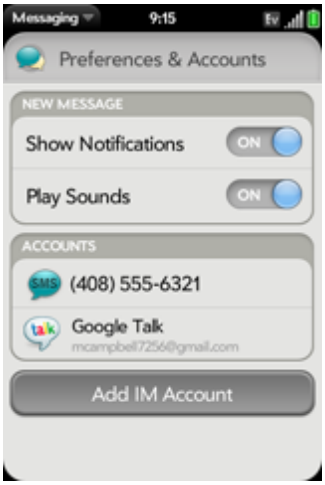

Show Notifications: Set whether a notification appears when you receive a new message.

Play Sounds: Set whether an alert sound plays when you receive a new message. The ringer switch must be set to *On* for you to hear the sound.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Section 3C

Your Connections to the Web and Wireless Devices

In This Section

- Wi-Fi (page 270)
- Location Services (page 275)
- Web (page 277)
- Google Maps (page 287)
- Sprint Navigation (page 288)
- Bluetooth® Wireless Technology (page 291)

Downloaded from www.Manualslib.com manuals search engine

Wi-Fi

What Is a Wi-Fi Connection?

Many environments, such as corporate offices, coffee shops, airports, and libraries, offer access to a Wi-Fi network. A Wi-Fi network is a wireless local area network (WLAN). Your phone supports W-Fi connectivity based on the 802.11 standard (802.11b and 802.11g), with WPA, WPA2, WEP, and 802.1x authentication. A Wi-Fi access point, also called a hotspot, is a network device with an antenna that provides wireless connections to a larger network. When you're within range of an accessible Wi-Fi network, you can use your phone's Wi-Fi feature to connect to that network and access the Web.

Why Use a Wi-Fi Connection?

A Wi-Fi connection is especially helpful in the following situations:

- You're outside a coverage area and you want to access the Web.
- Your Sprint service plan incurs additional charges for data services and you want to minimize data service charges by using a Wi-Fi connection instead.
- You want to maintain a Web connection while talking on the phone.
- You're inside a coverage area, but outside of a Sprint Mobile Broadband coverage area. (A Wi-Fi connection may provide faster throughput than a Sprint 1xRTT data connection.).

Are There Different Kinds of Wi-Fi Networks?

There are two types of Wi-Fi networks:

- *Open networks:* These networks broadcast their name (SSID) and do not require you to enter a password or other settings. To learn how to connect to an open network for the first time, see "Connect to a New Open Network" on page 272.

Downloaded from www.Manualslib.com manuals search engine

- ***Secure networks:*** These networks may broadcast their name, but at the very least, they require you to enter a password that you get from an administrator (who may be, for example, the librarian or the person behind the counter at the coffee shop). You may also have to get other network settings from the system administrator. To learn how to connect to a secure network for the first time, see "Connect to a New Secure Network" on page 273.

To connect to either type of network after the first time, see "Connect to a Previously Used Network" on page 274.

Turn Wi-Fi On and Off

Do one of the following:

- Open ***Wi-Fi*** , and tap ***On*** or ***Off***.

Downloaded from www.Manualslib.com manuals search engine

- ***From any screen:*** Open the connection menu, tap ***Wi-Fi***, and tap ***Turn on Wi-Fi*** or ***Turn off Wi-Fi***.

If your phone finds the network you want, tap the network name to connect to it. Otherwise, see “Connect to a New Open Network” on page 272 and “Connect to a New Secure Network” on page 273.

Connect to a New Open Network

For an explanation of open networks, see “Are There Different Kinds of Wi-Fi Networks?” on page 270.

Some locations, such as airports or coffee shops, provide an open network but charge a fee to use it. After you connect your phone to the network, you need to open the Web browser and register with the Wi-Fi service provider before you can check email or browse the Web.

1. Open ***Wi-Fi*** .
2. Make sure Wi-Fi is on (see “Turn Wi-Fi On and Off” on page 271).
3. Do one of the following:
   - ***If the network you want is displayed:*** Tap the network name.

Downloaded from www.Manualslib.com manuals search engine

- ***If the network you want is not displayed:*** Tap ***Join network*** and enter the network name. (Make sure ***Open*** is displayed in the ***Security*** field, then tap ***Connect***.)

Tip	*You can also open Wi-Fi by opening the connection menu, tapping* **Wi-Fi**, *and tapping* **Wi-Fi Preferences**.

Connect to a New Secure Network

For an explanation of secure networks, see "Are There Different Kinds of Wi-Fi Networks?" on page 270.

1. Open ***Wi-Fi*** .
2. Make sure Wi-Fi is on (see "Turn Wi-Fi On and Off" on page 271).
3. Do one of the following:
   - ***If the network you want is displayed:*** Tap the network name, enter your ***Username*** and/or ***Password***, and tap ***Sign In***. (You're done.)
   - ***If the network you want is not displayed:*** Tap ***Join network*** and enter the network name. (Follow steps 4 to 7.)

Downloaded from www.Manualslib.com manuals search engine

4. Tap the ***Security*** field, and then tap the network type: ***Open***, ***WPA-personal***, ***WEP***, or ***Enterprise***.
5. Tap ***Connect***.
6. A series of different screens appears depending on the network type. Enter or select the following if you are prompted to do so: ***Username*** and/or ***Password***, and ***Certificate***.
7. Tap ***Sign In***.

Connect to a Previously Used Network

- ***If Wi-Fi is turned off:*** Turn on Wi-Fi (see "Turn Wi-Fi On and Off" on page 271). Your phone automatically attempts to connect to a previously used network, starting with the most recently used network.
- ***If Wi-Fi is turned on but you are not connected to a network:*** Your phone automatically attempts to connect to a previously used network, starting with the most recently used network.
- ***If you are connected to one network and want to use a different one:*** Open ***Wi-Fi*** . Tap another network name.

Disconnect From a Network

When you disconnect from a network, you can keep it on your list of known networks so that your phone can automatically connect to it again. If you remove the network from your list of known networks, however, you must reconnect to the network. Follow the steps in "Connect to a New Open Network" on page 272 or "Connect to a New Secure Network" on page 273 to connect to the network again.

- ***To disconnect from a network but keep it on your list of known networks:*** Turn off Wi-Fi (see "Turn Wi-Fi On and Off" on page 271). (This disconnects from the network.)
- ***To disconnect from a network and remove it from your list of known networks:*** Open ***Wi-Fi*** . (Tap the network name, and then tap ***Forget Network***.)

Downloaded from www.Manualslib.com manuals search engine

Customize Connection Settings

Do not change Wi-Fi settings unless you are having trouble connecting to a network.

Before You Begin	*You must be connected to the network you want to customize (see "Connect to a New Open Network" on page 272, "Connect to a New Secure Network" on page 273, or "Connect to a Previously Used Network" on page 274).*

1. Open ***Wi-Fi*** .
2. Tap the network name.
3. In ***Automatic IP settings***, tap ***On*** or ***Off***.

   When Automatic IP settings are on: The IP address is automatically and dynamically configured.

   When Automatic IP settings are off: You can manually configure the IP address.
4. If you turned automatic IP settings off, enter any of the following: ***IP Address***, ***Subnet Address***, ***Gateway***, and/or ***DNS Server*** (addresses #1 and #2).
5. Tap ***Done***.

Location Services

The Location Services application provides information about your location to applications that request it. For example, Sprint Navigation may use your location information if you need driving directions.

Downloaded from www.Manualslib.com manuals search engine

1. Open *Location Services* .
2. Tap *On* or *Off* for any of the following:

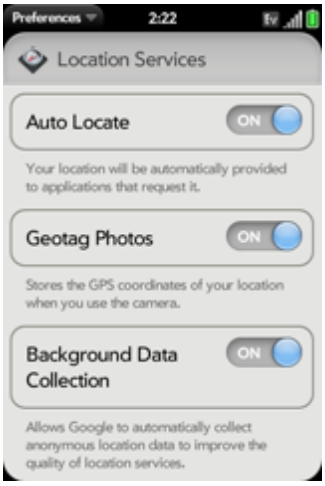

- ***Auto Locate:*** When Auto Locate is on, applications can automatically identify your location. When it's off, an application asks if it's OK to identify your location. Tap *Allow* to turn on Location Services for that session only.
- ***Geotag Photos:*** Available only when Auto Locate is on. When Geotag Photos is on, photos are tagged with the latitude and longitude of the location in which they were taken.

Did You Know?	*The geotag data is stored in the photo file; it's not displayed on the image itself. A common use of the geotag occurs in online photo services like Photobucket and desktop applications like Google Earth, which use the data to position the photo as a thumbnail on a map.*

- ***Background Data Collection:*** Available only when Google Service is on. When Background Data Collection is on, anonymous location data is collected from your phone. This data is used to improve the quality of Location Services.

Downloaded from www.Manualslib.com manuals search engine

3. To turn GPS on or off, open the application menu, tap ***Locate Me Using***, and then tap ***GPS***.

   Turn on this feature to provide GPS location information to applications that request it.

4. To turn Google Service on or off, open the application menu, tap ***Locate Me Using***, and then tap ***Use Google Service***.

   The first time you turn on Google Service you are asked to accept the terms of use, and decide whether to allow anonymous data collection. Do the following:

   - Review the terms of use.
   - If you decide not to allow anonymous data collection, tap the checkmark to remove it.
   - Tap ***Agree*** or ***Don't Agree***.

Web

Go to a Website

The Web browser on your phone is capable of displaying most Web content. The browser features the latest Web standard technologies such as HTML 4.01, CSS 2.1, Ajax, and JavaScript. It does not support plug-ins such as Flash or Java applets.

1. Open ***Web***.
2. Enter the address of the page. (You don't need to enter the prefix ***http://www.***)

Downloaded from www.Manualslib.com manuals search engine

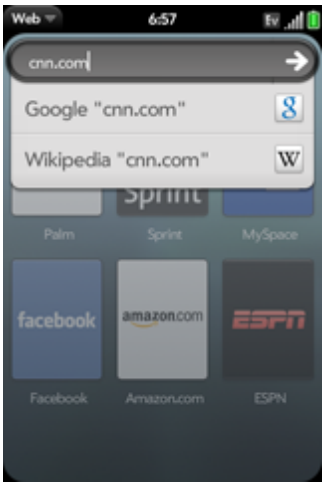

If the page appears in the list of viewed pages, tap it to go there again. (If not, press *Enter* .)

Did You Know?	*If you browse to a secure Web page, the lock icon in the address line appears closed.*

3. To cancel a page while it is loading, tap .

Go to a Website Using Search

You can also search the Web from the ***Launcher*** or ***Card view*** (see “Search to Find Info and Make Calls” on page 76).

Downloaded from www.Manualslib.com manuals search engine

1. Open *Web* .

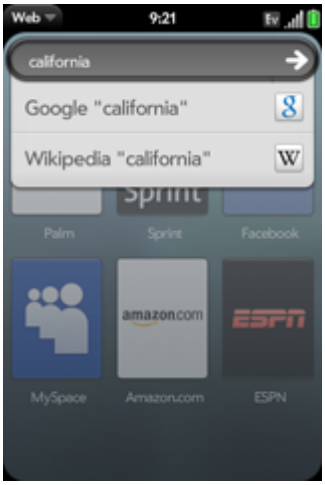

2. Enter the search term and tap a search option.

Open Another Browser

If you are looking at one Web page and need to check something on a different one, simply open another browser.

- Open the application menu and tap ***New card***. (Enter the address or search term for the second Web page. To move between the two pages, press ***Center*** to display ***Card view***. Tap one Web page and then the other to go between the two.)

Navigate a Web Page

- ***Move back through previously viewed pages:*** or make the back gesture from right to left anywhere in the gesture area.
- ***Move forward through previously viewed pages:*** or make the forward gesture from left to right anywhere in the gesture area.
- ***Refresh the current page:*** Tap .
- ***Scroll a page:*** Swipe up or down on the screen.

Downloaded from www.Manualslib.com manuals search engine

- ***View a Web page in landscape mode:*** Turn the phone on its side. When the display is in landscape mode, you can swipe up and down on the gesture area to scroll up and down a page.
- ***Zoom in on or out of a page:*** Pinch out to enlarge items onscreen. Pinch in to decrease the size of items onscreen. (Double-tap the screen to zoom in or out a specified amount.)
- ***Zoom in on a column of a Web page:*** Double-tap the page to center a column and enlarge it. To zoom out to see the whole page again, keep double-tapping.
- ***Pan a page:*** Tap, hold, and drag the page.
- ***Enter information in a form:*** Tap the form field. (Enter or select information and press ***Enter*** .)
- ***Share a Web address as a link:*** Open the application menu, tap ***Page***, and tap ***Share***. (Create the email message.)
- ***Display the address bar:*** Start typing a search term or Web address, or scroll to the top of the page.
- ***Save a photo to Photos:*** Press and hold ***Option*** and tap the photo. Tap ***Copy to Photos***.

Add a Web Page to the Launcher

Add any Web pages you visit frequently to the Launcher so you can access them in a few taps.

1. Open the page you want to add to the Launcher.
2. Open the application menu, tap ***Page***, and tap ***Add To Launcher***.

Downloaded from www.Manualslib.com manuals search engine

3. Enter any of the following:

   Icon: Tap the currently displayed page icon thumbnail. (To enlarge a portion of the page, zoom in by making the pinch-out gesture. To capture the portion of the page you want, tap and hold the picture, and then drag the portion you want to the center of the onscreen box. This portion becomes the icon. Tap ***Done***.)

   Title: See “Text Selection Gestures” on page 52 for useful gestures if you want to edit the page title.

   URL: Enter or edit the URL for the page. (For example, change the URL to the home page of a site instead of a drill-down page within the site.)

4. Tap ***Add To Launcher***.

The page now appears as an icon on the ***Launcher***. Tap the icon to open the page.

Downloaded from www.Manualslib.com manuals search engine

Create a Bookmark

1. Open the page you want to bookmark.
2. Open the application menu and tap ***Add Bookmark***.

3. Enter any of the following:

   Icon: Tap the currently displayed bookmark icon. (Then tap, hold, and drag the Web page to use a different portion of the page as the bookmark icon. You can zoom into or out of the page while selecting the portion you want to use. The portion that appears in the white square is used as the icon. If you add the bookmark to the ***Launcher***, the icon is used as the ***Launcher*** icon. Tap ***Done***.)

   Title: See "Text Selection Gestures" on page 52 for useful gestures if you want to edit the bookmark title.

   URL: Enter or edit the URL for the bookmark. (For example, change the URL to the home page of a site instead of a drill-down page within the site.)

4. Tap ***Add Bookmark***.

Downloaded from www.Manualslib.com manuals search engine

The first 12 bookmarks you create become thumbnails on the start page of the Web app.

Note	*Web bookmarks are part of the data backed up to your Palm profile. After a partial or full erase, bookmarks are restored after you revisit the page.*

Open a Bookmarked Page

Do one of the following:

- From the start page when you open the browser, tap a thumbnail.
- While navigating a website, or to open a bookmark that does not appear as a thumbnail on the start page, open the application menu and tap ***Bookmarks***. (Then tap a bookmark.)

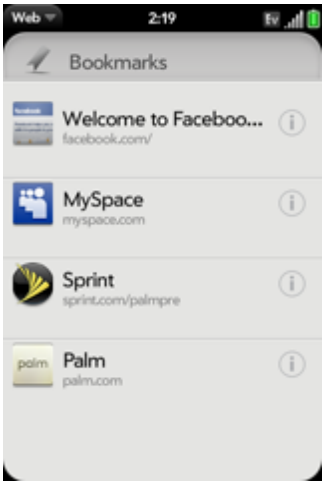

Downloaded from www.Manualslib.com manuals search engine

Edit, Reorder, or Delete a Bookmark

1. Open the application menu and tap ***Bookmarks***.

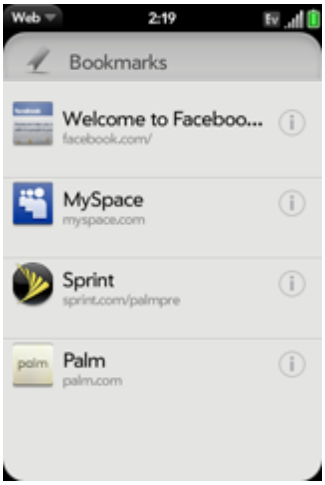

2. Do one of the following:
   - ***Edit:*** Tap ⓘ to the right of the bookmark name. (Enter the new icon, title, or URL, and tap ***Save Bookmark***.)
   - ***Reorder:*** Tap, hold, and drag the bookmark.
   - ***Delete:*** Throw the bookmark off the side of the screen and tap ***Delete***.

Return to Previously Viewed Web Pages

1. Open the application menu and tap ***History***.

Downloaded from www.Manualslib.com manuals search engine

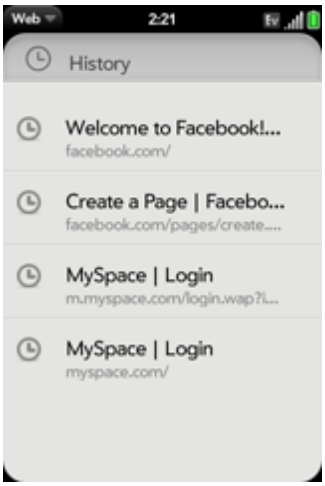

2. Scroll to the page name and tap the page.

You can also search for a recently viewed page by entering a term or address in the address bar that matches the page name or address.

Use Links on a Web Page

- ***To follow a link to another page:*** Zoom in on the page (pinch out or double-tap the page), and tap the link.
- ***To open a link in a new card:*** Press and hold ***Option*** and tap the link. Tap ***Open In New Card***.
- ***To dial a phone number that appears as a link:*** Tap the link to display the dial pad with number entered, and tap .
- ***To share a link with someone via email:*** Press and hold ***Option*** and tap the link. Tap ***Share Link***.
- ***To share a link to a photo with someone via email:*** Press and hold ***Option*** and tap the photo. Tap ***Share Image***.
- ***To copy the URL for a link:*** Press and hold ***Option*** and tap the link. Tap ***Copy URL***.

Downloaded from www.Manualslib.com manuals search engine

Download Files from the Web

1. Open *Web* .
2. Go to the web page with the file you want to download.
3. Tap the file name.
4. If an app on your phone supports the file type, the file name appears at the bottom of the screen. Tap to open the file.

   All files are downloaded to the phone's USB storage. If an app on your phone supports the file type, you can also find the file in that app. For example, if it's a PDF file, find it in PDF View, and if it's an MP3 file, find it in Music.

Customize Web Browser Settings

1. Open *Web* .
2. Open the application menu and tap ***Preferences***.

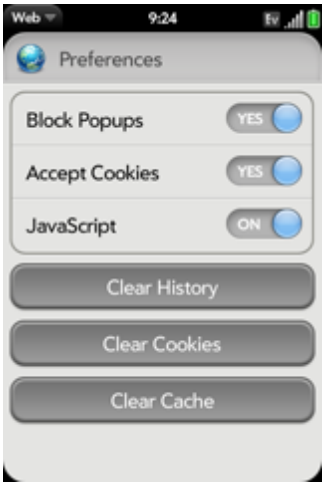

3. Set any of the following:

   Block Popups: Prevents websites from opening up new browser windows. Tap ***Yes*** to turn Block Popups off.

Downloaded from www.Manualslib.com manuals search engine

Accept Cookies: Allows cookies from any website you view, even if you are redirected to a site from another site. Tap ***Yes*** to turn Accept Cookies off.

JavaScript: Tap ***On*** to turn off JavaScript. Turning off JavaScript may prevent some websites from functioning properly.

Clear History: Tap to delete your browsing history.

Clear Cookies: Tap to delete cookies used by some websites to remember visiting history and user settings.

Clear Cache: Tap to delete any Web page content that has been stored in the local cache. This ensures that you are viewing the most current content when you visit a Web page.

Google Maps

1. Open ***Google Maps*** .
2. Tap ***Menu*** in the lower-right corner.

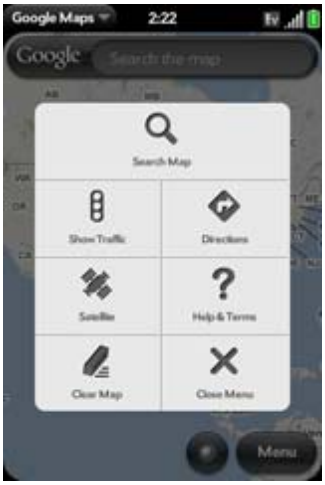

Downloaded from www.Manualslib.com manuals search engine

In Google Maps, use these icons to do the following:

- ***Search Map:*** Search for a location.
- ***Show Traffic:*** View local traffic conditions.
- ***Directions:*** Get directions.
- ***Satellite:*** View a satellite photo of the map area.
- ***Map:*** In Satellite view, tap to return to Map View.
- ***Help & Terms:*** Get help.
- ***Clear Map:*** Clear the current map.
- ***Close Menu:*** Close the Google Maps menu.

Sprint Navigation

You can use Sprint Navigation to get driving directions, check traffic conditions, and search for services.

Sign In to Sprint Navigation

The first time you use Sprint Navigation, you are asked to sign in.

1. Open ***Sprint Navigation***.
2. If prompted, tap ***Accept*** to turn on ***Location Services***.
3. Review the terms of use and tap ***Accept*** or ***Decline***.
4. Enter your first name, last name, and email address (your email address is optional).
5. Tap ***Continue***.

Downloaded from www.Manualslib.com manuals search engine

Get Directions

1. Open *Sprint Navigation* .
2. Tap *Drive To*.

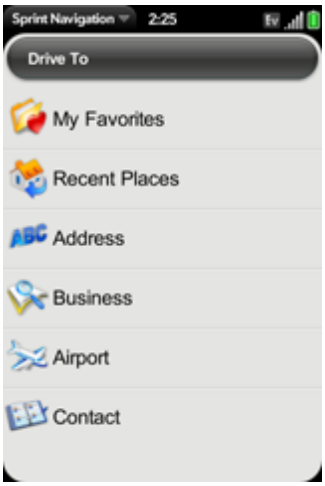

3. Tap any of the following:
   - *My Favorites:* Tap to add an address.
   - *Recent Places:* View directions to places you visited recently.
   - *Address:* Search for directions to a specific street address, intersection, or city.
   - *Business:* Search for a business address.
   - *Airport:* Get directions to an airport.
   - *Contact:* Get directions to a contact's address.

Search for a Service

You can search for a variety of services using Sprint Navigation, including gas stations, banks, parking lots, movie theaters, hospitals, and more.

Downloaded from www.Manualslib.com manuals search engine

1. Open *Sprint Navigation* .

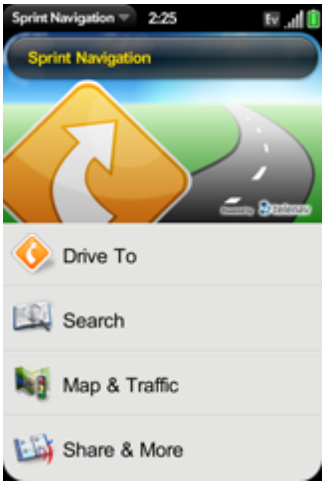

2. Tap *Search*.
3. Tap the *Search Near* field and tap where you want to base your search.
4. Tap the *Category* field and tap the type of service you are looking for.
5. Tap *Search*.

Get Your Location and Local Traffic Information

1. Open *Sprint Navigation* .
2. Tap *Map & Traffic*.
3. Use these icons to do the following:

	View traffic information.
	See your current location.
3D	View the map in 3D.
	Return to the Sprint Navigation menu.

Downloaded from www.Manualslib.com manuals search engine

Bluetooth® Wireless Technology

What Is Bluetooth® Wireless Technology?

With the Bluetooth® wireless technology on your phone, you can connect to a number of Bluetooth devices, including a hands-free device such as a headset or car kit (see “Set Up and Use a Bluetooth® Hands-Free Device” on page 123).

Before you can connect to another Bluetooth device, you need to pair with that device. You can either make the pairing request from your phone (see “Make a Pairing Request to Another Device” on page 291), or accept a pairing request from the other device (see “Accept a Pairing Request From Another Device” on page 293).

Turn the Bluetooth Feature On/Off

Do one of the following:

- Open ***Bluetooth***, and tap ***On*** or ***Off***.
- ***From any screen:*** Open the connection menu, tap ***Bluetooth***, and tap ***Turn on Bluetooth*** or ***Turn off Bluetooth***.

Make a Pairing Request to Another Device

Before You Begin	*The other device must be discoverable to appear on your phone's* **Devices** *list. Check the documentation that came with the other device for information on making it discoverable.*

You can make a pairing request to a Bluetooth audio device such as a headset, car kit, or A2DP device.

Downloaded from www.Manualslib.com manuals search engine

1. Open ***Bluetooth*** .
2. Make sure Bluetooth is on (see “Turn the Bluetooth Feature On/Off” on page 291).

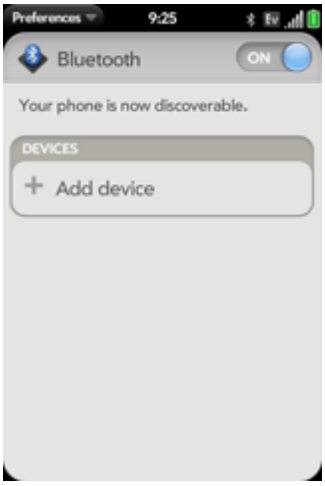

3. Tap ***Add device*** and tap the device name on the list of available Bluetooth devices.
4. If a passkey is not required, pairing is complete when the ***Devices*** list appears. (If a passkey is required, tap ***Yes, allow***.)
5. Do one of the following:
   - ***An automatically generated passkey appears on the passkey screen:*** Check the other device screen to verify that the passkey is correct, and tap ***Yes, connect*** to connect.
   - ***The screen displays a passkey generated by your phone:*** Enter the displayed passkey on the other device.
   - ***The screen prompts you to enter a passkey:*** Check the documentation that came with the other device to see if there’s a required passkey. (If so, enter that passkey on your phone. If not, make up a passkey and enter it on both devices.)

Tip	*You can also open the Bluetooth app by opening the connection menu, tapping* Bluetooth*, and tapping* Bluetooth Preferences*.*

Downloaded from www.Manualslib.com manuals search engine

Accept a Pairing Request From Another Device

Note	*Your phone is only discoverable when the Bluetooth app is open, the app window is maximized, and Bluetooth is turned on. If you move away from the Bluetooth app, minimize the app to a card, or turn off the screen, your phone is no longer discoverable.*

1. Open ***Bluetooth*** .
2. Make sure Bluetooth is on (see "Turn the Bluetooth Feature On/Off" on page 291).
3. Initiate a pairing from the other device.
4. When the connection request appears, tap ***Yes, allow***.
5. If a passkey is not required, pairing is complete when the ***Devices*** list appears. If a passkey screen appears, do one of the following:
   - ***An automatically generated passkey appears on the passkey screen:*** Check the other device screen to verify that the passkey is correct, and tap ***Yes, connect*** to connect.
   - ***The screen displays a passkey generated by your phone:*** Enter the displayed passkey on the other device.
   - ***The screen prompts you to enter a passkey:*** Check the documentation that came with the other device to see if there's a required passkey. (If so, enter that passkey on your phone. If not, make up a passkey and enter it on both devices.)

Connect With a Paired Device

After you pair with a device, you can connect to that device without having to go through the pairing process again.

Note	*To connect with a paired computer, you must initiate the connection from the computer. See the computer documentation for instructions.*

Downloaded from www.Manualslib.com manuals search engine

1. Open *Bluetooth* .

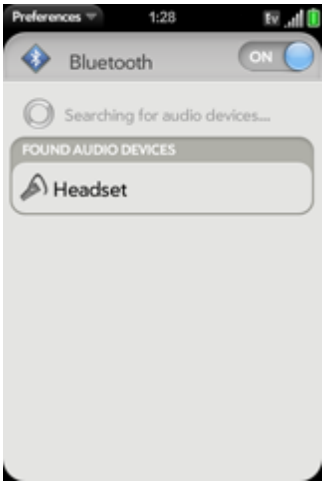

2. Make sure Bluetooth is on (see “Turn the Bluetooth Feature On/Off” on page 291) and tap the device name.

Disconnect From a Device

Disconnecting from a device does not mean you delete the relationship you created between the device and your phone. See “Connect With a Paired Device” on page 293 for instructions on how to reconnect with the device.

1. Open *Bluetooth* .
2. Tap the connected device name to disconnect from it. (Or tap another device name to disconnect from the current device and connect to the new device.)

Delete a Device

Deleting a device means you end the relationship you created between your phone and the device. This means that you will need to pair with the device again if you want to connect (see “Make a Pairing Request to Another Device” on page 291 or “Accept a Pairing Request From Another Device” on page 293). If all you want to do is temporarily disconnect from a device, see “Disconnect From a Device” on page 294.

Downloaded from www.Manualslib.com manuals search engine

1. Open *Bluetooth* .
2. Throw the name off the side of the screen and tap ***Delete***.

Rename a Device

1. Open *Bluetooth* .
2. Tap and hold the device name.
3. Enter a new name.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Section 4

Your Resources

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Section 4A

Troubleshooting

In This Section

- For Current Palm® Smartphone Users (page 300)
- Battery (page 301)
- Screen and Performance (page 310)
- Phone (page 312)
- Hands-free Devices (page 315)
- Synchronization (page 316)
- Email (page 319)
- Messaging (page 321)
- Web (page 323)
- Calendar and Contacts (page 326)
- Camera (page 328)
- Amazon MP3 (page 328)
- Transferring Information From Your Computer (page 329)

Downloaded from www.Manualslib.com manuals search engine

- Backing Up and Restoring Data (page 330)
- Updates (page 331)
- Third-party Applications (page 331)
- Making Room on Your Phone (page 333)

For Current Palm® Smartphone Users

I want to transfer my data from my computer

If you previously synchronized data between a Palm® smartphone—such as contacts or calendar events—and a desktop organizer such as Palm® Desktop by ACCESS or Microsoft Outlook®, you can do a one-way export of that data from the desktop organizer to your Palm® Pre™ phone.

Windows: You can transfer contacts, calendar events, tasks, and memos/notes from Palm Desktop software by ACCESS version 6.2.2 and Microsoft Outlook 2003 or later. If you don't have Palm Desktop version 6.2.2, download it from *palm.com*.

Mac: You can transfer contacts, calendar events, and tasks from Address Book and iCal. Transfer of data from Palm Desktop software on the Mac is not supported at this time.

Note	*You can transfer data from Palm Desktop and Outlook on your Windows computer, and from Address Book and iCal on your Mac computer, even if you never synchronized with a Palm smartphone.*

For instructions on doing a one-way data transfer, see “Transferring Data” on page 95.

Downloaded from www.Manualslib.com manuals search engine

Battery

WARNING	*Use only batteries and chargers that are approved by Sprint and Palm with your phone. Failure to use a battery or charger approved by Sprint and Palm may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage. Use of unapproved third-party power supply accessories may damage the device and void the Limited Warranty for the product.*

I can't charge the battery

- If you're using a new battery or a new charger, make sure the battery and charger are approved by Sprint and Palm for use with your phone. Failure to use an approved battery or charger may prevent your phone from turning on or charging.
- If you're using an existing, approved battery, the battery may have reached the end of its useful life and needs to be replaced. See "I need to replace the battery" on page 301 for details.

I need to replace the battery

Your Pre phone comes with a replaceable battery. Be sure to use a battery that is approved by Palm and Sprint and that is compatible with your phone. Failure to use the proper battery may result in personal injury or product damage, and it voids your phone warranty.

Note	*Please dispose of the old battery properly.*

Downloaded from www.Manualslib.com manuals search engine

1. Press and release the ***back cover release***.

2. Slide your thumbnail or a credit card between the back cover and the phone, starting at the bottom and moving halfway up one side until you hear the clasp (x) release.

3. Repeat step 2 to release the clasp (y) on the other side of the phone.

Downloaded from www.Manualslib.com manuals search engine

4. Lift off the back cover.

5. Remove the ***battery*** by pulling the tab that appears at the top of the battery.
6. Insert the new ***battery***.

Downloaded from www.Manualslib.com manuals search engine

7. Position the back cover over the phone and gently press the top two clasps (a), located at the top corners. (Then press the two clasps (b) halfway down either side of the phone.)

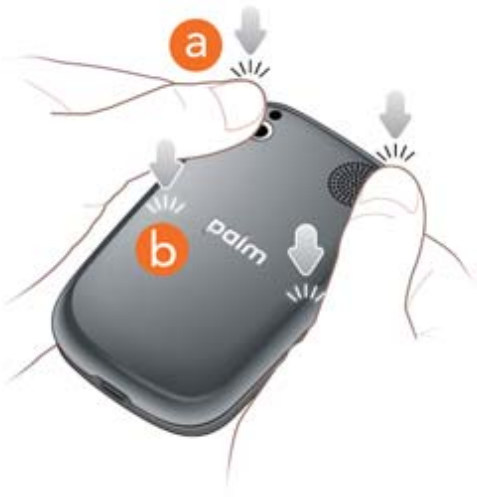

8. Slide out the keyboard (see “Slide Out the Keyboard” on page 33), and then press the two clasps (c) at the bottom corners.

Downloaded from www.Manualslib.com manuals search engine

9. Press and hold the ***power*** button on the upper-right corner of your phone until you see a logo on the screen (approximately five seconds). (Please be patient while your phone starts up.)

Did You Know?	*If your phone does not turn on after you insert the battery and press and hold* **power**, *you need to connect your phone to the AC charger to charge it (see "Charge the Battery" on page 39).*

Downloaded from www.Manualslib.com manuals search engine

I can't get my screen to turn on after removing and replacing the battery

Removing the battery turns off your phone completely, so you can't just slide out the keyboard or press ***power*** to turn on the screen. Instead, press and hold ***power*** until you see a logo on the screen (approximately five seconds). Please be patient while your phone starts up.

Did You Know?	*If your phone does not turn on after you press and hold* **power**, *you need to connect your phone to the AC charger to charge it (see "Charge the Battery" on page 39).*

I can't get the back cover off

1. Press and release the ***back cover release***.

2. Slide your thumbnail or a credit card between the back cover and the phone, starting a the bottom and moving halfway up one side until you hear the clasp (x) release.

Downloaded from www.Manualslib.com manuals search engine

3. Repeat step 2 to release the clasp (y) on the other side of the phone.

Downloaded from www.Manualslib.com manuals search engine

4. Lift off the ***back cover***.

I can't get the back cover back on

1. Position the ***back cover*** over the phone and gently press the top two clasps (a), located at the top corners. Then press the two clasps (b) halfway down either side of the phone.

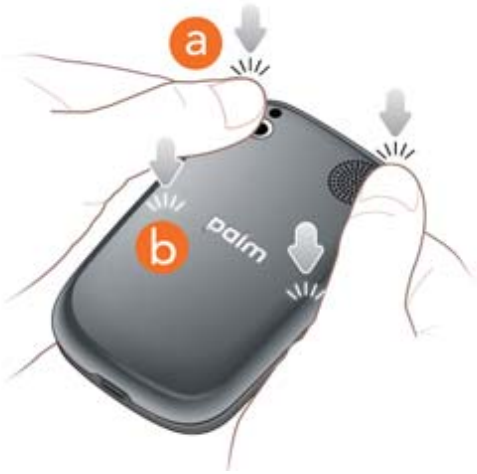

Downloaded from www.Manualslib.com manuals search engine

2. Slide out the keyboard (see “Slide Out the Keyboard” on page 33), and then press the two clasps (c) at the bottom corners.

Help

Downloaded from www.Manualslib.com manuals search engine

Screen and Performance

The screen appears blank

To save power, the screen dims automatically after a period of inactivity, and then turns off.

If you have inserted or replaced the battery, you need to press and hold ***power*** until you see a logo on the screen. Otherwise, follow these steps in sequence if you see a blank screen:

1. To brighten the screen if it has dimmed, tap the screen.
2. To turn on the screen, do one of the following:
   - Press ***power***. Drag up to unlock the screen.
   - Slide out the keyboard.
3. Look closely at the screen. (If you can see a dim image, try adjusting the screen brightness (see "Change Screen Brightness" on page 221).)
4. If the problem persists, connect your phone to the AC charger (see "Charge the Battery" on page 39). (If you see a dim image, try to restart your phone (see "Restart Your Phone" on page 216).)
5. If that doesn't work, press and hold ***power*** and slide the ***ringer*** switch three times to restart your phone. (Please be patient while your phone starts up.)

An application is not responding to taps

Try the following steps in sequence:

1. Open ***Device Info*** and restart your phone (see "Restart Your Phone" on page 216).
2. If the screen does not respond to taps at all, press and hold ***power*** and slide the ***ringer*** switch three times to restart your phone. (Please be patient while your phone starts up.)

Downloaded from www.Manualslib.com manuals search engine

Applications are running slower than usual

Tip	*Be sure that any third-party applications you install are compatible with the Palm® webOS™ platform. Applications written for earlier Palm smartphones are not compatible with your Pre phone. If you can try a free version of the software before purchasing it, you can test it first to make sure it works properly.*

1. Press ***Center*** to display ***Card view***.
2. Scroll through the cards and note how many applications you have running.
3. Close any application you are not using by throwing its card off the top of the screen.

If the problem persists, try restarting your phone (see “Restart Your Phone” on page 216).

My gestures in the gesture area aren’t working

- Make sure you are doing the gesture in the correct area. (The gesture area extends horizontally all the way across your phone, but it extends vertically only from the bottom of the screen to the middle of the ***Center*** button. If you are making a gesture below the ***Center*** button, try moving your finger up.)

* Gesture area

Downloaded from www.Manualslib.com manuals search engine

- Some gestures begin in the gesture area and end in the touchscreen, and vice versa. (Crossing the border between the two areas with your finger is crucial to making the gesture successfully.)
- If you cannot make the back gesture, check to see if you have the next/previous app gesture turned on (see "Turn Advanced Gestures On/Off" on page 222). (If so, you need to make a short swipe left for the back gesture, and a full swipe right or left for the next or previous open app.)
- Likewise, you can't use the next/previous app gesture unless you turn them on (see "Turn Advanced Gestures On/Off" on page 222).
- You can see animations of many gestures: Open ***Help*** and tap ***Clips***. (Or go to *palm.com/support* to watch the animations on your desktop computer. Also, see "Use Gestures: Tap, Swipe, Drag, Flick, Pinch" on page 44.)

There are small icons in the lower-right corner of the screen

Those icons represent notifications that you have not opened or dismissed. For most types of notifications, if you do not tap a notification after a few seconds, it becomes an icon in the lower-right portion of the screen. If you see one or more icons, tap anywhere on the bottom of the screen to display your notifications.

Phone

Signal strength is weak

Become familiar with low coverage areas where you live, commute, work, and play. Then you know when to expect signal-strength issues.

- If you're standing, move about 10 feet (three meters) in any direction.
- In a building, move near a window. (Open any metal blinds.)
- In a building, move outdoors or to a more open area.
- Outdoors, move away from large buildings, trees, or electrical wires.
- In a vehicle, move your phone so that it's level with a window.

Downloaded from www.Manualslib.com manuals search engine

My phone won't connect to the mobile network

- Try the suggestions in the preceding section for weak signals.
- Turn off your phone and turn it on again (see "Turn the Phone On/Off" on page 20).
- If your phone is connected to your computer in USB Drive mode, disconnect your phone from your computer (see "Copy Other Types of Files Between Your Phone and Computer" on page 93).
- Restart your phone (see "Restart Your Phone" on page 216).

I see five bars in the signal-strength icon, but I still can't connect to the network

The ***signal-strength*** icon always displays five bars. Your signal strength is indicated by the number of bars that are shaded white. If most or all of the bars are gray, you are in an area of weak or no coverage.

The other person hears an echo

- Try decreasing the volume on your phone to avoid coupling or feedback on the other person's end. (This applies to both the speakerphone and the earpiece.)
- Position the earpiece closer to your ear to prevent sound leaking back into the microphone.
- If you're using the speakerphone feature with your phone lying on a flat surface, try turning the phone face down (screen facing the surface).

I hear my own voice echo

Ask the person on the other end of the call to turn down the volume on his or her phone or to hold the phone closer to his or her ear.

My voice is too quiet on the other end

- Be sure to position the microphone, which is on the lower-left side of the gesture area, close to your mouth. (Make sure you are not covering the microphone with your cheek or chin.)

Downloaded from www.Manualslib.com manuals search engine

- Check the ***signal-strength*** icon. (If the signal is weak, try to find an area with better coverage (see “Signal strength is weak” on page 312).)

I hear static or interference

Check the ***signal-strength*** icon. If the signal is weak, try to find an area with better coverage (see “Signal strength is weak” on page 312).

If you’re using a hands-free device enabled with Bluetooth® wireless technology, try the following:

- Move your phone closer to the hands-free device. (Audio quality degrades as the distance between your phone and the hands-free device increases. The effective range for a hands-free device varies among manufacturers.)
- Confirm that no obstructions, including your body, are between the phone and your hands-free device. (For example, move your phone to the same side of your body as your hands-free device.)

My phone seems to turn off by itself

Your phone has a power-saving feature that’s set to turn off the screen if it has been idle for one minute. You can change the auto-shut off interval (see “Set the Interval for Turning the Screen Off Automatically” on page 221).

If you restart your phone, any wireless services are automatically turned on if they were on before the restart. However, if the phone can’t determine if a wireless service was on before the restart, that service does not automatically turn on (see “Turn the Phone On/Off” on page 20).

If the problem persists and you’re using third-party applications, see “Third-party Applications” on page 331 for additional suggestions.

Downloaded from www.Manualslib.com manuals search engine

Hands-free Devices

I can't make or receive calls using a Bluetooth® hands-free device

Verify all of the following:

- The Bluetooth feature is turned on (see "Turn the Bluetooth Feature On/Off" on page 291).
- Your Bluetooth hands-free device is charged and turned on.
- You have already formed a partnership between your phone and your hands-free device, and the hands-free device appears in the ***Devices*** list (see "Connect With a Paired Device" on page 293).
- Your phone is within range of the hands-free device. (Bluetooth range is up to 30 feet (10 meters) in optimum environmental conditions, which include the absence of obstacles, radio interference from nearby electronic equipment, and other factors.)
- You are away from other devices using the 2.4GHz radio frequency, such as cordless phones and microwaves. (If this is impossible, move the phone closer to the hands-free device.)
- The hands-free device is compatible with your phone. (Go to *palm.com/support* to see a list of supported devices.)

I lost the connection between my phone and my Bluetooth headset

If your headset isn't working, delete the existing partnership (see "Delete a Device" on page 294) and create a new one (see "Set Up and Use a Bluetooth® Hands-Free Device" on page 123).

I hear static or interference when using my hands-free device

- Try moving your phone closer to the hands-free device. (Audio quality degrades as the distance between your phone and hands-free device increases. The effective range for a hands-free device varies among manufacturers.)
- Confirm that no obstructions, including your body, are between the phone and your hands-free device.
- Move to a quieter location to reduce environmental noise.

Downloaded from www.Manualslib.com manuals search engine

Some features of my hands-free device don't work with my phone

- Check the compatibility list at *palm.com/support* to ensure that your device is compatible with your Pre phone.
- Not all hands-free features work with every hands-free device. (Check the documentation that came with your hands-free device or the manufacturer's website for feature-compatibility information specific to your device.)

Synchronization

What is synchronization?

Anytime you are in Email, Messaging, Calendar, or Contacts, you can set up a relationship to wirelessly sync data with selected service providers—for example, Google's Gmail or Microsoft Exchange ActiveSync (EAS—check to see if your company supports this). Sync means that if you enter, change, or delete information in one location, the change automatically shows up in the other location. So if you enter a Google contact in the Contacts application on your phone, the contact appears in your online Google contacts—no need to enter it twice.

You must already have an account with a service provider before you can set it up on your phone.

How do I set up synchronization with an online account?

The first time you open Email, Contacts, or Calendar, you are given the option to enter settings for one or more online accounts (see "Set Up Email" on page 237, "Use Contacts for the First Time" on page 156, or "Use Calendar for the First Time" on page 174). For any account, you need to enter the settings in only one of these applications to synchronize data for all three.

You can add additional accounts at any time using the preferences in any of these applications (see "Set Email Preferences" on page 253, "Customize Contacts" on page 170, or "Customize Calendar" on page 182).

You can also set up the Messaging application to work with an online instant messaging (IM) account (see "Set up an Instant Messaging (IM) Account" on page 263), and the Photos

Downloaded from www.Manualslib.com manuals search engine

application to work with an online pictures account such as Facebook or Photobucket (see "Set Up an Online Pictures Account on Your Phone" on page 136).

I don't want to sync calendar or contact information with my online account—just email

If you do not want to sync an application with an online account, you can remove that account from within the application. For most online accounts, this stops synchronization of that application only. Exchange accounts, however, are an exception to this: If you delete an Exchange Calendar, Contacts, or Email account, Exchange data is removed from all apps (Calendar, Contacts, Tasks, and Email).

1. Open the application.
2. Open the application menu and tap ***Preferences & Accounts***.
3. Tap the account name.
4. Tap ***Remove Account***, then tap ***Remove [app name] Account***.

I want to sync with Outlook or Palm Desktop software on my computer

Your Pre phone does not support synchronization with Palm Desktop software or Outlook on your desktop computer. Your Pre phone, however, gives you options for synchronization without a cable. You can sync with online services that Palm has partnered with so that you can store and sync your info in online accounts. You can access your data even when you are not able to make a connection to the Web because your data is cached on your phone.

If you have data from a Palm smartphone in Outlook or Palm Desktop software, you can do a one-time, one-way export of data from the desktop organizer to your Pre phone (see "Transferring Data" on page 95). You can assign this data to sync with an online account. You can also assign it to the Palm profile account. Data in the Palm profile account is backed up to your Palm profile daily, so you can retrieve it if you need to reset your phone. But it is not a true sync, because you cannot change your Palm profile data anywhere except on your phone.

Downloaded from www.Manualslib.com manuals search engine

If your Outlook data is associated with a Microsoft Exchange ActiveSync account, you can synchronize the info wirelessly with Exchange, but you cannot export your data from the copy of Outlook on your computer to your phone.

Tip	*A number of third-party applications (sold separately) are available that let you synchronize data on your Pre phone with a desktop application. Visit palm.com/migrate-pre to learn more.*

I have an Exchange ActiveSync account at work, but my data is not being downloaded to my phone

Check with your system administrator to obtain or verify the name of the mail server that offers you wireless access to the corporate mail system. If you cannot obtain the name of this server (some companies do not give it out, because they do not want wireless access to their servers), you cannot synchronize with your Exchange ActiveSync account.

If your company requires you to change your password for accessing your Exchange ActiveSync account, you must change the password on your phone (see "Change Account Login Settings" on page 243).

I have entered the settings to sync with Exchange ActiveSync, but I can't synchronize with my company's Exchange server

Check with your system administrator to find out if a systemwide locking policy is in place.

A notification tells me that ActiveSync encountered a problem on the server

There is a temporary problem with the server, or the server may be temporarily overloaded. Try again later, and if the problem persists, contact your system administrator.

A notification tells me that there is not enough free memory to synchronize

1. Press ***Center*** to display ***Card view***.
2. Scroll through the cards and note how many applications you have running.

Downloaded from www.Manualslib.com manuals search engine

3. Close any application you are not using by throwing its card off the top of the screen.

If the previous steps don't fix the problem, see "Making Room on Your Phone" on page 333 for other suggestions.

A notification tells me that the server could not be reached

Make sure your phone is connected either to the Sprint network or to a Wi-Fi network (see "What Are All Those Icons?" on page 120).

If you have a network connection and receive this notification, it means your phone had to wait too long to connect to the Exchange server. The connection may have been lost, the server may be temporarily overloaded, or the server may have encountered an internal error. Check your Exchange server name and proxy server settings (see "Set Up Email: Microsoft Exchange ActiveSync (EAS)" on page 239), and try again later.

A notification tells me that ActiveSync encountered a problem with [item type] [item name]

There was an error while synchronizing a single item. This error can usually be corrected only by deleting the item that caused the error. If you sync again to see if the error persists, be aware that items causing this type of error are skipped and do not show up again.

Email

I have problems using my account

Occasionally you may experience problems using an email account after you set it up. If you followed the account setup procedure (see "Set Up Email" on page 237) and are experiencing problems using the account, verify that the account complies with your email provider's requirements:

- Verify both your password and your username for your email account.

Downloaded from www.Manualslib.com manuals search engine

- Some wireless service providers require you to be on their network to use your email account. If this is the case, be sure to use the Sprint network as the connection type for the account.
- Some wireless service providers have other requirements specific to their service. (Check with Sprint to find out whether any provider-specific requirements exist.)
- Make sure your ISP or email provider allows you to access email on a Pre phone. (Some providers do not offer this option at all; other providers require an upgrade for you to access email on a phone.)
- Email provider settings may change. (If your email account was working but you are currently experiencing problems, check with your email provider to find out whether any of the account settings have changed.)
- If you changed your password in an online email account, you must change the password on your phone (see "Change Account Login Settings" on page 243).

I have problems sending and receiving email

- Make sure your phone is on and that your data connection to your mail server or email service provider has not been interrupted (see "Turn the Phone On/Off" on page 20).
- Short periods of time when email is unavailable are common, due to server problems or poor wireless coverage. (If you have problems sending or receiving mail for an extended period of time, check with your ISP or email service provider to verify that the service is working properly, and check with Sprint Customer Service for outage information in your area.)

I have problems sending email (IMAP and POP accounts)

If you are able to receive email messages but cannot send them, try the following:

- Turn on authentication (see "Set Up Email: Other Providers" on page 240). (Many service providers require authenticated access, or ESMTP, to use their SMTP servers for outgoing mail.)
- Enter the name of a different outgoing mail server for sending mail (see "Set Up Email: Other Providers" on page 240). (Many ISPs, such as cable companies, require that you have an Internet connection to their network to send email through their servers. In this

Downloaded from www.Manualslib.com manuals search engine

case, you can almost always receive email from these accounts, but if you want to send email, you must send it through another server. Contact Sprint for an outgoing mail server option based on your Sprint account settings. In other cases, your ISP may be able to provide you with the outgoing mail server settings required to send mail from your phone.)

After I receive messages, older messages disappear from my Inbox

When email sync takes place, the last three days' worth of email messages are downloaded from your mail server to your Inbox. All messages older than three days are removed from your Inbox; they are not deleted on the server, however.

You can change the setting to download fewer than three days' worth of messages (in which case, more-recent messages are deleted from your Inbox), or to download all messages regardless of the date (in which case all messages continue to appear in your Inbox) (see "Enter Advanced Account Settings" on page 242).

Messaging

I can't tell if data services are available

Key Term	***1xRTT (single-carrier [1x] radio transmission technology):*** *A wireless technology that can provide fast data transfer and Internet access, with average speeds of 60-to-80Kbps and bursts of up to 144Kbps.*

Key Term	***EvDO (Evolution Data Optimized):*** *A wireless broadband technology that is designed for very high-speed data transfer, with average download speeds of 400-to-600Kbps, and capable of reaching speeds up to 3.2Mbps and upload speeds up to 1.8Mbps.*

Downloaded from www.Manualslib.com manuals search engine

The following icons appear in the title bar to indicate whether data services are available. If you don't see one of these icons, you cannot open a data connection:

1x	Your phone is connected to the Sprint 1x data network. Data is not currently being transmitted over the network.
1x	Your phone is connected to the Sprint 1x data network and data is being transmitted over the network.
Ev	Your phone is connected to the Sprint Mobile Broadband (EvDO) data network. Data is not currently being transmitted over the network.
Ev	Your phone is connected to the Sprint Mobile Broadband (EvDO) data network and data is being transmitted over the network.
	Your phone is connected to a Wi-Fi network. You can open a data connection.

I can't send or receive text or multimedia messages

- Make sure that your phone is on (see "Turn the Phone On/Off" on page 20).
- If your phone is connected to your computer in USB Drive mode, disconnect your phone from your computer (see "Copy Other Types of Files Between Your Phone and Computer" on page 93).
- For multimedia messages, contact Sprint to verify that your plan includes messaging services, that these services have been correctly activated, and that they are available at your location. (Sprint should be able to tell you if messaging services have been experiencing transmission delays.)
- If possible, contact the recipient of the message, and make sure the receiving device can handle the type of message you're sending.
- If a message arrives but does not display a notification, restart your phone (see "Restart Your Phone" on page 216).

Downloaded from www.Manualslib.com manuals search engine

I want to send a video in a multimedia message, but do not see it on the list of items I can attach

You can attach only pictures in JPG format to outgoing multimedia messages. (To send files of other types, attach them to an email message (see "Add Attachments to a Message" on page 245).)

Wi-Fi

I am trying to connect my phone to my Wi-Fi network and need to find the phone's MAC address

Open ***Device Info***, tap ***More Info***, and tap ***Hardware***. Under ***Phone***, the number listed to the right of ***Wi-Fi*** is your phone's MAC address.

Web

I can't tell if data services are available

Key Term	***1xRTT (single-carrier [1x] radio transmission technology):*** *A wireless technology that can provide fast data transfer and Internet access, with average speeds of 60-to-80Kbps and bursts of up to 144Kbps.*

Key Term	***EvDO (Evolution Data Optimized):*** *A wireless broadband technology that is designed for very high-speed data transfer, with average download speeds of 400-to-600Kbps, and capable of reaching speeds up to 3.2Mbps and upload speeds up to 1.8Mbps.*

Downloaded from www.Manualslib.com manuals search engine

The following icons appear in the title bar to indicate whether data services are available. If you don't see one of these icons, you cannot open a data connection:

1x	Your phone is connected to the Sprint 1x data network. Data is not currently being transmitted over the network.
1x	Your phone is connected to the Sprint 1x data network and data is being transmitted over the network.
Ev	Your phone is connected to the Sprint Mobile Broadband (EvDO) data network. Data is not currently being transmitted over the network.
Ev	Your phone is connected to the Sprint Mobile Broadband (EvDO) data network and data is being transmitted over the network.
	Your phone is connected to a Wi-Fi network. You can open a data connection.

My phone won't connect to the Internet

Your phone supports Sprint Mobile Broadband (EvDO), Sprint 1xRTT, and Wi-Fi wireless data networks. To connect to the Internet, you must either subscribe to data services with Sprint or be within range of a Wi-Fi network.

- If your phone is connected to your computer in USB Drive mode, disconnect your phone from your computer (see "Copy Other Types of Files Between Your Phone and Computer" on page 93).
- If you are in roaming coverage, check to see if you have data roaming enabled. Open ***Phone***, open the application menu, and tap ***Preferences***. Under ***Network***, tap ***Data Roaming*** and tap ***Enabled***.
- Turn off your phone and turn it on again (see "Turn the Phone On/Off" on page 20).
- Restart your phone (see "Restart Your Phone" on page 216).
- Contact Sprint to verify that your subscription plan includes data services and that these services have been correctly activated. (Sprint should also be able to tell you if there are any outages in your location.)

Downloaded from www.Manualslib.com manuals search engine

I can't access a page

1. Make sure you have Internet access:
   - Open ***Web*** and try to view a Web page you've loaded before.
   - To ensure that you're viewing the page directly from the Internet, tap .
   - After confirming your Internet connection, try to view the page in question again. If it comes up blank, tap .
   - If you're still having trouble, the page may contain elements that are not supported by the browser, such as Flash, Shockwave, VBScript, WML script, and other plug-ins.
2. Some websites redirect simple Web addresses given to the public to actual Web addresses that are more complex (for example, if you enter the address *www.palm.com/support*, it may actually go to the Web address *http://www.palm.com/us/support*. If your phone's browser can't follow the redirect, enter the Web address in a desktop browser and read the actual Web address in the address bar. Then enter the actual address in your phone's browser.

An image or map is too small on my screen

Do either of the following:

- To switch to landscape mode to see more of the image, turn the phone on its side.
- To zoom in on the image, pinch out or double-tap the screen.

A secure site refuses to permit a transaction

Some websites don't support certain browsers for transactions. Contact the site's webmaster to make sure the site allows transactions using your phone's Web browser.

It takes a long time for a page to load

If it is taking longer than usual to load Web pages, you may have traveled from a high-speed Sprint Mobile Broadband service area to a Sprint 1xRTT service area.

Downloaded from www.Manualslib.com manuals search engine

1. On any screen, look for the Sprint Mobile Broadband Ev icon or the Sprint 1xRTT data 1x icon in the title bar.
2. If you see the Sprint Mobile Broadband Ev icon, there may be a problem with the website you are trying to access. (Try opening a different website to see if the problem persists.)
3. If you see the Sprint 1xRTT data 1x icon, you may be experiencing the difference in performance between the two types of data networks.
4. To be sure there is not a problem with your connection to the Sprint network, turn off your phone and turn it on again (see "Turn the Phone On/Off" on page 20).
5. Try opening the Web page again to see if it loads faster.

Calendar and Contacts

I haven't entered any contacts or calendar events on my phone, but when I open those apps, I see entries

The entries you see displayed in Calendar or Contacts have been downloaded to your phone from one of your online accounts such as Google or Microsoft Exchange ActiveSync. Anytime you are in Email, Calendar, or Contacts, you can set up a relationship to wirelessly sync data with one of these accounts. And after you enter the account settings in just one of these apps, any information you have online is automatically downloaded to all three—so if you set up a Gmail account in Email but also have a Google calendar, your phone's calendar automatically displays events entered in your Google calendar.

You can remove an online account from an application so that that app no longer syncs with that account (see "Stop Synchronization of Contacts With an Online Account" on page 172, "Stop Synchronization of Calendar With an Online Account" on page 183, or "Delete an Email Account" on page 243).

Downloaded from www.Manualslib.com manuals search engine

My personal and work contact and calendar information is getting merged into a single view—I'd rather keep them separate

The Palm® Synergy™ feature on your phone displays information from several sources in a single view, so you can access your info quickly, without having to remember where you stored it.

For example, suppose you have a Google account for personal email, contacts, and calendar events, and an Exchange account for your corporate email, contacts, and events. The Email, Contacts, and Calendar applications on your Pre phone all provide a kind of view in which you can see information from both of those accounts in one place—but though the information is brought into one view, the sources of that information are kept separate.

What's more, the linked contact feature in Contacts lets you see all your information for a person in a single view—even if that information comes from multiple sources.

For information on displaying a single calendar view only in Calendar, see "Change the Calendar Display" on page 179. For information on unlinking contacts, see "Unlink a Contact" on page 165.

I started entering a contact's name in universal search, but I'm not seeing the person in the results

- You need to enter at least two letters in universal search before contact matches are returned.
- If the contact is a linked contact, universal search searches on the primary profile only (see "Link a Contact" on page 164). (Scroll through the contact match results to make sure that universal search did not return a different match for your contact from the one you were expecting. If you can't find a match, check the linked contact to make sure the correct profile is set as the primary profile.)

Downloaded from www.Manualslib.com manuals search engine

Camera

Here are some tips for taking good pictures with the camera:

- Clean the camera's lens with a soft, lint-free cloth.
- Take pictures in bright lighting conditions. (Low-light images may be grainy, due to the sensitivity of the camera.)
- Hold the phone as still as possible. (Try supporting your picture-taking arm up against your body or a stationary object (such as a wall).)
- Keep the subject of the pictures still. (Exposure time is longer with lower light levels, so you may see a blur.)
- For best results, verify that you have the brightest light source coming from behind you, lighting the subject's face. (Avoid taking indoor pictures with the subject in front of a window or light. If the light is behind the subject, try moving closer to the subject and enabling the flash.)
- Make sure the subject is at least 18 inches (.5 meter) away from the camera to ensure good focus.
- If you take a picture when the keyboard is slid out, press *Space* to take the picture instead of tapping the onscreen shutter icon.

Amazon MP3

I bought a song from Amazon MP3, but it isn't showing up on my phone

Occasionally, the download process may be interrupted, so a song you purchased may not be successfully downloaded to your phone. To confirm the purchase and download of a song, log in to your Amazon account from your computer. If the song shows up there as purchased and downloaded, contact Amazon support and let them know you never received your song.

Downloaded from www.Manualslib.com manuals search engine

Transferring Information From Your Computer

I bought a song through Amazon MP3 and want to transfer it to my computer

You can copy music files on your phone to your computer for use with a desktop music player. For instructions, see “Copy Files Between Your Phone and Your Computer” on page 92.

I copied a group of music folders from my computer, but I can’t see or play them on my phone

When you connect your phone to your computer in USB Drive mode, you can copy any file onto your phone. However, each media application on your phone—Photos, Music, and Videos—can display or play files in certain file formats only. If your media file is in an unsupported format, you can’t use it on your phone.

When I open the Palm Pre drive folder from my computer, I see subfolders. Do I need to move my files into these folders?

The default folders are there to help you organize files you copy to and from your computer. But you can copy files from your computer into any folder you want—you can create your own folders, or just drag your files to the top level of the drive. As long as the file is in a supported format, your phone can detect and open it.

Note	*If you move a music file into the* ringtones *folder, the* Music *application cannot find it.*

Downloaded from www.Manualslib.com manuals search engine

Backing Up and Restoring Data

I need to reset my phone but don't understand the difference between a partial erase and a full erase

Both a partial erase and a full erase delete all personal information, such as events, contacts, and tasks, as well as applications you have added, such as third-party software, on your phone. In addition, a full erase deletes all files stored in the USB Drive of your phone, which includes all pictures, videos, music files, documents, and PDF files.

How do I get my data back after a full or partial erase?

After a full or a partial erase, on your phone, enter your existing Palm profile email address, and password—don't create a new one! When you do this, all data that has been backed up to your profile—contacts, calendar events, and tasks, as well as apps you bought through App Catalog—is restored to your phone. Information from online accounts you synchronize with—such as Google or Microsoft Exchange ActiveSync—is restored to your phone also.

A full erase deletes everything deleted by a partial erase, plus everything you stored in your phone's USB Drive (photos, videos, music, documents, ringtones, and so on). You need to have copies of those files available elsewhere if you want to restore them to your phone. For example, you can save copies on your computer and then transfer them back to your phone (see "Copy Files Between Your Phone and Your Computer" on page 92).

I thought my Web bookmarks were backed up, but I don't see them

Web bookmarks are part of the data backed up to your Palm profile. After a partial or full erase, a bookmark is restored after you revisit the page for which you created the bookmark.

Downloaded from www.Manualslib.com manuals search engine

Updates

I dismissed a system update notification, and now I don't know how to get the update on my phone

If you have a Wi-Fi connection and the battery has at least a 30% charge, you can start the update yourself: Open ***Updates***. Your phone checks for the availability of the update, and if one is available, tap ***Download Now***. The download happens in the background, so you can continue to use your phone until the actual installation takes over.

Your phone installs the update within a week of your receiving the first notification. This update occurs automatically the next time you charge your phone. An update installation cannot begin unless you have at least a 30% charge on your battery. If you tap ***Install Later***, the update will automatically install the next time all three of the following conditions are true: the phone is charging and idle, and the battery has at least a 30% charge.

My phone froze while I was downloading or installing a system update

During a wireless software update, there's a small chance that your phone may freeze and stop responding to taps or key presses. If this happens, you can use webOS Doctor™ to restore your phone and install the system update from your computer using the ***USB cable***. On your computer, go to *palm.com/support* to download webOS Doctor.

Third-party Applications

Some third-party applications can cause conflicts with your phone. Third-party applications that modify the wireless features of your phone may require extra troubleshooting. Use caution when installing the following:

- Ringtone managers.
- Caller ID applications.
- Instant messaging.

Downloaded from www.Manualslib.com manuals search engine

- Applications that modify when your phone or data connections turn on or off and how your phone behaves.

If you recently installed an application and your phone seems to be stuck, try the following in sequence until the problem is resolved:

1. Restart your phone (see “Restart Your Phone” on page 216).
2. Make sure your third-party applications are up to date (see “Manually Check for Updates” on page 84).
3. See if a system update is available (see “Manually Check for Updates” on page 84).
4. Delete the most recently installed application, or the application you think could be causing the problem, from your phone (see “Delete an Application” on page 66). (Perform a backup (see “Back Up Your Information” on page 210).)
5. Perform a partial erase (see “Erase Data and Reset Your Phone” on page 217).
6. Enter your Palm profile email address and password to restore your backed-up information.
7. If the problem is resolved, begin reinstalling your third-party applications one at a time.
8. If the problem recurs, delete the last application you installed and report the problem to its developer.

Getting more help

Contact the author or vendor of any third-party software if you require further assistance. Neither Palm nor Sprint provides technical support for applications that are not built into your phone.

Downloaded from www.Manualslib.com manuals search engine

Making Room on Your Phone

If you store a large number of files, or install many third-party applications, the internal memory on your phone may fill up. Here are some ways to clear space on your phone:

- ***Photos, Videos, Music, Amazon MP3, Doc View, PDF View:*** Large media files take up a lot of memory. Move files to your computer (see "Copy Files Between Your Phone and Your Computer" on page 92), or delete them from your phone.
- ***Email:*** Email attachments can be large and consume lots of memory. Copy attachments to your computer (see "Copy Files Between Your Phone and Your Computer" on page 92), or delete large files from your phone (see "Delete a Message" on page 251). (You may also want to empty the deleted items folder.)
- ***Web:*** Delete stored web browsing information by clearing your history, cookies, and cache (see "Customize Web Browser Settings" on page 286).
- ***Third-party applications:*** You can delete infrequently used applications (see "Delete an Application" on page 66).

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Glossary

airplane mode: A mode in which all the wireless services on your phone are turned off. Wireless services include the phone used for making and receiving calls, the Wi-Fi feature, and Bluetooth® wireless technology. See “Turn Wireless Services Off (Airplane Mode)” on page 22.

application menu: A menu that contains application commands such as cut, copy, and paste (where available); preferences; and application help. To open the application menu, tap the application name in the upper-left corner of the screen. See also “connection menu” on page 336.

application search: The feature that lets you search for entries within an application by typing a search term when the list view is displayed—for example, a contact name or phone number, the subject text of an email message, or a few words from a memo. See also “universal search” on page 339.

application update: An update from the developer of an application you bought through the App Catalog on your phone. When an application update is available, a notification appears on your phone. You can also check for application updates manually. Additional fees may apply. See “Update the Software on Your Phone” on page 82.

back: The gesture you use to move up one level from a detailed view to a more general view of the application you’re working in. For example, when you finish reading an email message, make the back gesture to close the message and return to your list of messages. Or when you finish writing a memo, make the back gesture to close and save the memo and return to the display of all your memos. See “Go Up One Level in an App (Back Gesture)” on page 59.

Downloaded from www.Manualslib.com manuals search engine

Making the back gesture is also the way you save your work in many apps. If you don't see a ***Done*** button, make the back gesture to save your work.

card: A minimized view of an open application. You can easily move among and reorder cards in ***Card view***. Tap a card to restore the full-screen view of the application and continue working in it. See also “Card view” on page 336.

Card view: The view on your phone that displays applications as minimized cards, allowing you to easily move among and reorder them. Don't confuse ***Card view*** with the Launcher, which along with Quick Launch, shows you all the apps you have on your phone, not just the open ones. To display ***Card view***, press ***Center*** from any open application window, or flick up from the gesture area to the screen. Card view displays your wallpaper.

Center: The button in the center of the gesture area. Press ***Center*** to display ***Card view*** or to close the ***Launcher***.

connection menu: A menu that lets you turn on or off connection features including the Wi-Fi feature, Bluetooth® wireless technology, and all wireless services (airplane mode). To open the connection menu, tap the upper-right corner of the screen. See also “application menu” on page 335.

dashboard: A list of all your notifications. When one or more notification icons appears at the bottom of the screen, tap the icons to open the dashboard. Tap a dashboard item to act on it. See also “notification” on page 337.

Data Transfer Assistant: A tool that allows you to do a one-time, one-way export of information such as contacts and calendar events from a desktop organizer to your phone. See “Transferring Data” on page 95.

drag: A slow movement of the finger up or down on the touchscreen.

flick: A very fast skimming of the finger horizontally or vertically on the touchscreen.

gesture area: The strip beneath the touchscreen that you use to perform the back gesture, among others. Some gestures you begin in the gesture area and complete on the touchscreen, for example, the slow drag that displays ***Quick Launch*** when you have an application filling the screen.

Downloaded from www.Manualslib.com manuals search engine

Launcher: A group of screens displaying all your applications. To open the ***Launcher***, tap in ***Quick Launch***, or flick up twice from the gesture area to the screen. If you are in ***Card view***, flick up once from the gesture area to the screen to open the ***Launcher***. In the ***Launcher***, swipe up, down, left, and right to see all your apps. Tap an app icon to open it.

linked contact: A contact containing information from more than one source. For example, if you have you have a work contact in Exchange and a personal contact for the same person in Google, the Contacts application automatically recognizes the connection and links the two contacts so that you can see all the information in one place—but the information is kept separate in the different accounts where it originated. You can also manually link and unlink contacts.

merged view: A feature on your phone that displays data from several sources in a single view, but keeps the sources of your data separate.

Let's say you use Google calendar for your personal events and your company's Outlook calendar for business events. Your phone's Calendar application displays events from both calendars in a single view, called ***All***.

Likewise, if you set up multiple email accounts, the Email application displays the messages from all your account inboxes in a single view, called ***All inboxes***. And in Messaging, all your messages with a person show up in a single conversation view, whether they are text, multimedia, or instant messages. See also "linked contact" on page 337.

notification: A message that appears at the bottom of the screen alerting you of an incoming or missed call; voicemail, email, or text messages; an upcoming event; and more. In most cases, you can tap a notification to act on it. See also "dashboard" on page 336.

online account: An account that you have with an online service such as Google or Microsoft Exchange ActiveSync. You can synchronize contacts, calendar events, and email between your phone and many of your online accounts.

Option key: The key you use to enter characters that appear above the letters on the keyboard keys. Press once to enter a single character. Press twice to lock the alternate character feature, so you can enter a series of characters. Also, press and hold ***Option*** and then drag your finger onscreen to move the cursor in text.

Downloaded from www.Manualslib.com manuals search engine

Palm profile: A Palm profile gives you access to services like automatic updates, backup of your data, and more. You create a Palm profile by entering a working email address during initial setup of your phone. See “Set Up Your Phone” on page 18. Your Palm profile also identifies the location on the Web where the data you store in your Palm profile accounts is backed up. (You cannot see or change this data on the Web, however.) See also “Palm profile account” on page 338.

Palm profile account: This account is automatically created for you when you create a Palm profile and it's ready to use as soon as the phone is set up. You can use this account to assign contacts and calendar events you create on your phone when you do not want to assign them to an online account. Palm profile items are included in the daily backup of information to your Palm profile but do not synchronize with any of your online accounts.

pinch: A gesture used to go in for a magnified view (zoom in) or move out to see a larger area (zoom out). To zoom in, you pinch out: Place the thumb and index fingertips close together on the touchscreen, then slowly spread them apart. To zoom out, you pinch in: Place the thumb and index fingertips apart on the touchscreen, and slowly bring them together.

Quick Launch: A bar of up to five icons that give you quick access to applications. ***Quick Launch*** always appears at the bottom of ***Card view*** and the ***Launcher***. By default, ***Quick Launch*** displays icons for the following apps: Phone, Email, Contacts, and Calendar. The fifth icon is the ***Launcher***. Tap a ***Quick Launch*** icon to open the app.

You can also open ***Quick Launch*** from any maximized application window by dragging up from the gesture area to the screen. Move your finger to the app you want, and then lift your finger. The application opens.

smart folder: One of two folders—***All Inboxes*** and ***All Flagged***—that can be set to appear at the top of the ***Account List*** view in the ***Email*** application. See “Set Email Preferences” on page 253.

swipe: A light, fast horizontal movement with the finger from right to left or left to right on the touchscreen or the gesture area.

Sym Sym ***key:*** The key you use to enter symbols and accented characters. Press ***Sym*** to open the full table of symbols. Press ***Sym*** + a letter key to narrow the table to symbols associated with that letter—for example, press Sym + ***e*** to enter é.

Downloaded from www.Manualslib.com manuals search engine

Synergy™ feature: The feature from Palm that lets you take advantage of merged views and linked contacts on your phone. See “Your Palm® Pre™ Phone” on page 9.

system update: Updates provided by Palm to the Palm® webOS™ platform and core applications such as Contacts and Calendar. When a system update is available, a notification appears on your phone. You can also check for system updates manually. See “Update the Software on Your Phone” on page 82.

tap: A light quick touch on the touchscreen. Use the fleshy part of your fingertip to tap. Don't tap with a fingernail, and don't use a pen or pencil—the screen does not respond to touches like that. Also, don't bear down. Make the tap firmly, but lightly.

universal search: The feature that lets you make calls, search for applications and contacts on your phone, and search the Web simply by typing the number or search term in either ***Card view*** or the ***Launcher***. See “Search to Find Info and Make Calls” on page 76.

webOS™ platform: The operating system of your Palm® Pre™ phone. Key features of the webOS platform include gestures, cards, merged views, and linked contacts.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Section 5

Your Safety and Specifications

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Section 5A

Regulatory and Safety Information

In This Section

- FCC Statements (page 344)
- Antenna Care/Unauthorized Modifications (page 345)
- Industry Canada (page 345)
- Radio Frequency (RF) Safety Exposure (page 346)
- Protecting Your Battery (page 349)
- Power Specifications (page 351)
- Recycling and Disposal (page 352)
- User Safety (page 353)
- Product Handling & Safety (page 357)
- Driving Safety (page 358)
- ESD Safety (page 362)

Downloaded from www.Manualslib.com manuals search engine

FCC Statements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This phone meets the FCC Radiofrequency Emission Guidelines and is certified with the FCC as:

FCC ID: O8F-CASC.

The FCC ID on your Palm phone is located on a label inside the battery compartment. The battery must be removed as shown below to view the label.

Downloaded from www.Manualslib.com manuals search engine

Caution	Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Antenna Care/Unauthorized Modifications

Use only the supplied integral antenna. Unauthorized antenna modifications or attachments could damage the unit and may violate FCC regulations.

Industry Canada

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The term “IC” before the equipment certification number only signifies that the Industry Canada technical specifications were met.

IC: 3905A-CASC

This Class B digital apparatus complies with Canadian ICES-003.

L ' utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l' utilisateur du dispositif doit étre prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Cet appareil numérique de la classe [*] est conforme à la norme NMB-003 du Canada.

Downloaded from www.Manualslib.com manuals search engine

Radio Frequency (RF) Safety Exposure

General statement on Radio Frequency (RF) energy: Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Specific Absorption Rate (SAR): Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

In order to certify this unit for sale to the public, this unit has been tested for RF exposure compliance at a qualified test laboratory and found to comply with the regulations regarding exposure to RF Energy under the recommendations of the International Commission on Non-Ionizing Radiation Protection (ICNIRP). The tests are preformed in positions and locations as required by the FCC and IC for each model.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated below. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

The SAR limit for mobile devices set by FCC/IC is 1.6 W/kg averaged over 1 gram of tissue for the body or head (4.0 W/kg averaged over 10 grams of tissue for the extremities - hands, wrists, ankles, and feet).

The highest reported SAR values of the Palm® Pre™ phone are:

Maximum 1g SAR values (W/kg) FCC	
Head	0.919
Body	0.936

Downloaded from www.Manualslib.com manuals search engine

In order to comply with FCC and IC RF exposure safety guidelines, users MUST use one of the following types of body-worn accessories:

1. Palm® brand body-worn accessory that has been tested for (specific absorption rate) SAR compliance and is intended for use with this product.
2. An accessory that contains NO metal (snaps, clips, etc.) and provides AT LEAST 1.5 cm (0.6 in.) of separation between the user's body and the unit.

Do NOT use the device in a manner such that it is in direct contact with the body (i.e., on the lap or in a breast pocket). Such use will likely exceed the FCC RF safety exposure limits. See *www.fcc.gov/oet/rfsafety* for more information on RF exposure safety.

To view the most recent SAR values of the Palm® Pre™ phone, visit *www.palm.com/sarevdo-pre*.

Body-worn operation: Important safety information regarding radio frequency (RF) radiation exposure: To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 1.5 cm (0.6 in.) separation from the body. Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

Limiting exposure to radio frequency (RF) fields: For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page *http://www.who.int/mediacentre/factsheets/fs193/en/index.html* WHO Fact sheet 193: June 2000.

Downloaded from www.Manualslib.com manuals search engine

Hearing Aid Compatibility (HAC)

Using Your Phone With a Hearing Device

Your device has been tested for hearing aid compatibility. Your Palm® Pre™ phone has an M4 rating. For additional HAC information, including the HAC rating of this product, please refer to palm.com/hacevdo-pre.

When some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing-device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that have been rated have a label on the box.

These ratings are not guarantees. Results will vary, depending on the level of immunity of your hearing device and the degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference with hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil (“T switch” or “Telephone Switch”) than unrated phones. T4 is the better/higher of the two ratings.

The more immune your hearing aid device is, the less likely you are to experience interference noise from your wireless phone. Hearing aid devices should have ratings similar to those of phones. Ask your hearing health care professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers the best use.
- Any combined rating equal to five is considered normal use.

Downloaded from www.Manualslib.com manuals search engine

- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for “best use”. This is synonymous for T ratings.

Palm further suggests that you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. If you experience interference or find the quality of service unsatisfactory after purchasing your device, promptly return it to the store within 30 days of purchase. With the Palm 30-day Risk-Free Guarantee, you may return the device within 30 days of purchase for a full refund, and you will only be responsible for charges based on your actual usage.

Getting the Best Hearing Device Experience With Your Device

To further minimize interference:

- Set the phone's screen and keyboard backlight settings to ensure the minimum time interval.
- Move the phone around to find the point with the least interference.

For more information, please go to the FCC’s Consumer Alert on accessibility of digital wireless phones at *http://www.fcc.gov/cgb/consumerfacts/hac_wireless.html*.

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

Recently there have been some public reports of wireless phone batteries overheating, catching fire, or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Use only manufacturer-approved batteries and accessories found at Carrier Stores or through your device's manufacturer. Buying the right batteries and accessories is the best way to ensure they are genuine and safe.

- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).

Downloaded from www.Manualslib.com manuals search engine

- Don’t use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don’t attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It’s best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don’t store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

  Less than one month: -4° F to 140° F (-20° C to 60° C)

  More than one month: -4° F to 113° F (-20° C to 45° C)

Battery Handling:

- Do not disassemble or open, crush, bend or deform, puncture, or shred the battery.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion, or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per the IEEE/CTIA-1725 standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per IEEE/CTIA-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage, or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.

Downloaded from www.Manualslib.com manuals search engine

- Do not handle a damaged or leaking Lithium-Ion (LI-ion) battery as you can be burned.
- Improper battery use may result in a fire, explosion, or other hazard.

Based on DOT rules, spare batteries must not be transported in checked luggage on commercial flights. Spare batteries can only be transported in carry-on luggage. For more information: *http://safetravel.dot.gov/whats_new_batteries.html*

Power Specifications

Use only Palm-approved power accessories such as AC-power adapters and batteries. Unauthorized and non-approved batteries will NOT operate with the Pre phone.

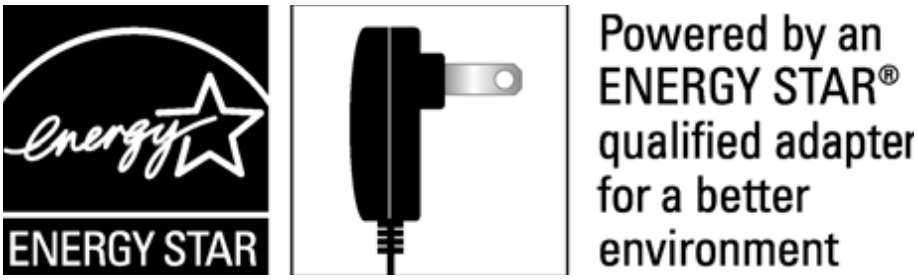

AC Power Adapter Source: Palm
Part Number: 157-10108-00 / 157-10114-00
Input Rating: 100–240 Vac, 50/60Hz, 0.2A
Output Rating: 5Vdc, 1000mA

AC Power Adapter Source: Palm
Part Number: 157-10124-00
Input Rating: 100–240 Vac, 50/60Hz, 0.2A
Output Rating: 5Vdc, 1000mA

AC Power Adapter Source: Palm
Part Number: 157-10130-00
Input Rating: 100–240 Vac, 50/60Hz, 0.2A
Output Rating: 5Vdc, 1000mA

Downloaded from www.Manualslib.com manuals search engine

Battery Source: Palm
Type: Rechargeable Li-ion Polymer
Model: 157-10119-00
Rating: 3.7Vdc, 1150mAh (minimum)

Recycling and Disposal

This symbol indicates that Palm products should be recycled and not be disposed of in unsorted municipal waste. Please return Palm products to the electrical and electronic equipment collection points in your municipality or county or to a facility that properly recycles electrical and electronic equipment. These collection points are available free of charge. For detailed information please contact your municipality or county. For information on Palm's environmental programs, visit *www.palm.com/environment*.

Hazardous substances that may be included in electronic products can potentially affect human health and the environment. Recycling benefits the environment by diverting waste from landfills and by recovering materials that may be recycled into other products. Responsible recycling ensures materials are properly collected and disposed.

Palm is committed to supporting the collection and recycling of its products. Palm is committed to participate in and support the European Union WEEE Directive (2002/96/EC) and the protection of the environment for future generations. For more information on the WEEE Directive implementation in the various EU member states please see *www.weee-forum.org*.

It is everyone's responsibility to ensure that electrical and electronic products are properly reused, recycled, or recovered.

As part of Palm's corporate commitment to be a good steward of the environment, we strive to use environmentally friendly materials, reduce waste, and collaborate with our channel partners to raise awareness and help keep Palm handheld devices, phones, and mobile companions out of landfills through evaluation and disposition for reuse and recycling. Visit *palm.com/recycle* for additional details and information about how you can help reduce electronic waste.

Downloaded from www.Manualslib.com manuals search engine

User Safety

Operational Warnings

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. Read this information before using your phone. For the safe and efficient operation of your phone, observe these guidelines:

Potentially explosive atmospheres: Turn off your phone when you are in any areas with a potentially explosive atmosphere, such as fueling areas (gas or petrol stations, below deck on boats), storage facilities for fuel or chemicals, blasting areas and areas near electrical blasting caps, and areas where there are chemicals or particles (such as metal powders, grains, and dust) in the air.

Interference to medical and personal electronic devices: Most but not all electronic equipment is shielded from RF signals and certain electronic equipment may not be shielded against the RF signals from your phone.

Pacemakers: The Health Industry Manufacturers Association recommends that a minimum separation of 15 centimeters (6 inches) be maintained between a phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by the recommendations of Wireless Technology Research.

Persons with pacemakers should:

- ALWAYS keep the phone more than six inches (15 centimeters) from their pacemaker when the phone is turned ON.
- Not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the phone OFF immediately if you have any reason to suspect that interference is taking place.

Other medical devices, hospitals: If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so.

Downloaded from www.Manualslib.com manuals search engine

Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Repetitive motion injuries: When using the keyboard or playing games on your phone, you may experience discomfort in your neck, shoulders, hands, arms, or other parts of the body. To avoid any injury, such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorder, make sure to take necessary breaks from use, take longer rests (such as several hours) if discomfort or tiring begins, and see a doctor if discomfort persists. To minimize the risk of Repetitive Motion Injuries, when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Make use of the special features in the handset which minimize the number of buttons which have to be pressed, such as message templates and predictive text.
- Take lots of breaks to stretch and relax.

Blackouts and seizures: Blinking lights, such as those experienced with television or playing video games may cause some people to experience blackout or seizure, even if never experienced before. In the event a phone user should experience any disorientation, loss of awareness, convulsion, eye or muscle twitching, or other involuntary movements, stop use immediately and consult a doctor. Individuals with personal or family history of such events should consult a doctor before using the device. To limit the possibility of such symptoms, wherever possible every hour take a minimum break of 15 minutes, use in a well lighted area, view the screen from the farthest distance, and avoid exposure to blinking lights if you are tired.

Operating machinery: Do not use your phone while operating machinery. Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Aircraft: While in aircraft, follow all instructions regarding the operation of your phone. Use of your phone while on board an aircraft must be done in accordance and in compliance with airline instructions and regulations.

Vehicles with air bags: Your phone should not be placed in a position that would affect the operation of air bag deployment or in a position that, should the air bag inflate, could propel the phone. Air bags will inflate with great force and care should be taken to protect yourself

Downloaded from www.Manualslib.com manuals search engine

and your phone within a vehicle that has air bags. Do not place a phone in the area over an air bag or in the air bag deployment area. Store the phone safely before driving the vehicle.

Hearing aids: People with hearing aids or cochlear implants may experience interfering noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Small children: Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone. Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

Keep the device away from the abdomens of pregnant women and adolescents, particularly when using the device hands-free.

To reduce exposure to radiation, use your device in good reception areas, as indicated by the bars on your phone, at least 3 to 4 bars.

Caution: Avoid potential hearing loss

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, ear buds, and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound, and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies. The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings, and the headphones. You should follow some common sense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.

Downloaded from www.Manualslib.com manuals search engine

- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech, or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.
- You can obtain additional information on this subject from the following sources:.

American Academy of Audiology
11730 Plaza America Drive, Suite 300
Reston, VA 20190
Voice: (800) 222-2336
Email: info@audiology.org
Internet: *www.audiology.org*

National Institute on Deafness and Other Communication Disorders
National Institutes of Health
31 Center Drive, MSC 2320
Bethesda, MD USA 20892-2320
Voice: (301) 496-7243
Email: nidcdinfo@nih.gov
Internet: *http://www.nidcd.nih.gov/health/hearing*

National Institute for Occupational Safety and Health
395 E Street, S.W., Suite 9200
Patriots Plaza Building
Washington, DC 20201

Downloaded from www.Manualslib.com manuals search engine

Voice: 1-800-CDC-INFO (1-800-232-4636)
Internet: http://www.cdc.gov/niosh/topics/noise

Product Handling & Safety

General statement on handling and use: You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture, or high humidity.
- Do not drop, throw, or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories; only authorized personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum 14° F and maximum 140° F (-10° C to 60° C).
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Battery: Your phone includes an internal lithium-ion or lithium-ion polymer battery. Please note that use of certain data applications can result in heavy battery use and may require frequent battery charging. Any disposal of the phone or battery must comply with laws and regulations pertaining to lithium-ion or lithium-ion polymer batteries.

Demagnetization: To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Downloaded from www.Manualslib.com manuals search engine

Normal use position: When making or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth or as you would a fixed line phone.

Emergency calls: This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Phone heating: Your phone may become warm during charging and during normal use.

Accessories: Use only approved accessories. Do not connect with incompatible products or accessories. Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

Connection to a car: Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and damaged products: Do not attempt to disassemble the phone or its accessory. Only qualified personnel must service or repair the phone or its accessory. If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Interference in cars and to other electronic devices: Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation. RF energy may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with the manufacturer or representative to determine if these systems are adequately shielded from external RF energy. Also check with the manufacturer of any equipment that has been added to the vehicle.

Driving Safety

Driving Safety Tips Overview

Always obey all laws and regulations on the use of the phone in your driving area.

Safety–Your most important call. The Wireless Industry reminds you to use your phone safely when driving.

Downloaded from www.Manualslib.com manuals search engine

1. Get to know your phone and its features, such as speed-dial and redial.
2. Use a hands-free device where it is allowed. (In some areas, you may not use your phone while driving even with a hands-free accessory.)
3. Position your phone within easy reach.
4. Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
5. Do not take notes, look up phone numbers, read/write e-mail, or surf the Internet while driving.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.
7. Do not engage in stressful or emotional conversations that may divert your attention from the road.
8. Dial your national emergency number to report serious emergencies. (This is a free call from your phone.)
9. Use your phone to help others in emergencies.
10. Call roadside assistance or a special non-emergency wireless number when necessary.

Driving Safety Tip Details

1. Get to know your phone and its features such as speed-dial and redial. (Carefully read your instruction manual and learn to take advantage of valuable features most phone models offer, including automatic redial and memory dial. Also, work to memorize the phone keyboard so you can use the speed-dial function without taking your attention off the road.)
2. Use a hands-free device. (A number of hands-free phone accessories are readily available today. Whether you choose an installed mounted device for your phone or a speakerphone accessory, take advantage of these devices. If driving while using a phone is permitted in your area, we recommend using a phone headset or a hands-free car kit (sold separately). However, be aware that use of a headset that covers both ears impairs your ability to hear other sounds. Use of such a headset while operating a motor vehicle or riding a bicycle may create a serious hazard to you and/or others, and may

Downloaded from www.Manualslib.com manuals search engine

be illegal. If you must use a stereo headset while driving, place a speaker in only one ear. Leave the other ear free to hear outside noises, and do so only if it is legal and you can do so safely.)

3. Make sure you place your phone within easy reach and where you can grab it without removing your eyes from the road. (If you get an incoming call at an inconvenient time, let your voicemail answer it for you.)
4. Suspend conversations during hazardous driving conditions or situations. (Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.)
5. Do not take notes, look up phone numbers, read/write email, or surf the Internet while driving. (If you are reading an address book or business card while driving a car, or writing a to-do list, then you are not watching where you are going. It's common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.)
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. (Try to plan your calls before you begin your trip, or attempt to schedule your calls with times you may be temporarily stopped or otherwise stationary. But if you need to dial while driving, follow this simple tip: dial only a few numbers, check the road and your mirrors, then continue.)
7. Do not engage in stressful or emotional conversations that may be distracting. (Stressful or emotional conversations and driving do not mix—they are distracting and even dangerous when you are behind the wheel. Make people you are talking with aware you are driving and if necessary, suspend phone conversations which have the potential to divert your attention from the road.)
8. Use your phone to call for help. (Your phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations-with your phone at your side, help is only three numbers away. Dial your national emergency number in the case of fire, traffic accident, road hazard, or medical emergencies. Remember, your national emergency number is a free call on your phone.)

Downloaded from www.Manualslib.com manuals search engine

9. Use your phone to help others in emergencies. (If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call your national emergency number, as you would want others to do for you.)
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. (Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call to your national emergency number. But you can still use your phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.)

General Operation

Prolonged views of screen: If you are driving, do not access any function requiring a prolonged view of the screen. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Volume setting: Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Let your judgment prevail: The Device Software is only an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. The Device Software is not a substitute for your personal judgment.

Hands-Free Capability

All CTIA Certified portable products provide the consumer with a toll-free number for the purchase of a compatible hands-free device, call 1-800-881-7256.

Downloaded from www.Manualslib.com manuals search engine

ESD Safety

Electrostatic discharge (ESD) can cause damage to electronic devices if discharged into the device, so you should take steps to avoid such an occurrence.

Description of ESD

Static electricity is an electrical charge caused by the buildup of excess electrons on the surface of a material. To most people, static electricity and ESD are nothing more than annoyances. For example, after walking over a carpet while scuffing your feet, building up electrons on your body, you may get a shock—the discharge event—when you touch a metal doorknob. This little shock discharges the built-up static electricity.

ESD-susceptible Equipment

Even a small amount of ESD can harm circuitry, so when working with electronic devices, take measures to help protect your electronic devices, including your Palm phone, from ESD harm. While Palm has built protections against ESD into its products, ESD unfortunately exists and, unless neutralized, could build up to levels that could harm your equipment. Any electronic device that contains an external entry point for plugging in anything from cables to docking stations is susceptible to entry of ESD. Devices that you carry with you, such as your phone, build up ESD in a unique way because the static electricity that may have built up on your body is automatically passed to the device. Then, when the device is connected to another device such as a docking station, a discharge event can occur.

Precautions Against ESD

Make sure to discharge any built-up static electricity from yourself and your electronic devices before touching an electronic device or connecting one device to another. The recommendation from Palm is that you take this precaution before connecting your phone to your computer, placing the phone in a docking station, or connecting it to any other device. You can do this in many ways, including the following:

- Ground yourself when you're holding your mobile device by simultaneously touching a metal surface that is at earth ground.

Downloaded from www.Manualslib.com manuals search engine

For example, if your computer has a metal case and is plugged into a standard three-prong grounded outlet, touching the case should discharge the ESD on your body.

- Increase the relative humidity of your environment.
- Install ESD-specific prevention items, such as grounding mats.

Conditions That Enhance ESD Occurrences

Conditions that can contribute to the buildup of static electricity in the environment include the following:

- Low relative humidity.
- Material type. (The type of material gathering the charge. For example, synthetics are more prone to static buildup than natural fibers like cotton.).
- The rapidity with which you touch, connect, or disconnect electronic devices.

While you should always take appropriate precautions to discharge static electricity, if you are in an environment where you notice ESD events, you may want to take extra precautions to protect your electronic equipment against ESD.

Owner's Record

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Product: Palm® Pre™

Model:

Serial No.:

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Specifications

In This Section

- Specifications (page 366)

Downloaded from www.Manualslib.com manuals search engine

Specifications

Radio	• CDMA2000 digital dual band • EvDO Rev A and 1xRTT
Phone features	• Speakerphone • Hands-free headset jack (3.5 mm stereo) • Microphone mute option • TTY-compatible • Ringer switch
Processor technologies	• Dual-band MSM6801A processor • TI® OMAP 3430 processor
Battery	• Rechargeable lithium-ion • 1150mA/hr in power capacity • Removable
Operating system	• Palm® webOS™ platform
Camera	• 3 megapixel • LED flash with extended depth of field • Auto-exposure • Auto-white balance • Geotagging
Size	• 3.9 in. x 2.3 in. x 0.67 in. (100.5mm x 59.5mm x 16.95mm)
Weight	• 4.76 ounces (135 grams)
Connectivity	• Wi-Fi 802.11 b/g with WPA, WPA2, WEP, 802.1x authentication • Bluetooth® wireless technology 2.1 + EDR with A2DP (stereo Bluetooth) support

Downloaded from www.Manualslib.com manuals search engine

Display	• 3.1-inch touchscreen • 24-bit color • Resolution: 320 x 480 HVGA • User-adjustable brightness
Keyboard	• Slide-out physical QWERTY keyboard
Sensors	• Ambient light • Accelerometer • Proximity
Memory	• 8GB (~7GB user available) • USB mass storage support
Connector	• microUSB connector with USB 2.0 Hi-Speed

Downloaded from www.Manualslib.com manuals search engine

Included Palm webOS applications (at time of purchase)	• App Catalog • Calculator • Calendar • Camera • Clock • Contacts • Doc View (DOC, XLS, PPT) • PDF View • Email • Memos • Messaging (integrated SMS, MMS, and IM) • Music • Phone • Photos • Tasks • Videos • Web
Included third-party applications (at time of purchase)	• Amazon MP3 • Google Maps • NASCAR Sprint Cup Mobile℠ • NFL Mobile Live • Sprint Navigation • Sprint TV® • YouTube
Operating temperature range	• 32°F to 113°F (0°C to 45°C) • 5% to 90% RH

Downloaded from www.Manualslib.com manuals search engine

Index

Numerics

1xRTT data networks 321
411 phone numbers 12

A

AC charger 32
accented characters 68
Accept Cookies option 287
accounts
  See also email accounts
  See also individual account types 317
  activating phone and 18
  creating passwords for 26
  dialing directory assistance and 12
  enabling data services and 230, 231
  getting help with 11
  getting user names for 230
  managing 12
  Palm profile 102, 210
  playing music and 147, 328, 329
  removing online 317
  setting up 18
  synchronizing online 316
  updating network settings for 128
  uploading pictures 136
Acrobat Reader files. See PDF files
activation 18, 230
active calls. See phone calls
ActiveSync accounts. See Exchange ActiveSync accounts
Add An Account option
  Calendar 174, 183
  Contacts 156, 171
  Email 238
  IM 259
Add Bookmark option 282
Add device option 124, 292
Add Picture command 260
Add to Launcher 280
add web page to Launcher 280
Address Book on Mac 99
address books 154
addresses. See contacts; email addresses
airplane mode 22, 335
  Turn on Airplane Mode option 22
alarm sounds 182
alarms 80, 177, 182
  See also Clock application
Album Art view 146
album headers 135
albums. See photo albums; video albums
alerts. See alarms; notifications
All Calendars view 175
all-day events 178
  See also calendars; events
Amazon MP3 service 147–152, 328, 329
animations 9

Downloaded from www.Manualslib.com manuals search engine

animations in Help 11
answering phone 110–111, 115
antenna 345
AOL accounts 238
App Catalog 83, 86
  app details screen 87
app details screen 87
application icons 56, 58
application menu 74, 335
applications
  See also third-party applications
  adding to phone 86
  buying 89
  closing 49, 63
  deleting 66, 333
  dialing from 106
  downloading 88
  Help 11
  included with phone 368
  losing 330
  making phone calls and 114
  managing 90
  maximizing 44
  opening 56–59
  Palm OS 86
  playing music and 145, 146
  running 9
  searching in 80, 335
  troubleshooting 216, 310, 311, 318
  updating 82–85, 90, 335
appointments. See events
attachments
  adding to messages 245, 255
  freeing internal memory and 333
  opening 248, 262
  sending files as 200, 207
  sending pictures as 135
audio quality 315
authentication 240, 274, 320
Auto Locate option 276
auto-correct feature 71
Automatic IP settings options 275
auto-shut off interval 221, 314

B

back cover 306–309
back cover release 38
back gesture 222, 335
  See also gestures
Background data collection option 276
Backup application 210
  See also Palm profile
battery 366
  caring for 349
  charger for 32
  charging 39, 41, 301
  maximizing life of 41
  purchasing 41
  replacing 301
  troubleshooting 301–309
battery icon 40
billing account
  setting up 91
  updating information 91
blank screens 310
Block Popups option 286

Downloaded from www.Manualslib.com manuals search engine

Bluetooth devices
adding 124, 292
connecting to 291, 293
deleting 294
disconnecting from 294
discovering 293
making phone calls and 123
passkeys for 292
renaming 295
troubleshooting 314, 315
turning on and off 291
Bluetooth technology 123, 291
See also wireless services
bookmarks 208, 282–284
Brightness slider 221
browser. See Web browser
Buddies view 258
built-in applications 368
buying applications 86

C

cable service providers 320
cache (web pages) 287
Calculator application 195
Calendar application 172–184
calendars
See also events
accessing online 182
adding alarms 177, 182
adding events 172, 175–176, 178
getting started with 174
removing events 180
saving 176
setting preferences for 182–184
specifying default 183
synchronizing 173, 174, 317
synchronizing online 172
troubleshooting 326–327
viewing specific dates on 179
viewing specific events on 179
call history. See call lists
call lists 112, 119
See also phone calls
caller ID blocking 120
caller IDs 134, 160
calling cards 13
camera 130–131, 328, 366
capitalization 68
Caps Lock 68
car kits 123, 124
Card view 9, 60, 63, 336
See also wallpaper
cards 54, 62, 336
Center button 35, 44, 336
Certificate Manager 219
Change Login Settings option 243
Change Wallpaper option 221
character searches 77, 107
charging dock 40
charging the battery 32, 39, 41, 301
chat rooms. See conversations
Clear Cache option 287
Clear Cookies option 287
Clear flag command 250
Clear History option 287
Clips (animations in Help) 11

Downloaded from www.Manualslib.com manuals search engine

Clock application 193–195
collect calls 13
color-coded calendar entries 173
color-coded memos 191
colors for email message text 245, 252
compatibility information 122, 301, 311, 316
conference calls 116–117
connection menu 336
connections
  accessing Internet and 269
  Bluetooth devices and 123, 291
  changing Wi-Fi settings 275
  corporate servers and 318
  online address books and 154
  Palm profile and 210
  roaming and 126, 128
  timing out 319
  transferring files and 133, 140, 147
  troubleshooting 313, 324
  TTY/TDD devices and 127
  updating network settings for 128
contact lists 170, 249
contacts
  adding 154, 157–158
  default account 171
  deleting 168
  dialing by name 108
  displaying 119, 159, 162, 164
  editing 159, 162, 164
  getting driving directions for 289
  getting in touch with 166
  getting started with 156
  Launcher icons for 166
  linked 155
  linking and unlinking 164, 165
  photos for 134, 160
  preferences 170–171
  ringtones for 226
  saving information for 120, 158, 249, 262, 263
  searching 125, 158
  selecting 111
  sending 167
  setting preferences for 170–172
  speed dials for 162
  synchronizing 154, 156, 317
  troubleshooting 326–327
  uploading to car kits 124
Contacts application 154–172
conversations 256–258, 263
  See also instant messages
Conversations view 258
cookies 287
copying
  contacts and calendar from computer 98
  contacts from old phone 97
  files from computer 93
  text 72
corporate accounts 239–240, 318
coupling 313
coverage areas 23, 270, 312
cursor
  moving 52
  placing 51, 52
customer support 11
customizing

Downloaded from www.Manualslib.com manuals search engine

Calendar application 182–184
Contacts application 170–172
email accounts 242–243
Location Services 276
phone settings 124–128
roaming preferences 126
Web browser 286
Wi-Fi connections 275
cutting text 72

D

dashboard 336
data entry 67–72
data service icons 322, 324
data service providers 320
data services 27, 230–231
See also accounts
Data Transfer Assistant 99, 154, 173, 336
dates 186, 215
See also calendars
Day view 179
default account
Calendar 183
Contacts 171
Email 254
Default Event Duration option 182
Default Event Reminder option 182
default settings 330
deleting
applications 66, 333
Bluetooth devices 294
bookmarks 284
browsing history 287
calendar events 180
certificates 220
contacts 168
conversations 263
cookies 287
email 243, 251
email accounts 243
information 217
list items 55
memos 192
messages 263
music 147
numbers on dial pad 106
online accounts 317
photo albums 134
pictures 137
stored web page content 287
tasks 189
videos 140
desktop organizers 300
device. See Palm Pre phone
Device Info application 216–218
device names 216
Devices list 291
diagnostic information 218
dial pad 106
dialing 106–110, 162, 285
dialing prefixes 126
dialing shortcuts 125
dialing tones 125
Digital Rights Management (DRM) 92
directory assistance 12
display. See touchscreen

Downloaded from www.Manualslib.com manuals search engine

displaying
album headers 135
App Catalog 83
calendar events 179
certificates 220
contacts 119, 154, 159, 162, 164
email folders 252
file properties 200
images 325
Launcher 58
maps 167
meeting participants 181
multimedia messages 262
notifications 224
phone calls 112, 119
pictures 131
Quick Launch 57
tasks 187
text messages 262
videos 138, 140
web pages 280
Doc View 198–203
Document Editing 203
documentation 10, 11
documents. See Word files
downloading
See also App Catalog
email 243, 246, 321
music 152
pictures 131
drafts 246
drag and drop 54
drag gesture 48, 336
driving directions 288
driving safety tips 122, 358
DRM-free music files 92
DTMF tones 125
due dates (tasks) 186, 189

E

earpiece 313
EarthLink accounts 238
echoes 313
editing
contacts 159, 162, 164
email accounts 243
files 203
IM accounts 266
memos 191
Palm profile 210
selecting text 51–53
tasks 188
text 72
web page bookmarks 284
email
See also email addresses; Email application
adding pictures to 135
attaching files to 200, 207, 245
creating 244–245
deleting 243, 251
dialing from 109
folders 252, 253
forwarding 250
links in 142
managing 250

Downloaded from www.Manualslib.com manuals search engine

merging from multiple accounts 236
opening attachments 248
receiving 236, 243, 246
replying to 249
retrieving over wireless connections 272
roaming and 126
saving as drafts 246
searching 246
sending 236, 245, 255
setting alerts for 242
setting download options for 321
setting preferences for 253
signatures 242, 251
synchronizing 236, 243, 246, 317
troubleshooting 319–321
viewing message headers 250
email accounts
accessing 236
changing 243
creating multiple 238
deleting 243
reordering 254
setting preferences for 242–243
setting up 237–241
specifying as default 254
troubleshooting 318, 319–321
email addresses
changing 215
entering 242, 244
saving 249
Email application 236–255
authentication 240
Move to folder command 250
email service providers 238, 320
erasing data from phone 217
ESMTP authentication 320
EvDO data networks 321
Event Notes option 178
Event Reminder option 182
events
adding alarms to 177, 182
adding to calendar 172, 175–176
creating untimed 178
deleting 180
displaying 179
entering location for 176
responding to reminders for 181
saving 176
scheduling repeating 176
synchronizing 173, 174
Excel files 198, 201–203
Exchange ActiveSync accounts
setting up 239–240
synchronization with phone 100
Synergy feature and 9
troubleshooting 318
Exchange servers
searching over 109
synchronizing with 318, 319
troubleshooting 319
extensions (phone calls) 125

F

Facebook accounts
Contacts application and 156
Photos application and 136

Downloaded from www.Manualslib.com manuals search engine

synchronization with phone 101
factory-installed applications 368
favorites
email folders 253
web bookmarks 282
features 11
feedback 313
file types
opening files and 198
playing music and 143
viewing pictures and 131
watching videos and 138
files
See also specific type
changing contents 203
changing display size 199, 205
copying to phone 93, 138, 198, 204
creating 203
finding text in 199, 206
freeing memory and 333
losing 330
opening 198, 204
saving 200, 207
searching for 198, 204
sending 200, 207, 245
storing 329
viewing properties 200
filtering tasks 188
Find command 199, 206
finding information. See searching
flick gesture 49, 336
folders
copying files to 329
receiving email and 252, 253
Forget Network option 274
formatting for email message text 245, 252
forward gesture 47
frozen phone 217, 310, 331
full erase 217, 330

G

Geotag Photos option 276
gesture area 44, 336
gestures 9, 44–55
advanced 222
back gesture changes 222
throwing 49
troubleshooting 311
Get email option 243
Global Address Lists 154
Google accounts
creating account on website 97, 98, 102
setting up account on phone 154, 172, 236
synchronization with phone 100
Synergy feature and 9
Google Maps 287
Google Weather 173
GPS applications 277

H

hands-free devices
setting up 123
troubleshooting 314, 315–316
hard resets. See full erase
hardware 32
headset button 123

Downloaded from www.Manualslib.com manuals search engine

headsets 32, 122–124, 315
help 332
See also troubleshooting
Help application 11
history lists 258, 287

I

iCal on Mac 99
icons
charging battery and 40
minimizing web pages as 281, 282
monitoring data services and 322, 324
monitoring phone status and 120
moving in Launcher 66
opening applications and 56, 58
receiving notifications and 312
signal-strength 313
viewing Google maps and 288
IM. See instant messages
images 325
See also pictures
IMAP email accounts 320
importing information 317
inbox (email) 236, 254, 321
information
accessing 9, 317
backing up 210
deleting 217
entering 67–72, 280
importing 317
linked contacts 164
losing 330
protecting 26, 210
restoring 330
retrieving 10
saving 158
transferring 300
installing
third-party applications 86, 331
updates 18, 82–85
instant messages
changing account information 266
changing online status 265
creating 265, 266
receiving notifications for 267
sending 257, 265
setting up accounts 263
setting up accounts for 259
signing into accounts 264
signing out of accounts 265
Interactive Tests 218
interference 314, 315
internal memory. See memory
international format settings 221
international language settings 220
Internet. See websites
Internet service providers 240–241, 320
IP addresses 275
ISPs. See Internet service providers
iTune files 329
iTunes 92

J

JavaScript option 287
Join network option 273

Downloaded from www.Manualslib.com manuals search engine

K
keyboard 33, 35, 107

L
labels 158
language 220, 221
Launcher
  adding web pages to 280
  contacts added to 166
  defined 337
  displaying 58
  gesture 58
  moving icons 66
  opening applications with 57
  pages 37, 58
layered calendars 173
lighted dial pad 106
linked contacts 155, 337
linking to
  contacts 164
  videos 142
  web pages 280, 285, 333
List Order option 170
lists
  deleting items in 55
  filtering items in 188
local event information 12
location information 176, 275, 290
  See also maps
Location Services 275–276
lock icon 278
long-distance phone calls 12
losing device 210
lowercase letters 68

M
Mac computers
  copying files 133, 140, 147
  transferring info from desktop software 99
Mac computers and devices
  transferring files and 329
maps 167, 287, 290, 325
Mark all completed command 189
Mark all incomplete command 189
Mark as read/unread command 250
maximizing applications 44
media files 329, 333
media sync 92
meeting invitations. See meeting requests
meeting requests 181, 255
memory 333, 367
Memos application 190–192
menus 74–76, 335, 336
merged views 236, 252, 337
message headers 250
messages. See email; multimedia messages; text messages; voicemail
Messaging application 255–267
microphone 313
misspelled words 71
Mobile Broadband services 326
Month view 179
Move to folder command 250
movie listings 12
moving
  Launcher icons 66

Downloaded from www.Manualslib.com manuals search engine

MP3 music service 147–152, 328, 329
multimedia messages
adding pictures to 135
addressing 259
creating 258–260
deleting 263
dialing from 109, 263
displaying 262
opening attachments 262
receiving notifications for 267
roaming and 126
saving contact information 262, 263
sending 115, 257, 259, 260
troubleshooting 322
multitasking 9, 56
music
answering phone and 111
deleting 147
downloading 152
listening to 123, 143
playback controls 145
previewing 151
purchasing 150
searching for 146, 148
See also Amazon MP3
songs as ringtones 226, 329
transferring from iTunes 92
transferring to iTunes 93
troubleshooting 328, 329
viewing information about 149, 150
Music application 143–147

N

names
See also user names
changing Bluetooth device 295
changing device 216
dialing by 108
sending or receiving messages and 242
NASCAR Sprint Cup Mobile 232–233
network settings 128
Network time option 216
Network time zone option 216
networks 270, 272, 273, 274
New card command 279
NFL Mobile Live 233
notes 178, 186
notifications 37, 80
defined 337
displaying 224
installing updates and 18
receiving messages and 242, 267
receiving voicemail and 128
responding to 312
selecting contacts from 111
silencing sounds for 111
troubleshooting 322
Now Playing list 146
numbers 106, 195

O

Office Outlook. See Outlook
online accounts 236, 316, 337
See also accounts; email accounts
online address books 154

Downloaded from www.Manualslib.com manuals search engine

online calendars 172, 174, 182
online support 11
open Wi-Fi networks 270, 272
opening
  App Catalog 83
  applications 56–59
  attachments 248, 262
  files 198, 204
  Launcher 58
  maps 167
  Quick Launch 57
  Web pages 325
  web pages 277, 278, 284
operating system 339
operator assistance (phone) 13
Option key 35, 337
orange key. See Option key 68
organizer features 153
outage information 320
Outlook 99, 237, 317
overdue tasks 187

P

pairing 291, 291–293
Palm Desktop software 99, 317
Palm Desktop software on Mac 100
Palm Music Assistant 93
Palm online support 11
Palm Pre phone 9
  See also phone
Palm profile 10, 19, 210, 338
  restoring data after full or partial erase 330
Palm profile account 102, 338
partial erase 217, 330
partnerships. See pairing
passkeys 292
passwords
  accessing accounts and 26
  changing 27, 215
  entering 68
  opening PDF files and 204
  sending instant messages and 266
  subaccount passwords 26
  unlocking screen and 224
  Wi-Fi 270
pasting text 72
PDF files
  navigating through 205
  opening 204
  saving 207
PDF View 204–208
Personal Identification Numbers. See PINs
personal information 26, 330
phone
  See also phone calls
  accessing data services and 27
  accessing safety information for 11
  activating 18, 230
  adjusting volume 25
  answering 110–111, 115
  caring for 357
  conference calls 116
  connecting to TTY/TDD devices and 127
  data services and 322, 324
  dialing 106–110, 162, 285
  disposing of 352

Downloaded from www.Manualslib.com manuals search engine

finding compatible devices for 316
getting started with 33
hanging up 114
Help 11
installing third-party applications and 331
making emergency calls and 109
managing accounts 12
monitoring status of 120
number for 118
preferences for 124
redialing 109
replying to conversations and 257
restarting 216, 310, 314
safety information 122
setting preferences for 124–128
setting up 18
silencing ringer for 111
system information about 216
transferring information to 300
troubleshooting 218, 312–314
Turn on Airplane Mode option 22
volume 113
phone calls
adding a second 115
creating ringtones for 226
creating shortcuts for 125
driving and 122, 358
ending 114
getting directory assistance for 12
getting information about 112, 119
getting operator assistance with 13
getting started with 24
making 106–110, 112, 285
placing on hold 113, 115
receiving 110–111
replying to 111
running applications during 114
saving contact information for 120
searching and 10
searching for contacts and 125
sending and receiving messages during 259, 263
sending to voicemail 111
swapping between two 116
switching to hands-free devices 124
transferring to voicemail 25
phone headsets 122–124, 315
phone icons 120
Phone Reset Options settings 217
photo albums 132, 134
photos. See pictures
Photos application 131–137
pictures
adding to albums 132
creating caller IDs with 134, 160
deleting 137
displaying 131
downloading 131
sending 135, 259, 260, 323
specifying as wallpaper 135, 221
taking 130–131, 328
uploading 136–137
pinch in gesture 338
pinch out gesture 338
PINs 223
play lists 146

Downloaded from www.Manualslib.com manuals search engine

Play sound option 242
playing
  music 145
  videos 139, 142
  voicemail messages 112
Playlist view 146
podcasts 92
POP email accounts 320
power accessories 351
power button 20, 38
PowerPoint files 198
power-saving feature 314
Pre phone. See Palm Pre phone; phone
preferences. See customizing
preferred roaming list 128
Premium Services 27
priority settings
  email 245
  tasks 186
product updates. See updates
profile 10, 210, 338
protecting information 26, 210
Purge completed command 190

Q

Quick Launch
  changing applications in 64, 65
  defined 338
  displaying 57
  gesture 48
  opening applications from 56
Quick Tests 218

R

radio 232, 366
recharging the battery 41
recurring events. See repeating events
redialing phone numbers 109
redirectors (web pages) 325
Regional Settings application 220–221
reminder preferences 182
reminders 177, 181
  See also alarms
Remove Contacts Account option 172
Remove Email Account option 243
renaming device 216
reordering
  Launcher icons 66
repeating events 176
Reply-to address option 243
resets 217, 330
restarting phone 217, 310
restaurant information 12
ringer 111
ringer switch 38, 225
ringtones 226
roaming 126, 128

S

safety information 343
satellite photos 288
saving
  calendar events 176
  contacts 158
  email addresses 249
  files 200, 207

Downloaded from www.Manualslib.com manuals search engine

information 158
phone numbers 120
pictures 135
web page bookmarks 284
schedules. See calendars
screen
adjusting brightness 221
caring for 35
troubleshooting 306, 310
turning on and off 20
turning on or off 221
unlocking 223
waking up 24
Screen & Lock application 221–224
scroll gesture 36, 50
searching 10, 191
secure networks 273
Secure Unlock option 223
secure websites 278, 325
secure Wi-Fi networks 270
security 274
See also Certificate Manager
erasing data from phone 217
locking the screen 221, 223
Palm profile 215
sending
conversation messages 257
document files 200
email 236, 245, 255
instant messages 265
multimedia messages 115, 259, 260
PDF files 207
pictures 135, 259, 260, 323
text messages 259, 260
videos 323
service plans 12
See also accounts; data services
Set a ringtone option 162
Set due date for all command 189
Set flag command 250
Set speed dial command 163
settings 330
share option 255
Shift 68
shopping information 12
Show Contact Matches option 125
Show email option 243
Show notification option 242
signal 312, 314
signal-strength icon 23, 313
Signature option 242, 251
Simple PIN option 223
smart folder 338
Smart Folders list 254
SMTP servers 320
soft resets. See partial erase
software 317
software updates 82
songs. See music
sorting
contacts 170
data in spreadsheets 202
sounds. See specific type
Sounds & Ringtones application 224–226
speakerphone 313
specifications 366

Downloaded from www.Manualslib.com manuals search engine

speed dialing 108, 162
spelling errors 71
spreadsheets. See Excel files
Sprint Customer Service 11
Sprint Mobile Broadband services 326
Sprint Navigation 288–290
Sprint Operator Services 13
Sprint Premium Services 27
Sprint service plans 12
  See also accounts; data services
Sprint TV 231–232
static 314, 315
stereo headsets 122, 123
storage space 333
streaming
  music 143
  videos 140
subaccount passwords 26
swipe gesture 46, 338
Sym key 36, 338
symbols 68
Sync deleted emails option 243
Sync Now option 171
synchronization
  defined 316
  desktop software, Google, and phone 101
  desktop software, Wi-Fi, and phone 104
  email 236, 243, 246
  Facebook information 101
  online calendars 172, 174
  online contacts 154, 156
  retrieving information and 10, 317
  setting up online accounts for 316
  troubleshooting 318–319
Synergy feature 9, 96, 339
  Calendar 172
  Contacts 154
  Email 236
  Messaging 256
system information 216
system updates 82, 339
  See also updating phone

T

tap gesture 45, 310, 339
task lists
  assigning tasks to 186
  creating 184
  deleting 190
  filtering 188
  reordering items in 188
tasks
  changing priority 188
  completing 186, 189
  creating 185–186
  deleting 189
  displaying 187
  editing 188
  setting due dates for 189
Tasks application 184–190
technical support 11
temperature range for using phone 368
text 199, 206
  copying, cutting 72
  formatting for email messages and signatures 245, 252

Downloaded from www.Manualslib.com manuals search engine

pasting 72
selecting 51–53
text messages
addressing 259
creating 258–260
deleting 263
displaying 262
links in 142
making phone calls and 109, 114, 263
receiving notifications for 267
roaming and 126
saving contact information 262, 263
sending 257, 259, 260
troubleshooting 322
text telephones. See TTY/TDD devices
third-party applications
adding to phone 86
freeing internal memory and 333
losing 330
synchronizing using 318
troubleshooting 331–332
third-party phone calls 13
throwing 49
thumbnail images 131
time 215
time zones 216
Tips (Help application) 11
touchscreen 44
touchscreen. See screen
Touchstone charging dock 40
traffic information 288, 290
transferring data
Exchange to phone 100
Facebook to phone 100
Google to phone 100
old phone to new 97
planning for 96
troubleshooting 218, 299
trusted partnerships. See pairing
TTY/TDD devices 127
Turn on Airplane Mode option 22
turning Bluetooth on and off 291
turning everything on and off 24
turning screen on and off 20
turning Wi-Fi on and off 272
turning wireless services on and off 20, 22, 23
TV. See Sprint TV

U

unauthorized users 26
universal search 339
See also searching
unlinking contact information 165
unlocking the screen 223
untimed events 178
See also calendars; events
updates 18, 128
updating phone 82–85
uploading pictures 136–137
uppercase letters 68
URLs 277, 281, 282
USB cable 32
USB Drive mode 93
Use GPS option 277
user names 26, 230, 266
user profile 10, 210, 338

Downloaded from www.Manualslib.com manuals search engine

user safety information 353

V

vCards
  receiving 168
video playback controls 142
videos
  answering phone and 111
  deleting 140
  iTunes 92
  linking to 142
  playback controls 139
  searching for 141, 142
  sending 323
  watching 137, 140
Videos application 137–140
views 9
  See also cards
Vista computers
  copying files 133, 140, 147
  Outlook 2007 99
  transferring info from desktop software 99
voicemail
  listening to 112
  sending calls to 111
  setting preferences for 128
  setting up 25, 112
Voicemail Count Reset option 128
volume
  adjusting for phone calls 25, 113
  ringtone 226
  system sounds 224
  troubleshooting 313
VPN server connections 240

W

waking up screen 20
waking up the screen 24
wallpaper 135, 221
  See also Card view
weak signals 312, 314
web addresses 277, 281, 282
Web browser 277–287
Web pages
  accessing information on 10
  opening 325
web pages
  bookmarking 282–284
  clearing browsing history for 287
  clearing cache for 287
  dialing from 109
  displaying images on 325
  entering information on 280, 325
  linking to 280, 285, 333
  navigating through 279
  opening 277, 278, 284
  refreshing 279
  returning to recently viewed 284
  setting display options for 280
  troubleshooting access to 325
web-based email 236, 240–241
webOS operating system 339
websites
  accessing customer support 11
  accessing secure 278, 325
  activating phone 18

Downloaded from www.Manualslib.com manuals search engine

blocking popups from 286
browsing 126, 272
checking availability of data services for 324
connecting to 270, 277–279
disabling JavaScript for 287
freeing internal memory and 333
opening a second browser 279
playing music from 143
playing videos from 140
searching for 278
troubleshooting connections to 324
uploading pictures to 136–137
Week view 179
What's in the box? 32
Wide View 199
Wi-Fi
See also wireless services
connecting to 270, 272–274
connection preferences 275
disconnecting from 274
keeping network on list 274
network types 270
removing network from list 274
synchronizing desktop software and phone 104
turning on and off 271
Windows XP computers
copying files 133, 140, 147
transferring info from desktop software 99
wired headsets 122
wireless networks 270
wireless services
restarted phone and 314
turning on and off 20, 22, 23
WLANs. See wireless networks
Word files 198, 201
worksheets. See Excel files

Y

Yahoo! accounts 238
YouTube application 138, 140–142

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine